

Service Opening On Flare Corner

1. Remove the front Safety Screen/Glass with easy release from your Flare.
2. Remove all media from the Fireplace bed (If the fireplace has Fire-Glass media, please use a vacuum to remove the fire glass prior to removing the fire bed).
3. Remove inside fire bed by releasing the Philips screws.



Service opening on Flare Corner

4. **Valve access panel** can be removed by releasing the Philips screws.



This access, shown below, will allow working on the valve or fans without any hinderance.



Service Opening on Flare Front & Flare See Through

1. Remove the Safety screen or Double Glass using the Flare Manual, which contains information on our frameless easy release glass removal process.
2. Use a Phillips screw driver or a cordless drill to remove the fire bed. (If the fireplace has Fireglass media, please use a vacuum to clean out the fire box prior to removing the fire bed).
3. *****On a Flare Front & Flare See Through only remove the burner using 4 Philips screws**



Service opening on Flare Front And Flare See Through

4. While pushing down, slide the service plate outside of the fireplace (Direction may change with location of plate)

The access, shown below, will allow working on the valve or fans without hinderance

