



FREE FLOW PARTS LIST

The following is a list of the most common replacement parts, their descriptions, and ordering SKU(s) for the free flow heat management system.

FREE FLOW MOUNTS & LOUVERS



Free Flow- Heat Release

Model Size	Part Name	Description	SKU
Flare 30	LUV-100	100 SQ" Open Air Flow	LUV100
Flare 45	LUV-100	100 SQ" Open Air Flow	LUV100
Flare 50	LUV-100	100 SQ" Open Air Flow	LUV100
Traditional 42	LUV-140	140 SQ" Open Air Flow	LUV140
Traditional 46	LUV-140	140 SQ" Open Air Flow	LUV140
Passage	LUV-140	140 SQ" Open Air Flow	LUV140
Flare 60	LUV-140	140 SQ" Open Air Flow	LUV140
Flare 70	LUV-140	140 SQ" Open Air Flow	LUV140
Flare 80	LUV-200	200 SQ" Open Air Flow	LUV200
Flare 100	LUV-200	200 SQ" Open Air Flow	LUV200

Free Flow- Air Intake – Double Glass Active or Passive Only

Model Size	Part Name	Description	SKU
Flare 30	LUV-50	50 SQ" Open Air Flow	LUV50
Flare 45	LUV-50	50 SQ" Open Air Flow	LUV50
Flare 50	LUV-50	50 SQ" Open Air Flow	LUV50
Traditional 42	LUV-70	70 SQ" Open Air Flow	LUV70
Traditional 46	LUV-70	70 SQ" Open Air Flow	LUV70
Passage	LUV-70	70 SQ" Open Air Flow	LUV70
Flare 60	LUV-70	70 SQ" Open Air Flow	LUV70
Flare 70	LUV-70	70 SQ" Open Air Flow	LUV70
Flare 80	LUV-100	100 SQ" Open Air Flow	LUV100
Flare 100	LUV-100	100 SQ" Open Air Flow	LUV100

*Click SKUS for ordering replacement parts.

* Kits include mount and louver.