

# FLARE

## FIREPLACES

---

### Flare Fireplaces FAQ | Double Glass or Power Vented Units and Aux-Mode

Every Flare Fireplace equipped with either Double Glass or a Power Vent will need to have the Aux-Mode turned ON so the control board can power and monitor those systems.

*See aux-mode specific information below:*

To turn Aux-Mode on press the “Power” button on your SIT ProFlame II Remote, then using the “Mode” button cycle to “Aux” Mode (image of a finger over a button) and using the “Up” or “Down” buttons cycle Aux-Mode to “ON”



#### **SYMPTOMS OF AUX MODE BEING OFF:**

If ever your fireplace turns on with the wall switch but will not ignite with the remote, verify your Aux-Mode is turned “ON”.