


ENABLING CPI MODE (SIT SYSTEM)

1. To begin, disconnect fireplace from power to ensure a safe operation.
2. Take CPI wires (typically blue/white) attached to the metal plate that houses the gas valve. Cut the rubber end from both wires and connect these 2 wires using a low voltage wire nut.

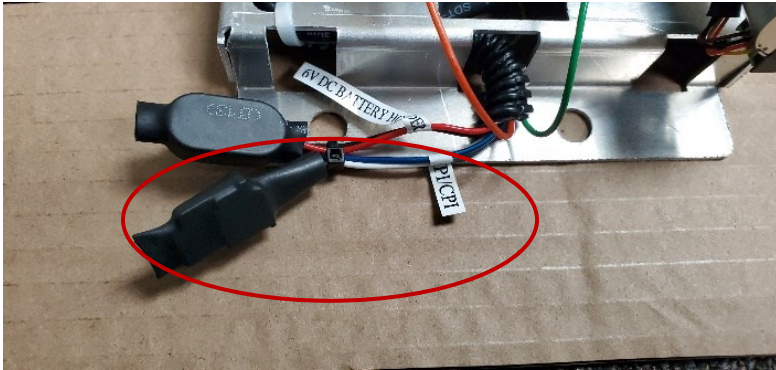

3. Reconnect power to the fireplace.
4. Ensure your remote is turned off. Once turned off, press the bottom button (circle) once, to access the IPI/CPI setting. Press the up arrow until the screen of your remote says CPI.



5. Turn on fireplace with the top power button to now engage your fireplace and have a continuous pilot.

For more help, or clarity on how to execute these instructions please contact support@flarefireplaces.com or call our support line 1 (866) 639-1590