


FLARE FIREPLACES

INSTALLING THE VENT FREE RAIN DOORS

Every Flare Outdoor Fireplace is shipped with rain door(s) to protect the fireplace when not in use. These door(s) must be removed before operation, and stored in a safe space so their condition is maintained when not in use. **Never operate the fireplace with the doors installed on any face.** [Click here](#) or scan the QR code below to watch rain door installation video

WARNING

NEVER ATTEMPT TO OPERATE THE APPLIANCE WITH RAIN DOORS INSTALLED ON ANY FACE.

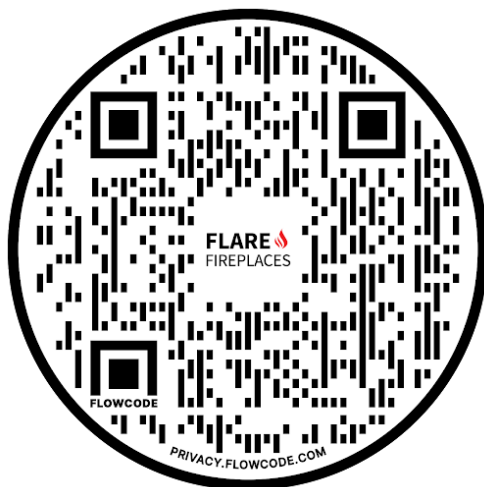

STEP 1 – LOCATING THE TOP BRACKETS

Built-in to every Flare Outdoor Fireplace are support brackets, on a hinge, used to secure the door in position across the top and sides of the fireplace. Locate these brackets in your fireplace by examining the images below, then gently pull them down to prepare for the installation of your rain door(s).



FLARE FIREPLACES

STEP 2 – INSERTING UPPER EDGE OF DOOR

Once the top brackets are lowered place the upper edge of your rain door against the bracket. Pushing in and up across the entire width of the door, lifting the door into the upper channel, gently pushing in, then finally resting the bottom of the door within the lower channel along the bottom frame of the fireplace.

