


# FLARE FIREPLACES

## Flare Fireplaces FAQ | SIT V5 Board Fuses

Every Flare Fireplaces V5 Double Glass Control Board comes equipped with an extra 1a and 12a fuse attached to the inside of the boards lid. These can be used in the event of a power related failure.

See fuse specific information below:

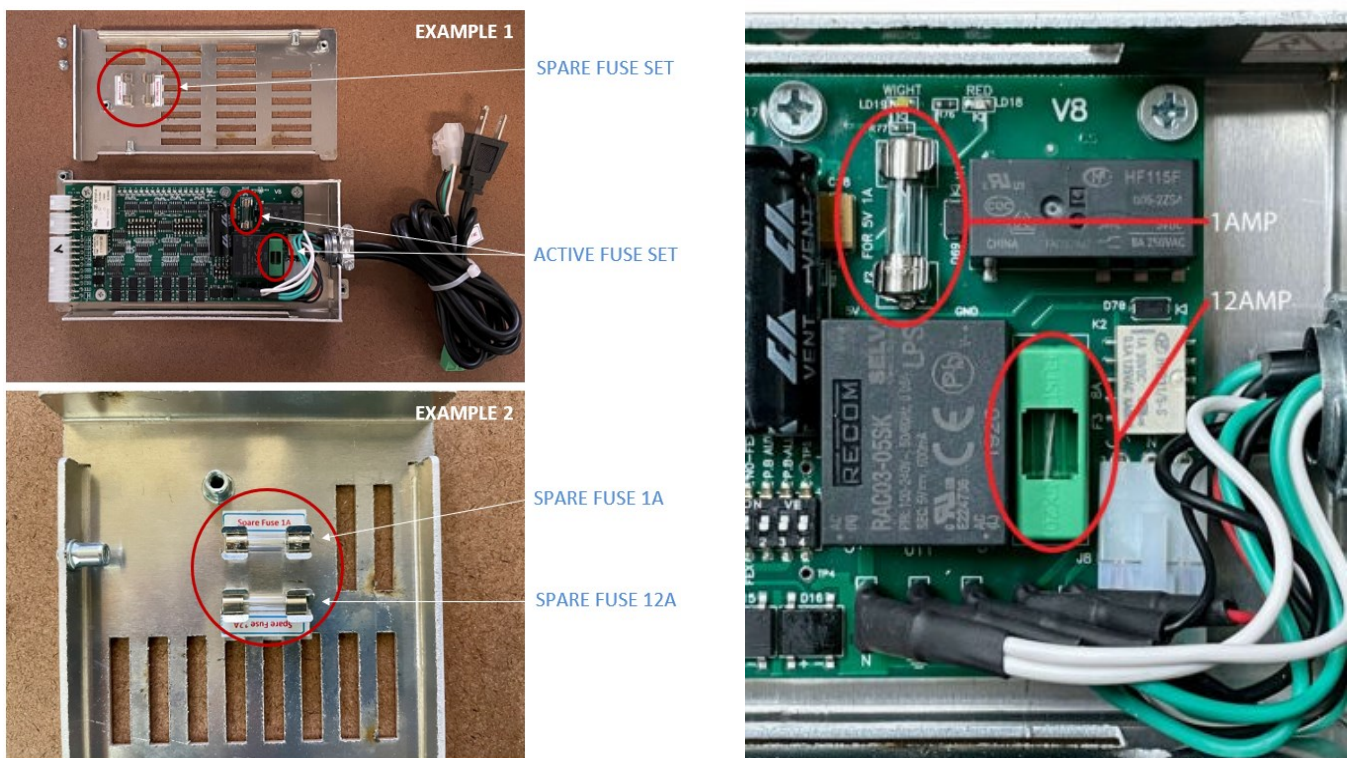

### SYMPTOMS FOR TROUBLESHOOTING

After pressing the power button on the handheld remote your ignition sequence does not begin and your V5 SIT Control Board does not show a RED, WHITE, BLUE, or FAN lights. This is shown as a failed ignition sequence where you Flare Fireplace will not spark, and any aux fans will not activate as normal.