

FLARE

FIREPLACES

Flare Fireplaces FAQ | Sync SIT ProFlame II Remote

Your remote will come paired with the fireplace receiver to allow for operation out of the box. In the event of a remote or receiver replacement, use the following procedure to pair the remote with the receiver:

1. Install 3 AAA type batteries in the remote battery bay located on the remote back.
2. Press the SW1 button on the module see the following figure, the module will beep 3 times to indicate that it is ready to synchronize with the remote.
3. Press the ON/OFF button in the remote, the module will beep 4 times to indicate that the remote and the module are synchronized to each other.

See Remote Sync specific information below:

