

FLARE

FIREPLACES

WARNING: If the information in these instructions is not followed exactly, a fire or explosion may result in causing property damage, personal injury, or loss of life.

Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

If you smell gas, please:

- Do not try to light any appliance
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

A qualified installer, service agency, or local gas supplier must perform installation and service.

DANGER



HOT GLASS WILL CAUSE BURNS.

DO NOT TOUCH GLASS UNTIL COOLED

NEVER ALLOW CHILDREN TO TOUCH GLASS



Flare requires installation be performed by an NFI certified installer, or an authorized Flare Dealer Tech who has been trained to professionally install the fireplace. Installations that do not follow this instruction will not be covered by warranty or service.

NOTICE

INSTALLER: Leave this manual with the appliance.

CONSUMER: Retain this manual for future reference.

The installation and service of this appliance must be performed by qualified NFI certified technician, or a certified and trained Flare Fireplaces dealer.

Massachusetts: The piping and final gas connection must be performed by a licensed plumber or gas fitter in the state of Massachusetts. Also, see local code for carbon monoxide requirements.

Flare Fireplaces SIT ProFlame II

[Flare Front Facing, See-Through, Left Corner, Right Corner, Double Corner, Room Definer, Passage]
Version 19.9

FLARE FIREPLACES

CONTENTS

SAFETY INFO AND WARNINGS.....	8
FLARE FIREPLACES – FRAMELESS IN EVERY WAY.....	10
CSA CERTIFICATION	10
MANUAL MODEL LIST AND INFORMATION.....	11
ACCEPTABLE VENT PIPE.....	12
ELECTRICAL AND POWER REQUIREMENTS.....	13
FIREPLACE OPERATION.....	14
REMOTE CONTROL – INSTRUCTIONS.....	14
TEMPERATURE INDICATION DISPLAY	15
TURNING THE SYSTEM ON.....	16
FLAME HEIGHT CONTROL	17
SMART THERMOSTAT MODE.....	18
MANUAL THERMOSTAT MODE.....	19
CONTINUOUS PILOT AND INTERMITTENT PILOT IGNITION (IPI AND CPI)	20
KEY LOCK – CHILD SAFETY MODE	21
LOW BATTERY DETECTION.....	22
PAIRING YOUR REMOTE TO THE SIT RECEIVER.....	23
IGNITION SEQUENCE	24
WALL SWITCH CONTROL	25
MEDIA PLACEMENT GUIDE AND CALCULATION GUIDE.....	26
REFLECTIVE BACK, DOUBLE GLASS, AND SAFETY SCREEN INSTALLATION	27
LOCATING GLASS PACK.....	27
REFLECTIVE BACK – INSTALLATION.....	28
REQUIRED COMPONENTS & TOOLS	28
STEP 1	29
STEP 2	30
STEP 3	31
STEP 4	32

FLARE

FIREPLACES

STEP 5	33
STEP 6	34
ADDITIONAL NOTES	35
INNER CERAMIC GLASS – INSTALLATION	36
OUTER TEMPERED GLASS – INSTALLATION	40
SAFETY SCREEN – INSTALLATION	42
INSTALLATION STEPS	43
ACCESSING COMPONENTS FOR SERVICE	44
COMPONENT WHIP OVERHANG	44
INSTALLING 10” x 10” ACCESS PANEL	45
DIMENSIONS	46
ACCESS PANEL FRAMING DIMENSIONS	47
Installing THE ACCESS PANEL	48
FINAL NOTES	49
OTHER ACCESS PANEL SUGGESTIONS	50
REMOVEABLE FINISHING MATERIAL	50
REMOVEABLE LINEAR TOE KICK	50
INSTALLATION PREPARATION	51
FIREPLACE UNPACKING	51
STEP 1	52
STEP 2	53
STEP 3	54
SETTING THE FIREPLACE IN POSITION	55
STEP 1	55
STEP 2	56
STEP 3	58
TELESCOPIC LEG SETUP	59
FRONT FACING AND SEE-THROUGH FIREPLACE LEG SETUP	60
LEFT, RIGHT, AND DOUBLE CORNER FIREPLACE LEG SETUP	61
UNPACKING CONTROL UNIT AND ACCESSORIES	62

FLARE

FIREPLACES

POSITIONING AND SECURING YOUR FIREPLACE	63
RGB LED LIGHTING.....	64
PAIRING YOUR RGB LED REMOTE.....	65
LED REMOTE CONFIGURATION	66
GEN 1 REMOTE PAIRING.....	66
GEN 1 REMOTE UNPAIRING.....	66
*GEN 2 REMOTE PAIRING.....	66
RGB LIGHT VERIFICATION – PRE-INSTALL	67
OPTIONAL BLOWER KIT – SCREEN UNITS ONLY.....	68
VENTING	69
VENT PIPE SIZE USED ON EACH FIREPLACE.....	70
DIRECT VENT PIPE CLEARANCES	70
HORIZONTAL VENT PIPE CLEARANCES	70
VERTICAL VENT CLEARANCES	70
DIRECT VENT PIPE CUT-OUT DIMENSIONS.....	71
SINGLE VERTICAL TERMINATION	72
MULTIPLE VERTICAL TERMINATIONS	73
HORIZONTAL TERMINATIONS.....	74
MULTIPLE HORIZONTAL TERMINATIONS.....	74
TERMINATION CLEARANCES.....	75
VENT RESTRICTOR SETTING	77
ADJUSTING AIR SHUTTER.....	78
VENTING INSTALLATION & PLANNING	79
FLARE 30R/30H/PASSAGE.....	80
FLARE 45R/45H/45EH	81
FLARE 50R/50H/50EH	82
FLARE 60R/60H/60EH	83
FLARE 70R/70H/70EH	84
FLARE 80R/80H/80EH	85
FLARE 100/100H/100EH	86

FLARE

FIREPLACES

POWER VENTING	87
ELECTRICAL CONNECTION TO THE POWER VENT SYSTEM	89
POWER VENT BOARD ELECTRICAL WIRING DRAWING	90
GAS REQUIREMENTS	91
SIT PROFLAME II GAS VALVE LAYOUT	92
USING A REDUCER TO DE-RATE YOUR FLARE FIREPLACE	93
ADDING THE FLARE FIREPLACES DE-RATING REDUCER	94
ORIFICE SIZE	95
LIQUID PROPANE USAGE IN A FLARE FIREPLACE	96
COMMONWEALTH OF MASSACHUSETTS	97
COMMON WEALTH OF MASSACHUSETTS	98
TELEVISION MOUNTING ABOVE THE FIREPLACE	99
TV INSTALL – FLAT EXAMPLE	100
TV INSTALL – RECESSED WITH FIREPLACE OVERHANG	101
45-DEGREE ELBOW ON TOP OF FIREPLACE TO MAINTAIN CLEARANCE TO RECESS	102
TV INSTALL – NO RECESS WITH MANTEL	104
FRAMING SPECIFICATIONS	105
METAL FRAMING	105
WOOD FRAMING	106
FIREPLACE CLEARANCES	107
NON-COMBUSTIBLE MATERIALS SPECIFICATIONS	116
CLEARANCE TO A SPRINKLER	117
HEAT MANGAMENT – HEAT RELEASES AND AIR INTAKES	118
HEAT RELEASES	119
HEAT RELEASE EXAMPLES	120
DROP WALL	120
SHADOW LINE	120
LINEAR SLOT OR LOUVERED GRATE	121
AIR INTAKE	122
DOUBLE GLASS REQUIRED AIR INTAKE EXAMPLES	123

FLARE

FIREPLACES

FLOATING HEARTH	123
TOE-KICK REVEAL	124
LEFT AND RIGHT-SIDE VENTS.....	125
LINEAR SLOT	126
FLARE FRONT, SEE THROUGH, AND CORNER FIREPLACE CLEARANCE	127
FLAT – SIDE AND ISOMETRIC VIEW & CLEARANCES	127
L SHAPE – SIDE AND ISOMETRIC VIEW	130
SIDE OVERHANG FOR LEFT, RIGHT, AND DOUBLE CORNER FIREPLACES.....	133
INDOOR/ OUTDOOR KIT	134
OUTDOOR KIT INSTALLATION CONSIDERATIONS	134
OUTDOOR KIT OVERHANG REQUIREMENTS.....	135
OUTDOOR KIT FRAMING AND FINISH.....	136
OUTDOOR KIT CLEARANCE TO NON-COMBUSTIBLE WALL	136
OUTDOOR KIT OPENING DIMENSIONS.....	137
WEATHER-PROOF YOUR OUTDOOR KIT CAVITY	138
FIREPLACE BURNER DIMENSIONS.....	138
HOME AUTOMATION	139
ELECTRIC AND CONTROL	140
ELECTRIC DIAGRAM - SCREEN.....	140
SIT PROFLAME II DIAGRAM – DOUBLE GLASS AND POWER VENT	141
DOUBLE GLASS BOARD & LED LIGHT GUIDE.....	142
ELECTRICAL DIAGRAM - POWER VENT SYSTEM.....	143
REPLACEMENT PARTS.....	144
MAINTENANCE	145
GLASS MAINTENANCE	146
PILOT MAINTENANCE	146
BURNER MAINTENANCE	147
VENT MAINTENANCE.....	147
DOUBLE GLASS FANS MAINTENANCE.....	148
MAINTENANCE LOG.....	149

FLARE FIREPLACES

WARRANTY POLICY.....	150
18 MONTH COMPREHENSIVE WARRANTY	150
LIMITED 5 YEAR COVERAGE	150
LIMITED 10 YEAR COVERAGE.....	151
CONDITIONS	151
EXCLUSIONS.....	152
WARRANTY VOID WHEN.....	152

FLARE FIREPLACES

SAFETY INFO AND WARNINGS

WARNING!

If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury, or loss of life. A qualified installer, service agency or the supplier must perform installation and services.

The direct vent system appliance must be installed as an OEM installation in manufactured homes (USA only), or an aftermarket permanently located, or a mobile home, where not prohibited by local codes, and must be installed in accordance with Manufacturer's instructions and the Manufactured Home Construction and Safety Standard, Title 24 CFR, Part 3280, in the United States, or the Standard for Installation in Mobile Homes, CAN/ CSA Z240 MH Series, in Canada.

This appliance is only for use with the type(s) of gas indicated on the rating plate. A conversion kit is supplied with the appliance.

This product is listed to the ANSI standards for ANSI A21.50b-2009 / CSA 2.22b-2009 Vented Gas Fireplaces CAN/ CGA 2.17-M91 Gas-Fired Appliance for use at high altitudes.

NEVER LEAVE CHILDREN OR ANY OTHER AT-RISK INDIVIDUAL ALONE WITH THE APPLIANCE.

WARNING!

Proposition 65 Warning: Fuels used in gas, wood burning or oil-fired appliances, and the products of combustion of such fuels, contain chemicals known to the State of California to cause cancer, birth defects and other reproductive harm. California Health & Safety Code Sec. 25249.6. In the State of Massachusetts, only a licensed plumber and gas fitter may install this product. See Note for the Commonwealth of Massachusetts.

Due to elevated temperatures, the appliance should be located out of traffic and away from furniture and draperies. Children and adults should be alerted to the hazards of high surface temperature and should stay away to avoid burns or clothing ignition.

Young children should be carefully supervised when they are in the same room as the appliance. Toddlers, young children, and others may be susceptible to accidental contact burns. A physical barrier is recommended if there are at-risk individuals in the house. To restrict access to a fireplace or stove, install an adjustable safety gate to keep toddlers, young children, and other at-risk individuals out of the room and away from hot surfaces.

FLARE

FIREPLACES

This appliance must be electrically wired and grounded in accordance with local codes, or in the absence of local codes, with National Electric Code ANSI/NFPA 70 – latest edition or the Canadian Electric Code CSA C22.1

A 110-120V AC Circuit for this product must be protected with ground-fault circuit-interrupter protection, in compliance with the applicable electrical codes, when it is installed in locations such as bathrooms or near sinks.

When an existing Category I heater is removed or replaced, the original venting system may no longer be sized to properly vent the attached appliances. Instructions shall also indicate effects of an improperly sized venting system (formation of condensate, leakage, spillage, etc.) and shall specify the following test procedure.



WARNING CARBON MONOXIDE POISONING WARNING

Failure to follow the steps below for each appliance connected to the venting system being placed into operation could result in carbon monoxide poisoning or death. The following steps shall be followed for each appliance connected to the venting system being placed into operation, while all other appliances connected to the venting system are not in operation:

1. Seal any unused openings in the venting system.
2. Inspect the venting system for proper size and horizontal pitch, as required in the National Fuel Gas Code, ANSI Z223.1/NFPA 54 or the Natural Gas and Propane Installation Code, CSA B149.1 and these instructions. Determine that there is no blockage or restriction, leakage, corrosion, and other deficiencies which could cause an unsafe condition.
3. As far as practical, close all building doors and windows, and all doors between the spaces in which the appliance(s) connected to the venting system are located and other spaces of the building.
4. Close all fireplace dampers.
5. Turn on clothes dryers and any appliance not connected to the venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they are operating at maximum speed. Do not operate a summer exhaust fan.
6. Follow the lighting instructions. Place the appliance being inspected into operation, and adjust the thermostat so appliance is operating continuously.
7. Test for spillage from draft hood equipped appliances at the draft hood relief opening after five minutes of main burner operation. Use the flame of a match or candle.
8. If improper venting is observed during any of these above tests, the venting system must be corrected in accordance with the National Fuel Gas Code, ANSI Z223.1/NFPA and/or Natural Gas and Propane Installation Code, CSA B149.1.
9. After it has been determined that each appliance connected to the venting system properly vents when evaluated as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas-fired burning appliance to their previous conditions of use.

FLARE FIREPLACES

FLARE FIREPLACES – FRAMELESS IN EVERY WAY

Flare Fireplaces are where innovation, quality and luxury come together to form innovative ideas. By combining superior raw materials, contemporary design, creative technology, and a frameless way of thinking, we have created a full line of direct-vent fireplaces that are luxurious, simple to operate, and efficient. Our modern gas fireplaces are distinguished by their clean linear design, superior built quality, and unique features.

CSA CERTIFICATION

All our fireplaces are evaluated and have been certified to meet stringent CSA guidelines, ensuring optimum quality, safety, and efficiency, as well as been certified and evaluated to work with Natural Gas or Liquid Propane.

Certification Information: [CSA File # 263124](#)

CSA/ANSI Z21.88-2019 • CSA 2.33-2019- Vented Gas Fireplace Heaters

CSA Classes: CLASS 2901 84 / CLASS 2901 04

All fireplaces are rated for commercial and residential use.



The CSA Mark

The Canadian Standards Association (CSA) is a nonprofit association serving business, industry, government and consumers in Canada and the global marketplace. Among many other activities, CSA develops standards that enhance public safety. A Nationally Recognized Testing Laboratory, CSA is familiar with U.S. requirements. **According to OSHA regulations, the CSA-US Mark qualifies as an alternative to the UL Mark.**

Here are some areas where CSA standards are applied:

- Canadian Electrical Code, Part III-Outside Wiring
- Electrical Engineering Standards
- Electromagnetic Compatibility

FLARE FIREPLACES

MANUAL MODEL LIST AND INFORMATION

All models share the same gas valve system, remote, gas connection, and glass type, simplifying installation and operation. All warnings and instructions apply to all models. Refer to the model's name for specific model, clearance, and installation information.

- Flare Front 25 - 100 ": 16" (R), 24" (H), 30" (EH)
- See-Through 30 - 100 ": 16" (R), 24" (H), 30" (EH)
- Left Corner 30 - 100 ": 16" (R), 24" (H), 30" (EH)
- Right Corner 30 - 100 ": 16" (R), 24" (H), 30" (EH)
- Double Corner 30 - 100 ": 16" (R), 24" (H), 30" (EH)
- Flare Room Definer 45 - 100": 16" (R), 24" (H), 30" (EH)

WARNING!

Do not operate this fireplace with the glass removed, open, cracked, or broken. Operating the appliance without the glass in place is unsafe and can result in improper combustion, improper venting, and exposure to carbon monoxide (CO). Carbon monoxide is a colorless, odorless gas that can cause serious injury or death. Always ensure the glass assembly is properly installed and secured before operating the fireplace. Do not remove or service the glass while the appliance is hot. Glass removal and replacement must be performed only in accordance with these instructions by a qualified service technician.

FLARE FIREPLACES

ACCEPTABLE VENT PIPE

Flare Fireplaces should only be connected to M&G DuraVent or ICC 4x6 or 5x8 venting system. Refer to the specific appliance model and size to determine vent size and chimney pathway requirements. For detailed chimney installation information please use the following manuals:

[DuraVent Pro Installation](#)

[DuraVent Direct Vent Pro Concentric Flex](#) – All other flex options must meet the UL1777 specification.

- DuraVent Direct Vent Pro Concentric Flex pipe is only approved for vertical implementation, and up and out applications with up to 2' of horizontal to the termination to prevent sagging. Mixing rigid and flex is also acceptable.

Ex: Flare Fireplaces sized 30-70" may go up 3' using the concentric DuraFlex, turn 900-degrees, then terminate horizontally. Please note Flare Fireplaces sized 80-100" require 6' minimum rise before their first elbow/bend.

[ICC Pro Installation](#)

This product is listed to ANSI standards for "Vented Gas Fireplace Heaters" and applicable sections of "Gas Burning Heating Appliances for Manufactured Homes and Recreational Vehicles", and "Gas Fired Appliances for Use at High Altitudes". Installation **MUST** comply with local, regional, state, and national codes and regulations. Consult insurance carrier, local building inspector, fire officials or authorities that have authority over restrictions, installation inspection and permits

This installation must conform to local codes. In the absence of local codes, you must comply with the National Fuel Gas Code, ANSI Z223.1 -latest edition in the USA and the CAN/CGA B149 Installation Codes in Canada.

Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. For assistance or additional information, consult a qualified service technician, service agency or your local fireplace dealer.



Flare Fireplaces requires installation be performed by an NFI certified installer, or certified Flare dealer. Installations that do not follow this instruction will not be covered or serviceable under warranty.

FLARE FIREPLACES

ELECTRICAL AND POWER REQUIREMENTS

Screen Unit: 110V, 15A Outlet (Dedicated circuit is optional but recommended) or directly wired. When using an outlet, make sure the outlet is accessible in the event of servicing.

** 110V, 15A additional power source needed if Optional RGB-LEDs are included in unit.

Double Glass: 110V, 15A Outlet (Dedicated circuit is optional but recommended) or directly wired. When using an outlet, make sure the outlet is accessible in the event of servicing.

** No additional power source needed for optional RGB-LEDs.

FLARE FIREPLACES

FIREPLACE OPERATION

Every indoor Flare Fireplace ship with a remote control and wall switch to operate the fireplace and its features. These two items do not work in parallel with one another, so if you turn the fireplace on with one it must also be turned off with that same option. *Home automation is also available by removing the included wall switch and replacing it with a low voltage close-contact relay which can be tied into a new or existing home automation system or smart device.


* Flare Fireplaces does not recommend the use of home automation with our fireplaces. Only operate the fireplace when you can be in the same room as the high-powered gas appliance.

OPERATION GUIDE



REMOTE CONTROL – INSTRUCTIONS



The SIT ProFlame II system ships with an easy-to-use four-button remote control. It requires three AAA batteries and has a 0-50°C ambient temperature rating with a 315MHz radio frequency.

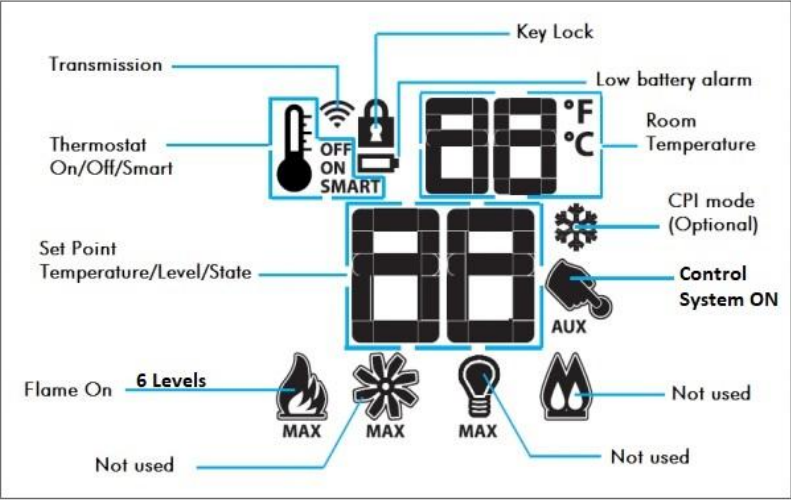

FLARE FIREPLACES

TEMPERATURE INDICATION DISPLAY

When the system is turned off the LCD screen will display the current room temperature in Fahrenheit (°F) or in Celsius (°C).

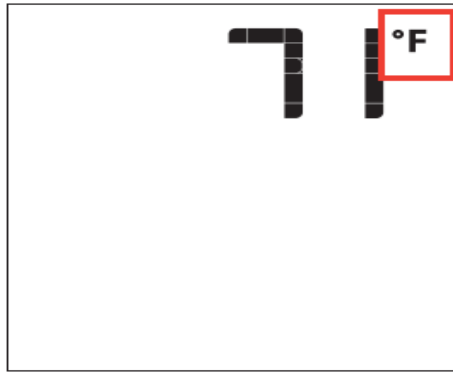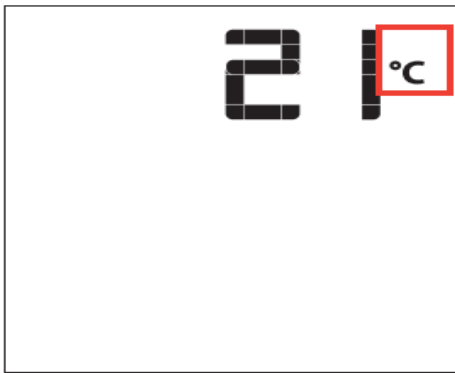


To change from in Fahrenheit (°F) to Celsius (°C.), or vice versa, press the **“Thermostat”** key and the **“Mode”** key at the same time.



FLARE FIREPLACES

TURNING THE SYSTEM ON

When in “On” mode the remote LCD will show the room temperature icon, and any other modes currently turned on by default.

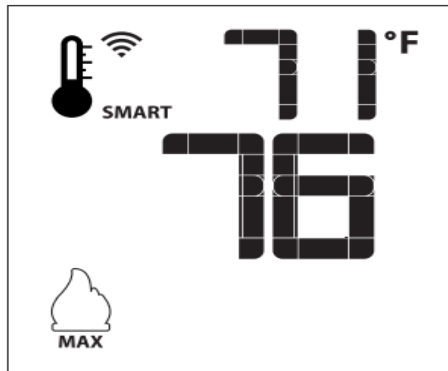


To turn “On” press the on/off remote button. The remote LCD will then show other icons. At that time, the module will activate the appliance and a single beep from the receiver will confirm command from the remote.



FLARE FIREPLACES

FLAME HEIGHT CONTROL

ProFlame II has 6 levels of modulation. When the system is on the flame level will be at the maximum level. Once adjusted the remote LCD will show a series of 6 steps going down or up, depending on adjustments being made.

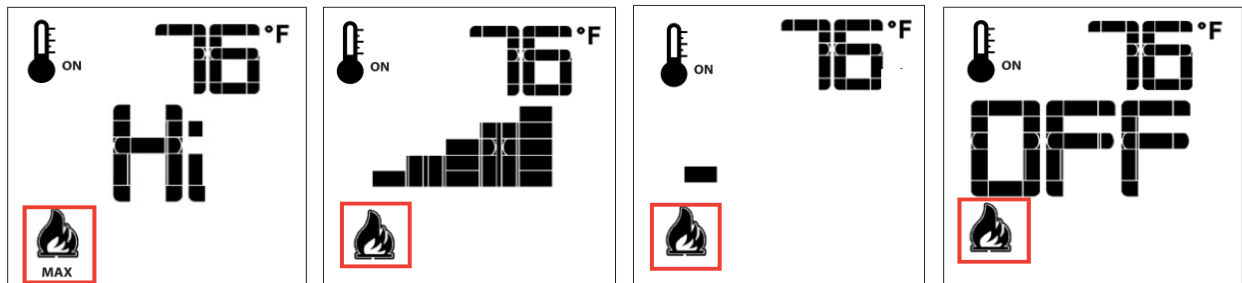


By pressing the “Down” key once it will reduce the flame height by one step. Continued pressing of the down arrow will result in the unit turning off. To return to normal fireplace operation use the “Up” key to increase the flame height to high. If the “Up” has been pressed while the system is ON, but the flame is OFF the flame will come ON in the high position.



FLARE FIREPLACES

SMART THERMOSTAT MODE

The smart thermostat mode will adjust the flame height depending on the set temperature that has been set by the user. When the room temperature gets close to the set temperature the smart thermostat function will modulate the flame down.

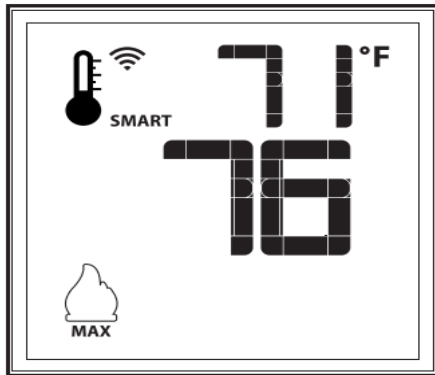


To activate the smart thermostat function, press the “**Thermostat**” key while the appliance is on until the word SMART appears beside the icon of the thermostat. To adjust the set temperature, press the “Up” or “Down” arrow keys until the desired temperature is displayed on the LCD.




FLARE FIREPLACES

MANUAL THERMOSTAT MODE

The Remote control can operate as a room thermostat. The thermostat can be set to a desired temperature to control the room temperature. The thermostat icon on the LCD screen will display the thermostat status is ON. The user can then set a suitable temperature for the space.

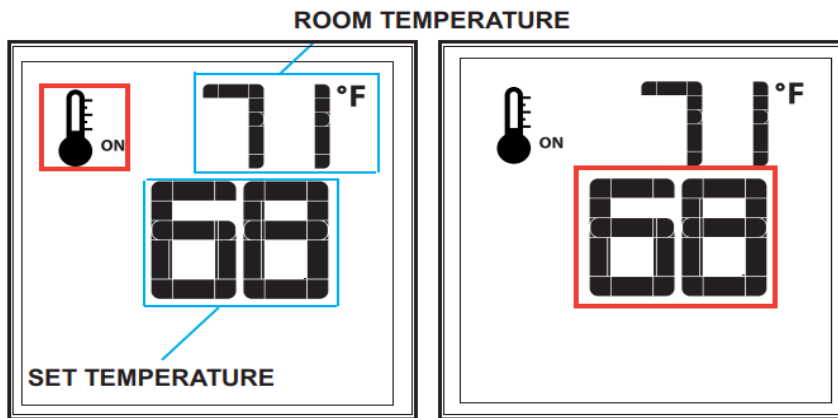


To activate this option, press the “**Thermostat**” key. To adjust the desired temperature, use the “**Up**” or “**Down**” until the desired temperature is displayed on the remote LCD screen.

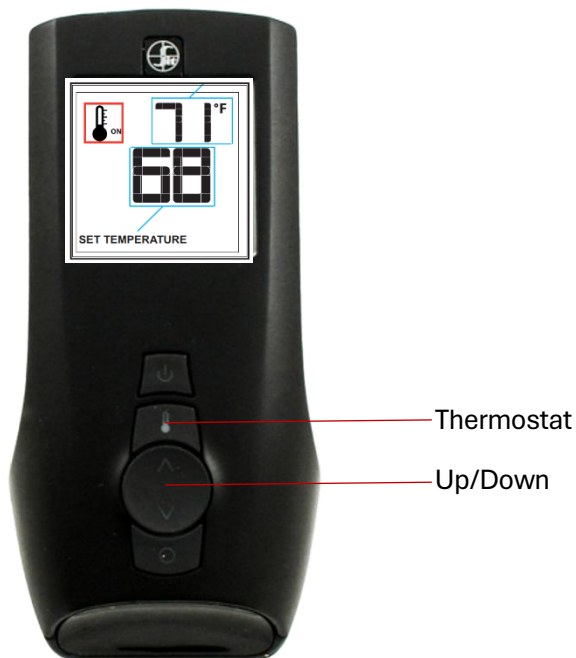

FLARE FIREPLACES

CONTINUOUS PILOT AND INTERMITTENT PILOT IGNITION (IPI AND CPI)

By default, the Flare Fireplace is set up for IPI operation, but this can be changed to CPI **on screen units only**.

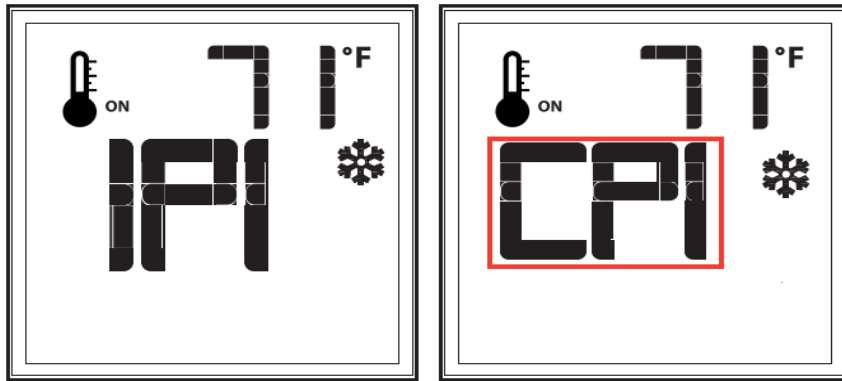

When the system is Off pressing the “**Mode**” key to index to CPI mode icon. Pressing the “**Up**” arrow will select the **CPI** mode *(but it is still not activated. See instructions at the link below)*




[For detailed instructions on how to change from IPI to CPI please click here.](#)

FLARE FIREPLACES

KEY LOCK – CHILD SAFETY MODE

To avoid unsupervised operation of the remote control this feature has been created. A lock icon will appear on the LCD screen.

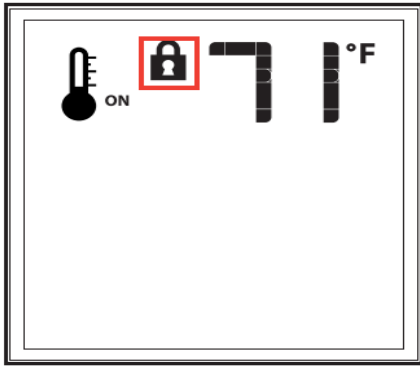


To activate this feature, press the **“Mode”** and **“Up”** at the same time. A lock icon will appear in the LCD screen. To deactivate this feature, press **“Mode”** and **“Up”** at the same time.



FLARE FIREPLACES

LOW BATTERY DETECTION

The lifespan of your remote's three AAA batteries varies based on remote and fireplace operation. When the remote battery is low an empty battery icon will appear on the LCD Screen

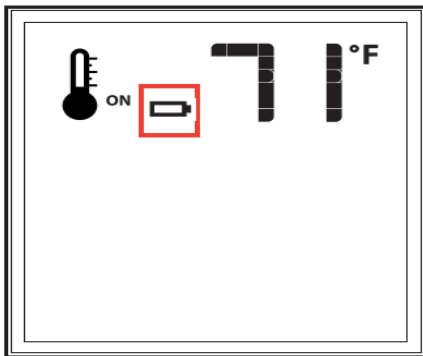

WARNING


Do not use a screwdriver or other metallic object to remove the batteries from the battery box! This could cause a short circuit to the system.

FLARE

FIREPLACES

PAIRING YOUR REMOTE TO THE SIT RECEIVER

Your remote will come paired with the fireplace receiver to allow for operation out of the box. In the event of a remote or receiver replacement, or power failure, use the following procedure to pair the remote with the receiver. First, install 3 AAA batteries in the remote battery bay located on the remote back. Next, press the SW1 button on the module, see the following figure, the module will beep 3 times to indicate that it is ready to synchronize with the remote. Finally, press the ON/OFF button in the remote, the module will beep 4 times to indicate that the remote and the module are synchronized to each other.

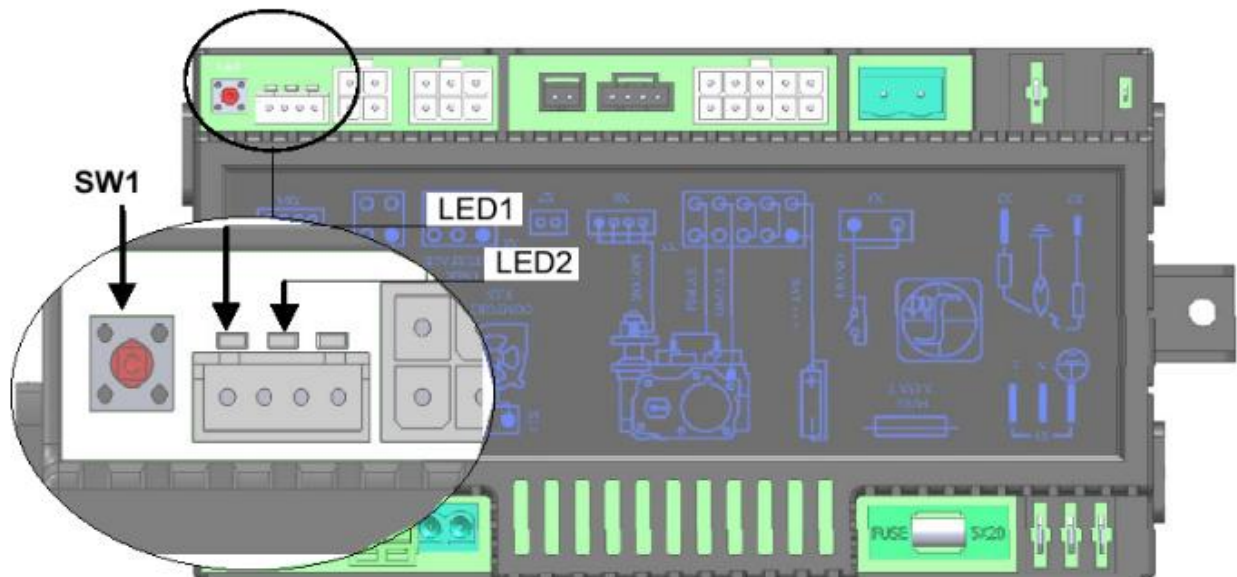

SW1 = Programing Button

FLARE FIREPLACES

IGNITION SEQUENCE

Starting from Off, press the remote power button. Four seconds after it is pushed the SIT module will send a spark to the pilot hood, and spark for 60 seconds. If there is no flame ignition during the first ignition sequence, the SIT module will stop sparking for approximately 35 seconds and then begin sparking again. The second attempt will spark 60 seconds. If there is no positive ignition after the second sequence the SIT module will go into a Lock Out and the LED Indicator Light will blink three times in intervals until the system is reset.

Reset Using the Transmitter ON/OFF power button: Turn the system off by pressing the remote power button. After approximately 2 seconds press it again

Low Battery Condition (<4V) Remote Control: Battery icon will appear on LCD remote control display. Replace batteries.

Low Battery Condition (<4V) Battery Backup: Red LED Indicator will blink (1) time in intervals. Low double-beep emitted from SIT control module when it receives an ON/OFF command from the remote control. Replace Batteries.

Pilot Flame Error Condition: Red LED Indicator will blink (2) times in intervals. Contact your dealer if this occurs.

System Lock Out Condition: Red LED Indicator will blink (3) times in intervals. Make sure the gas is turned on and sensor is not shorted. Follow **Reset Using the Transmitter ON/OFF power button** instructions above.

FLARE

FIREPLACES

WALL SWITCH CONTROL

The SIT ProFlame II system ships with an easy-to-use wall switch which operates the on/off functionality only. It can be used in the event the remote control isn't nearby or has no battery charge. The wall switch comes connected to the X8 port on the SIT receiver.

NOTICE

When used with double glass, power vented, and summer kit systems, the wall switch must be connected to operate the relay necessary to turn the secondary fan system on, verify power, and allow ignition. Also, the wall switch does not work together with the remote. If you turn on the unit with the wall switch, it must also be turned off using the wall switch to prevent syncing and ignition issues with your system.



FLARE FIREPLACES

MEDIA PLACEMENT GUIDE AND CALCULATION GUIDE

Every Flare fireplace can be set up with approved glass, stone, or wood media. Quantities are determined by the size of the fireplace and type of media chosen within that fireplace. Mixing of media types (i.e., glass and stones together) is acceptable if the quantities are adjusted to prevent overwhelming the burner and gas flow. To achieve a balance between the ideal appearance and operation the following guidelines have been set to create an optimum overall presentation. Stepping outside of these recommendations will lead to excess sooting, uneven gas flow, and degraded flame presentation.

MEDIA CALCULATION



MEDIA PLACEMENT



NOTICE FOR ALL MEDIA TYPES

- Maintain a 1" clearance on all sides of the pilot cover to prevent continuity issues with ignition.
- Do not install media in quantities that exceed the recommendations in the media calculation guide.
- Do not use media to block or cover burner ports.
- Keep all media within the fireplace burner tray.
- Do not place media between the inner glass and external safety barrier.
- Media cannot be smaller than ¼"
- Keep all media types in a single layer over the burner to prevent poor flame presentation, excess sooting, and overheating.

WARNING!

CHOKING HAZARD! Ensure that the fireplace area is clear of fire glass particles as these could be ingested by small children. Vacuum area after installation.

FLARE FIREPLACES

REFLECTIVE BACK, DOUBLE GLASS, AND SAFETY SCREEN INSTALLATION

The following outlines how to install your Reflective Back, Double Glass (Active and Passive), and Safety Screen, which can ship with a Flare fireplace. To see a step-by-step video on this installation, scan the QR codes below.

REFLECTIVE BACK INSTALL



DOUBLE GLASS ACTIVE



DOUBLE GLASS PASSIVE



DOUBLE GLASS ACTIVE
(PASSAGE)



LOCATING GLASS PACK

A Flare fireplace will come with its pre-packaged glass safely, inside the fireplace crate, attached to the interior frame using 4 screws. Removing these screws allows you to pull the glass packet away from the crate. Store this glass packet in a safe location until you are ready to install the glass panels.



FLARE

FIREPLACES

REFLECTIVE BACK – INSTALLATION


Every indoor flare fireplace can be ordered and equipped with a black neo-ceramic glass panel on its back and side(s). The following document outlines the components required and the process used to successfully install or retrofit the glass panels inside the fireplace.

Install requires 2 people.

REQUIRED COMPONENTS & TOOLS

The following components and tools are required to properly install the reflective back and side panel(s).


1. Fireplace
2. Reflective Back
3. Reflective Side(s)
4. Phillips-Head Screwdriver
5. Side and Back Clips with Hardware
6. Suction Cups

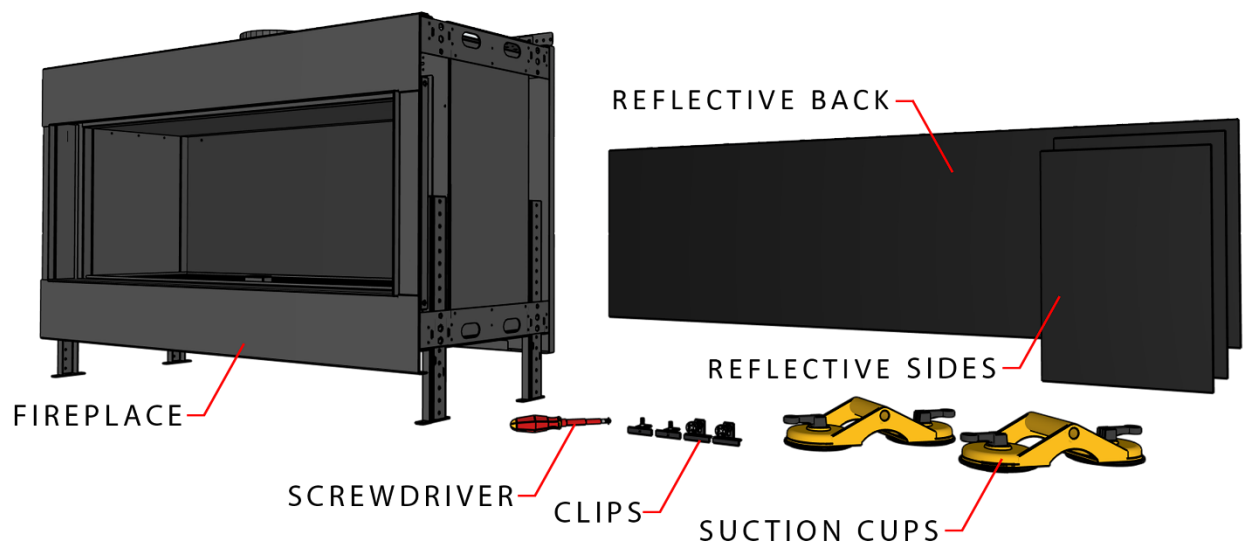

FLARE FIREPLACES


STEP 1

Using your Phillips-head screwdriver remove the back clips from the interior back-wall of the fireplace.

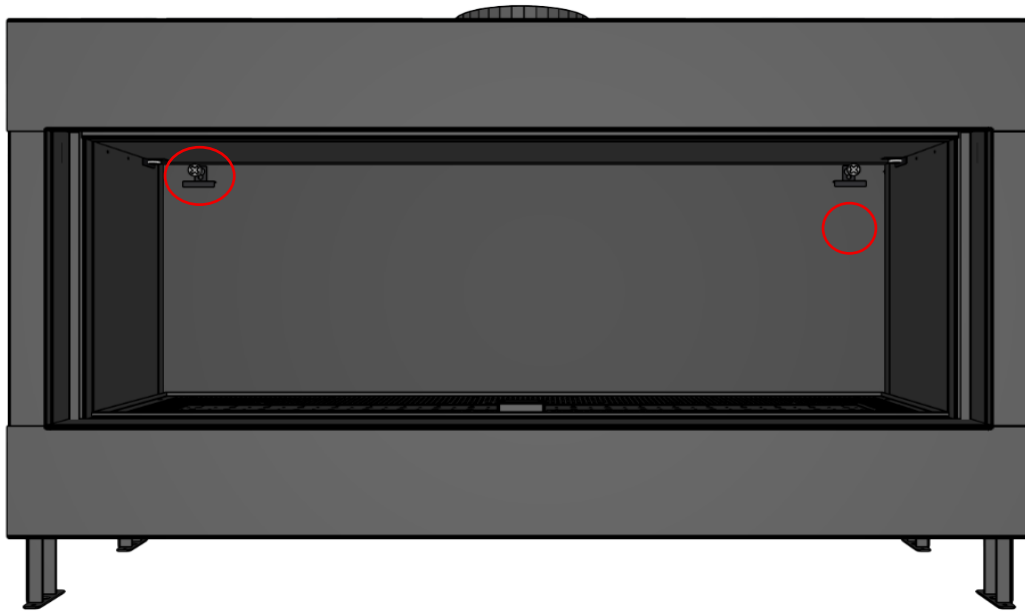

WHAT YOU'LL NEED:

REFLECTIVE BACK CLIPS (X2) AND SCREWDRIVER

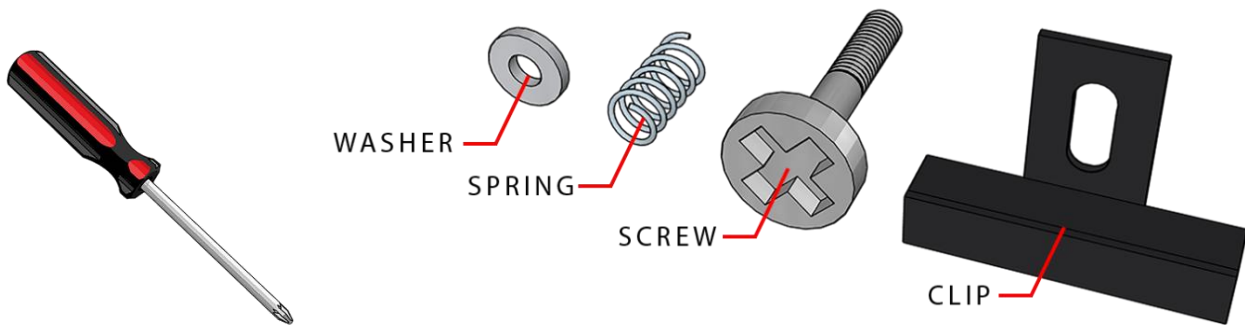


FLARE

FIREPLACES

STEP 2

Using your Phillips-head screwdriver remove the side clips from the interior side-roof of the fireplace.

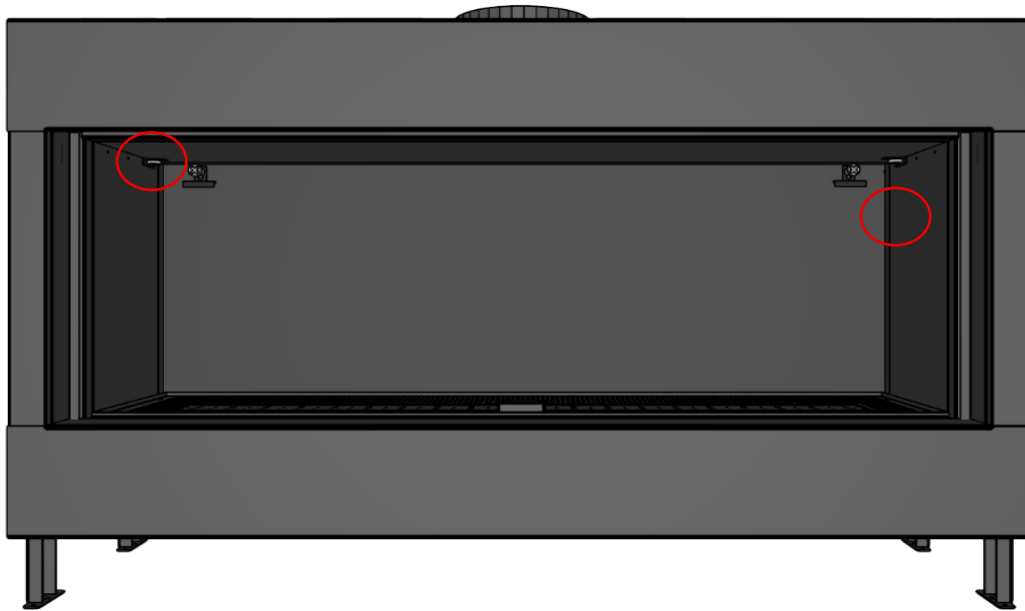

WHAT YOU'LL NEED:

REFLECTIVE SIDE CLIPS (X2) AND SCREWDRIVER




FLARE FIREPLACES

STEP 3



After your clips are removed, use the suction cups to lift the reflective back glass into the fireplace. Approach at a 30-degree angle and set the bottom edge of the glass into the lower channel behind the burner tray, then push the top edge against the back of the fireplace.

Please note if not held in place while preparing to secure the glass with reflective back clips the glass will lean forward and break.

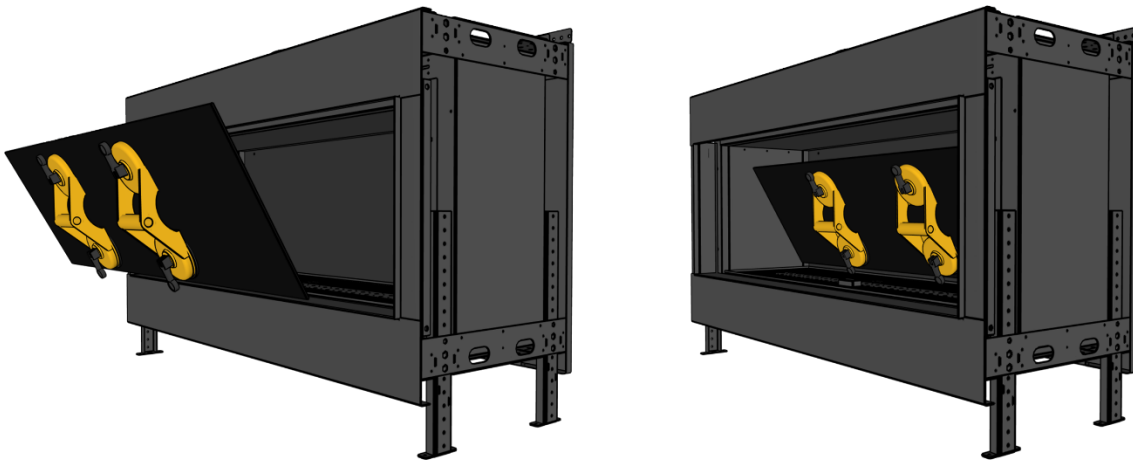

WHAT YOU'LL NEED:

REFLECTIVE BACK AND SUCTION CUPS

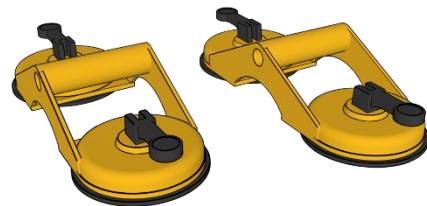


FLARE

FIREPLACES

STEP 4


Prepare your reflective back clips by placing the spring onto the screw, then the washer after the spring. Place the clip over the glass, insert the screw with the spring and washer into the mounting hole and tighten using the screwdriver a total of 3 rotations.

Please note you do not want to overtighten these clips. The spring is meant to allow for flexing as the fireplace heats up and cools down to prevent breakage while still holding the top of the glass in place.

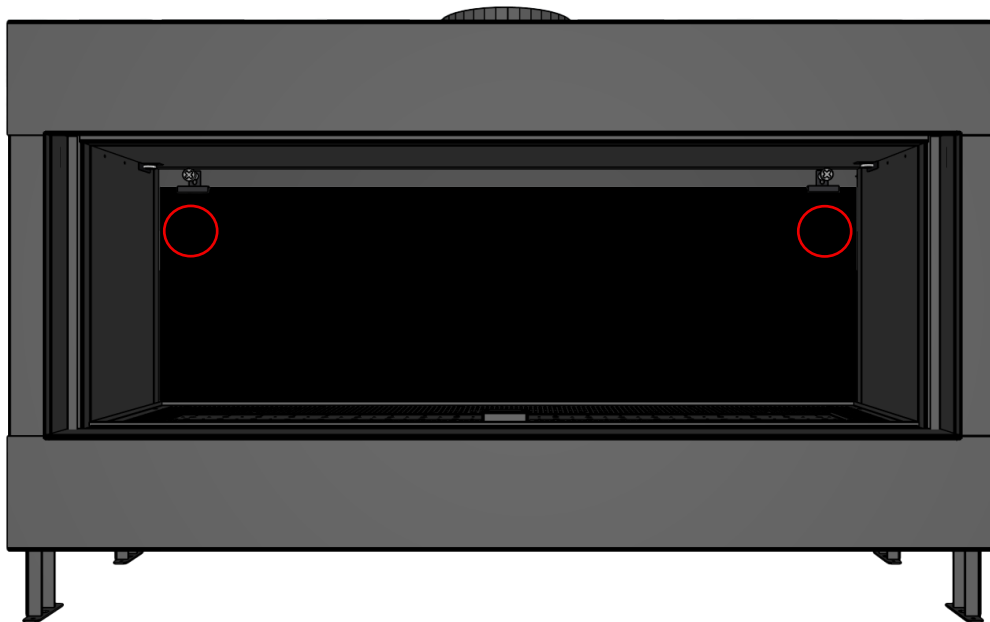

WHAT YOU'LL NEED:

REFLECTIVE BACK CLIPS (X2) AND SCREWDRIVER

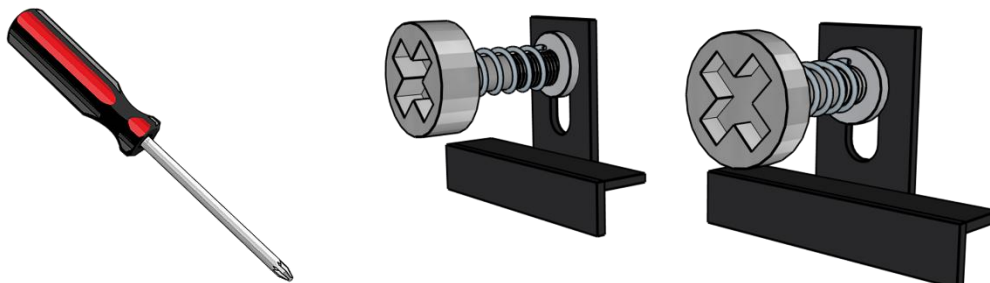


FLARE

FIREPLACES

STEP 5

Use the suction cups to lift the reflective side glass into the fireplace. Approach at a 30-degree angle and set the bottom edge of the glass into the lower channel to the left of the burner tray for the left glass panel and the right of the burner tray for the right glass panel, then push the top edge against the side of the fireplace.

Please note if not held in place while preparing to secure the glass with reflective back clips the glass will lean forward and break.

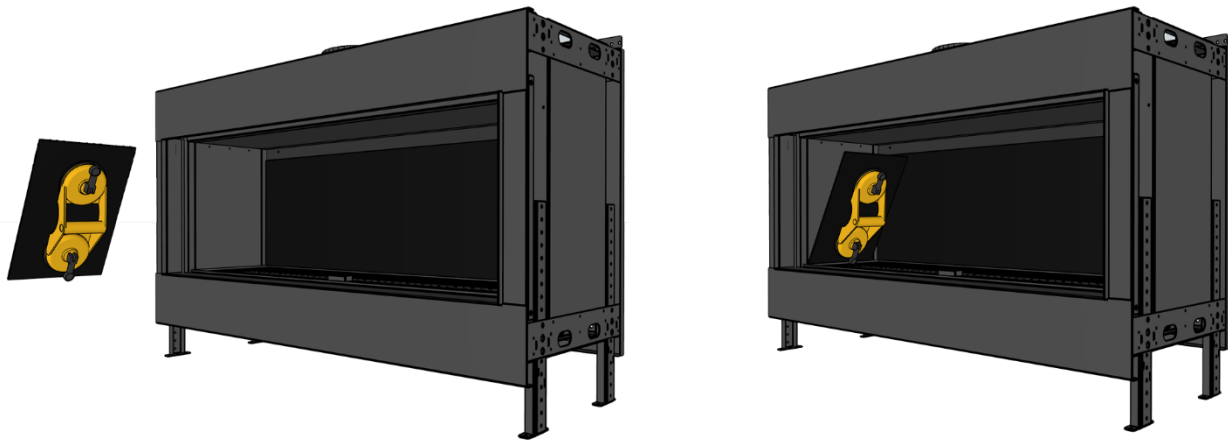

WHAT YOU'LL NEED:

REFLECTIVE SIDES (X2) AND SUCTION CUPS




FLARE

FIREPLACES


STEP 6

Prepare your reflective side clips by placing the screw into the mounting hole found on the side clip. Place the clip over the glass and tighten using the screwdriver until tight to the fireplace ceiling.

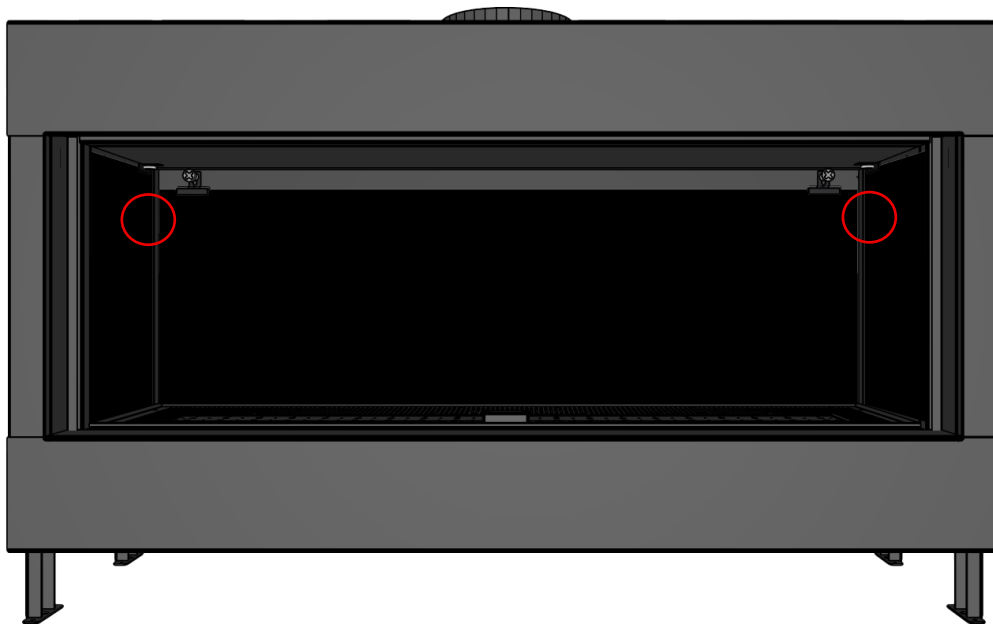

WHAT YOU'LL NEED:

REFLECTIVE SIDE CLIPS (X2) AND SCREWDRIVER

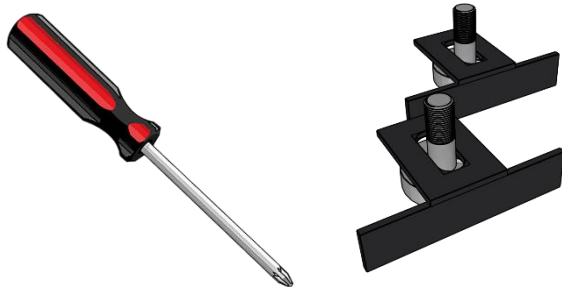

FLARE FIREPLACES

ADDITIONAL NOTES

The following additional notes the installer should follow to successfully install the reflective glass sides and back.


1. Clean the front and back of all glass panels using an ammonia free glass cleaner and a lint free cloth after the installation to remove any markings left behind by the suction cups.
2. Do not overtighten the screws securing the clips to the fireplace body.
3. Do not allow the glass to lean while not yet secured by their clips
4. Verify no media has found its way outside of the burner tray and into the reflective glass channels.

FLARE FIREPLACES

INNER CERAMIC GLASS – INSTALLATION


Your inner ceramic glass panel can be installed after removing the left, right, and bottom fillers. Then remove the left, right, and bottom trim brackets. Followed by opening the top butterfly trim to allow the installer to insert the glass into position. See examples outlined in the steps and images below.

Remove the left and right magnetic fillers by gently lifting and pulling them out. Next, lift out the bottom filler piece(s). This will reveal the trim brackets used to hold your inner ceramic glass in position.

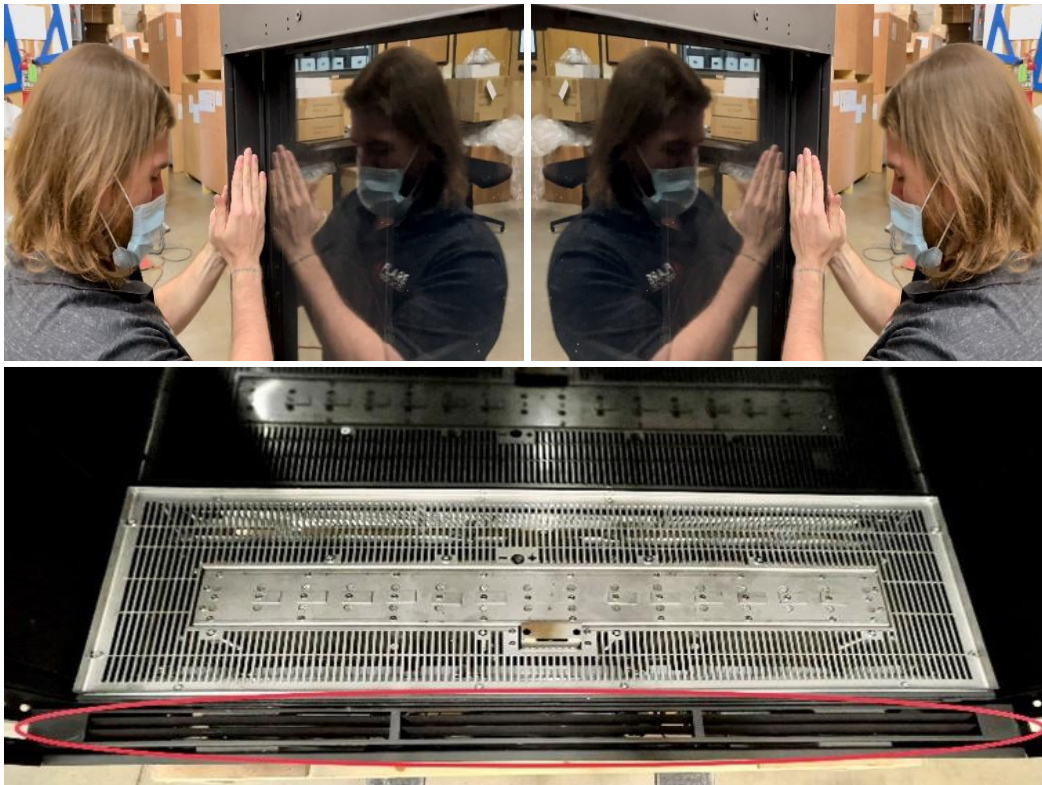


FLARE FIREPLACES

Remove the left, right, and bottom inner trim brackets by loosening the bolts or hand screws, releasing the trim brackets from the fireplace frame. Set aside to protect brackets from damage.

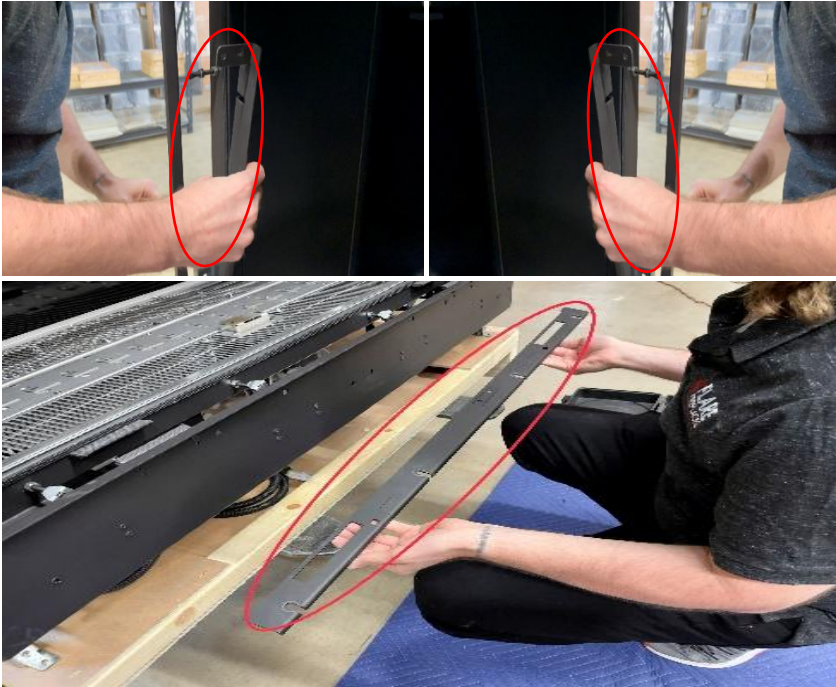

Locate and loosen all hand screws across the top frame of the fireplace. This will open your inner butterfly trim.

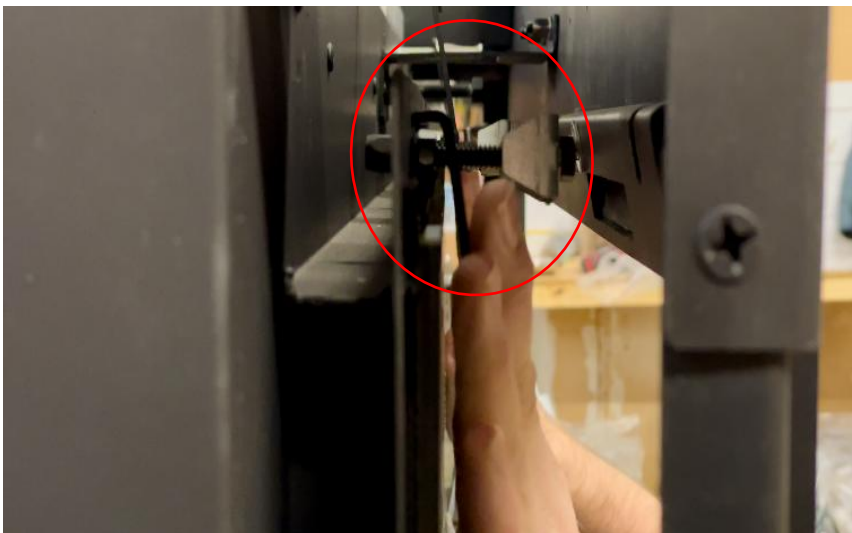

FLARE FIREPLACES

Using suction cups insert the inner ceramic glass behind the upper butterfly trim, push in gently, then set panel along the small holders, lining the bottom frame of the fireplace.




Once the inner ceramic glass panel is in position, press in and hold the upper butterfly trim while tightening the hand screws, sealing the glass against the non-combustible gasket.



FLARE FIREPLACES

Locate and reinstall your lower trim bracket. Once in position, tighten all the hand screws securing your lower trim bracket against the glass, sealing it against the non-combustible gasket.

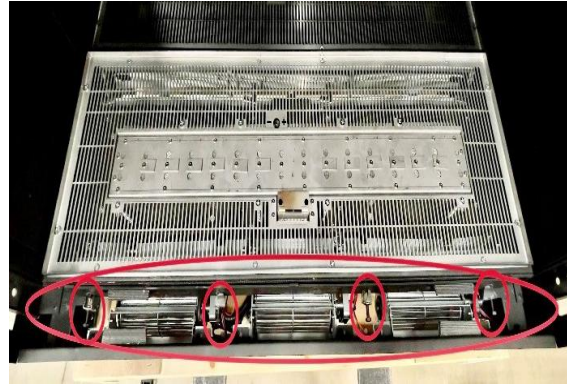

Locate and reinstall your lower louvered filler by placing it on its holder across the bottom frame of the fireplace.



FLARE FIREPLACES


Locate and reinstall your left and right-hand side magnetic fillers to complete your inner ceramic glass installation.



OUTER TEMPERED GLASS – INSTALLATION

Your outer tempered glass panel can be installed only after the inner ceramic glass has been properly placed into position. See examples outlined in the steps and images below.

Using suction cups lift your tempered layer of glass safely into position, gently placing the top of the glass against the outside of the top butterfly trim tabs

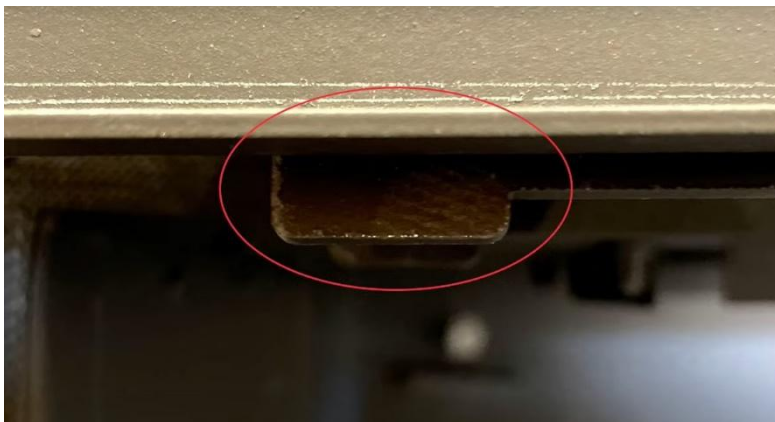

FLARE FIREPLACES

Using the top of your glass panel, gently push in on the tabs, sliding your glass up and into the channel built into the top of the fireplace frame.



Once lifted into the top of the fireplace frame, make sure the bottom of your glass has clearance to the bottom fireplace frame and slowly lean glass inward to insert into bottom glass channel.



FLARE FIREPLACES

SAFETY SCREEN – INSTALLATION

The Instructions outlined below show how to install the invisible mesh safety screen on all Flare fireplaces. This safety barrier can be installed and removed with no tools.

NOTICE

The screen safety barrier is designed to reduce the risk of burns from the hot viewing glass and is provided with this appliance unless the unit has been upgraded to include Double Glass. The invisible mesh screen must remain installed for the protection of children and other at-risk individuals. Do not operate the fireplace without the safety screen barrier.

Using the frame of your screen, gently press against the exposed butterfly trim tabs across the top of the fireplace, pushing in and lifting into position placing the screen in front of the butterfly trim which holds it tight against the inner face.



Gently lean the bottom of the screen frame in and set down within the inner screen channel



FLARE

FIREPLACES

INSTALLATION STEPS

Prior to starting the installation, make sure you read and understand all the WARNING information in the manual. Do not start the installation if you are unclear about any of the installation related subjects.

Determine the following:

- The vent system configuration to be used based on the fireplace location. Follow the manual venting section to determine the venting requirements and setting.

NOTE: Make sure the vent requirements are supported by the Flare manual and installation instruction, as requirements are model size specific.

- Clearance requirements from combustable and non-combustible materials. Follow the clearance instructions and examples in the manual.

NOTE: Clearance instructions and examples are model specific

- Gas supply piping.
- Confirm whether the fireplace is going to operate using Natural Gas (NG) or Propane. Use the attached product label to confirm the fireplace is set for the expected gas type.
- Electrical wiring requirements.
- Framing and finishing details.

1. Unpack the fireplace box, adjust telescopic legs and place in the upright position.
2. Put the Fireplace in the desired location, verifying proper clearances have been met.
3. For units equipped with RGB LED lights, connect and test light system.
4. Attach the fireplace to the back wall or framing using top brackets at each corner.
5. Adjust fireplace vent restrictor based on venting run and document setting here: (1-6) ____
6. Connect the vent pipe to the adapter on top of the fireplace.
7. Connect gas line and verify pressures, documenting here: (**NG:** 7-8 WC, **LP:** 10-11 WC) ____
8. Deration may be required if the installation is over 2000' above sea level.
9. Connect any electrical wiring for Summer Kit, Power Vent, or other additional items.
10. Install and properly arrange all fireplace media. ([Click for Media Placement Guide](#))
11. Verify Ignition
12. Adjust air shutter to achieve proper air: gas ratio.
13. Complete framing and finishing work.

Do not install it if proper specifications have not been met, or the fireplace and components are damaged.

FLARE


FIREPLACES

ACCESSING COMPONENTS FOR SERVICE

The Flare Fireplace gas valve and control system are mounted on a flexible component whip that extends up to 50 inches from the center of the fireplace. Position the controls near the access door, but never above burner level. Keep the area around the components clean and free of debris. An access door may be installed on any side of the fireplace, below the non-combustible line. **A 10" x 10" [Access Door](#) is strongly recommended.** If no access door is installed, the gas valve can still be reached by disassembling the fireplace.

COMPONENT WHIP OVERHANG

The component whip allows an installer to drag the components to the far left, far right, behind, below, or leave directly underneath the fireplace.

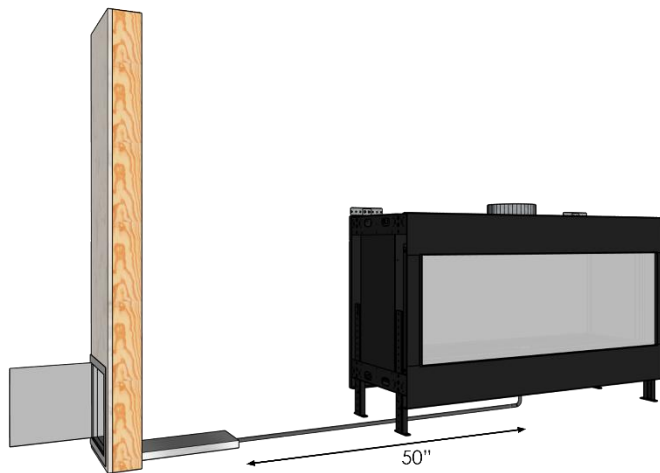

Fireplace Length	Left & Right Overhang
25" Fireplace	38"
30" Fireplace	35"
45" Fireplace	27.5"
50" Fireplace	25"
60" Fireplace	20"
70" Fireplace	15"
80" Fireplace	10"
100" Fireplace	No Overhang


NOTE

When placing an online order for a fireplace, you may request the fireplace components be pre-installed within the front frame of the unit. This allows service access by removing the outer safety barrier, lower filler piece, and, on Double Glass units, a small fan. Please note, selecting this option may extend lead times compared to standard in-stock units.

FLARE FIREPLACES

INSTALLING 10" X 10" ACCESS PANEL

The following outlines how to install the Flare Fireplaces 10" x 10" access panel.

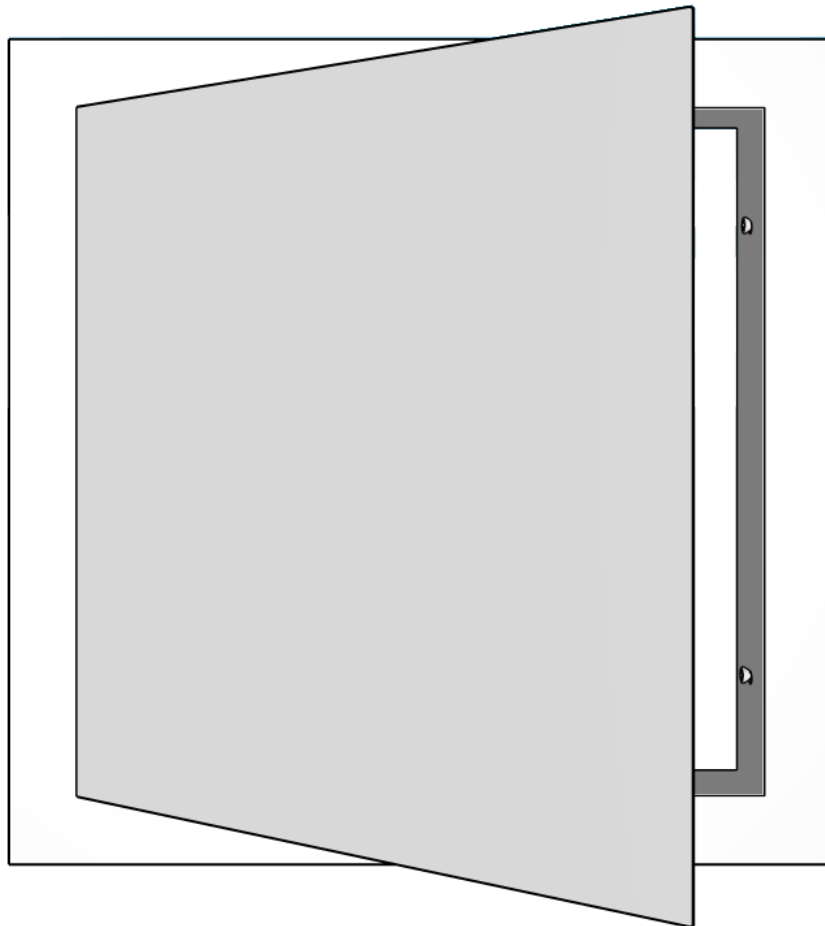

NOTE


Please note the fireplace components are attached to a 50" whip, centered, on the underside of the fireplace. This allows you to drag those components in any direction within that 50". Opening up many options for developing access in the fireplace surround.

FLARE

FIREPLACES

DIMENSIONS

ACCESS PANEL DIMENSIONS				
A	B	C	D	E
12"	10"	12"	10"	2"

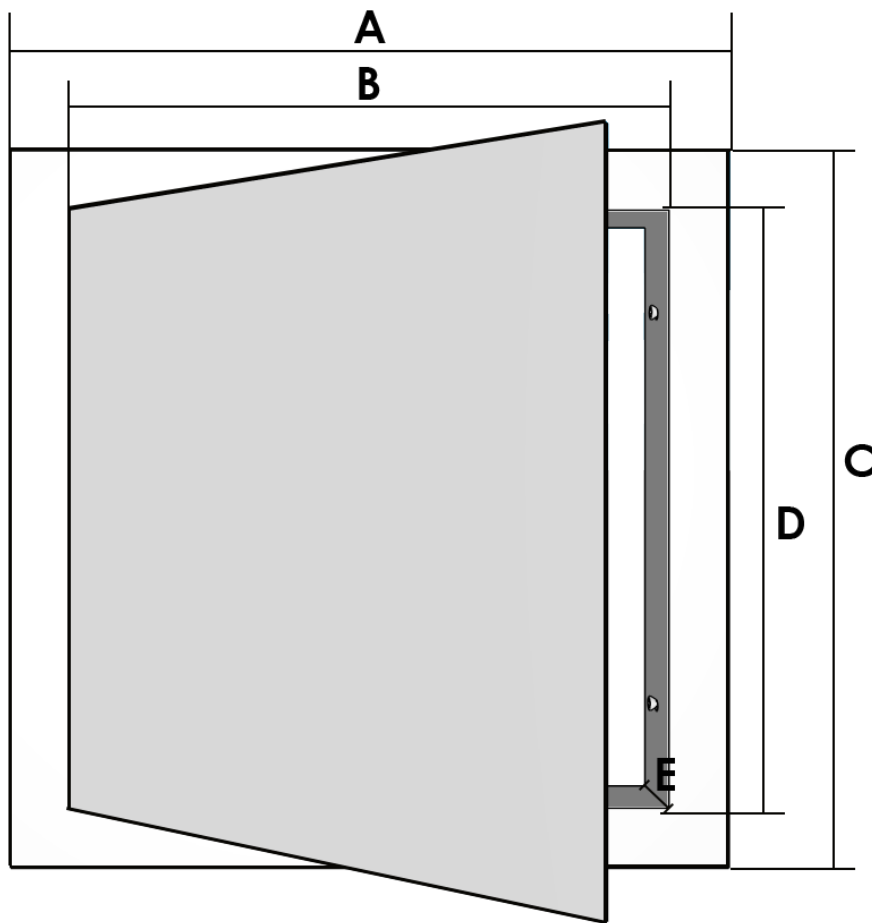


FLARE

FIREPLACES

ACCESS PANEL FRAMING DIMENSIONS

To frame out the access panel wood studs must be $10 \frac{1}{4}$ " apart from left to right , and/or top to bottom. This will allow you to secure the inner structure to the studs.

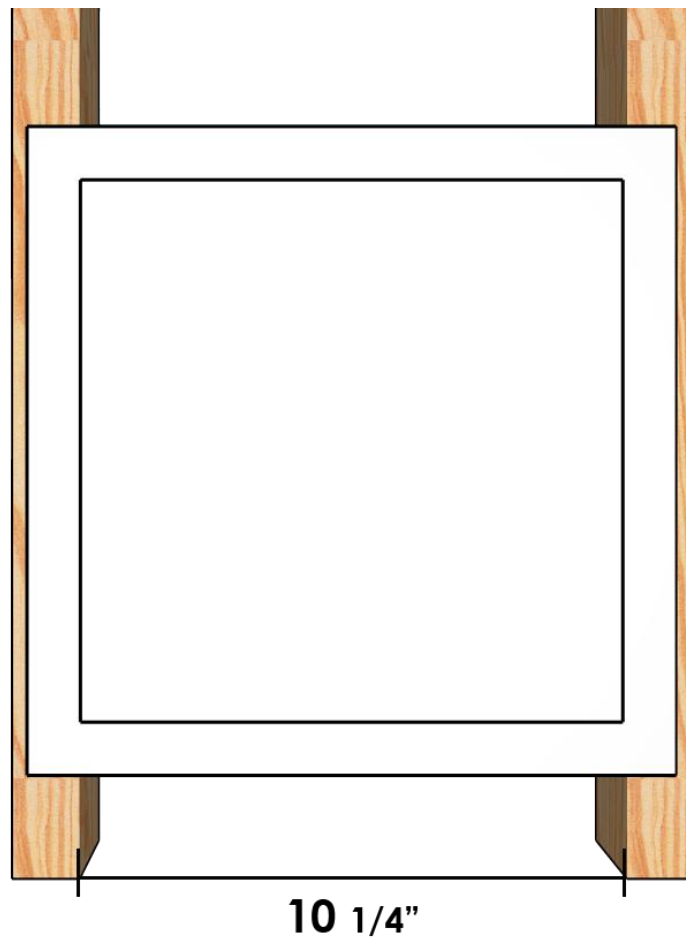


FLARE

FIREPLACES

INSTALLING THE ACCESS PANEL

Attaching the access door to your framing is as simple as positioning the panel within your pre-framed area and inserting 4 screws into the pre-drilled holes on the left and right side of the frame.

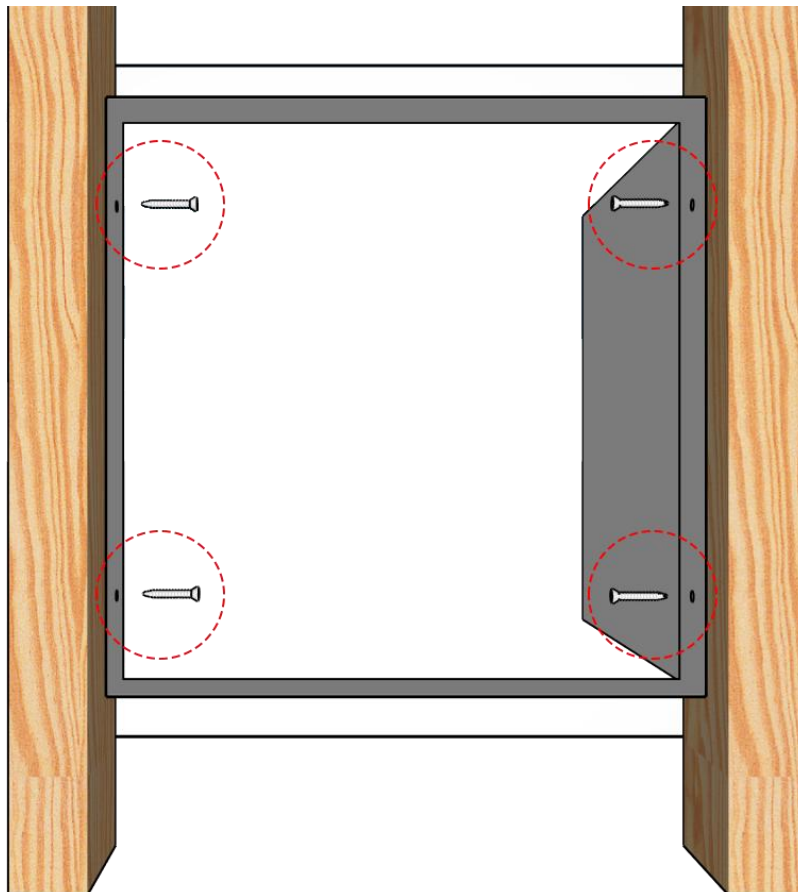


FLARE

FIREPLACES

FINAL NOTES

Once secured, the door can be opened and closed to gain access to your fireplace components. It can even be painted to match your finishing material.

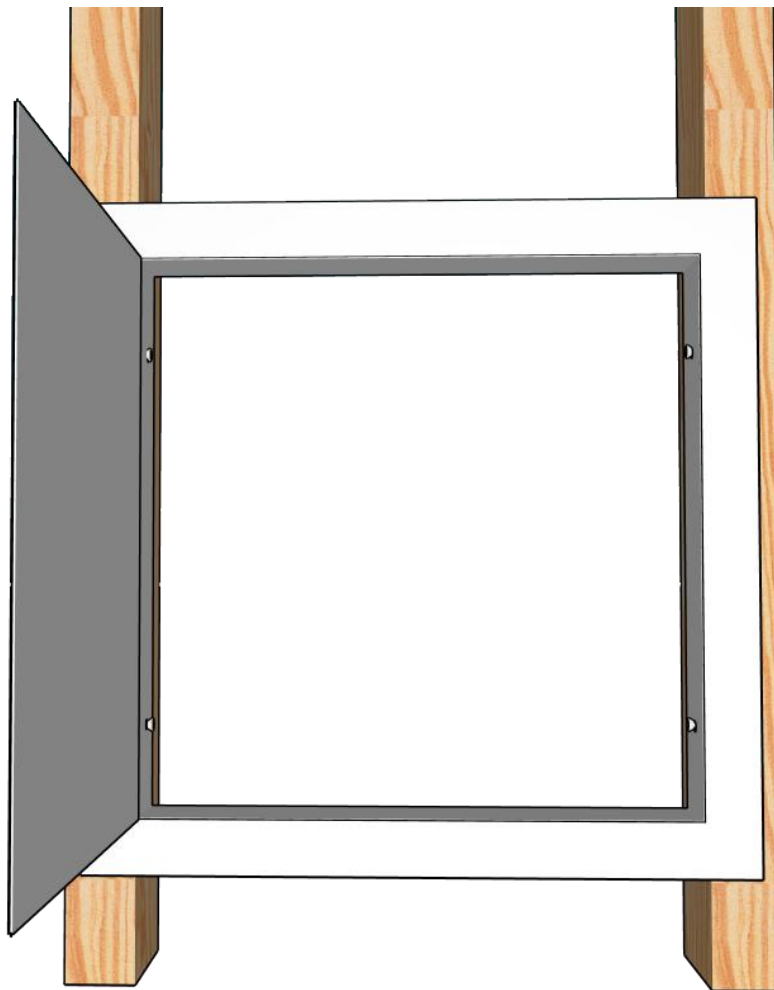

FLARE


FIREPLACES

OTHER ACCESS PANEL SUGGESTIONS

Flare offers a standard 10" x 10" [Access Door](#) which can be purchased with any indoor fireplace, making access to your components the simplest it's ever been. In the event your client wants to develop their own means of access, the following outlines **recommendations, not requirements, for creating access to the fireplace components in each unique project.**


REMOVEABLE FINISHING MATERIAL

A removeable piece of finishing material may be used to mask your access panel. Stone, tile, brick are just examples of the most common materials used.

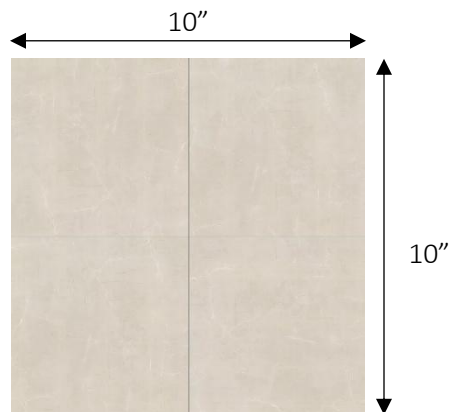

REMOVEABLE LINEAR TOE KICK

A removeable linear toe kick may be used as an access panel where the piece running perpendicular to the floor may be held on by screws or magnets to make it simple to remove.

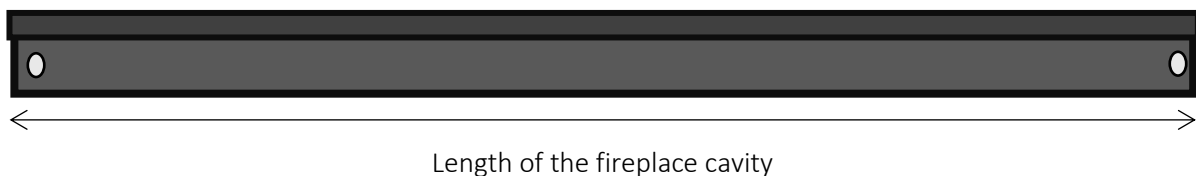

FLARE FIREPLACES

INSTALLATION PREPARATION

FIREPLACE UNPACKING

During delivery verify the fireplace serial number matches your packing slip by locating the fireplace nameplate on the face of your crate. Next, examine the shipment for any damage, making sure to mark any damage found on the Bill of Lading **before your driver leaves**.



NOTICE

Any damage found after the Bill of Lading is signed and the driver sent on his way may not be covered under warranty. Check your fireplaces carefully so we can work together to make sure the transit damage is covered by insurance.

FLARE

FIREPLACES

STEP 1

Using a power drill remove all screws on the top, front, back, and sides of the crate to expose the wrapped fireplace and glass packet inside.



STEP 2

Once the crate is open use the package slip to verify everything ordered was successfully delivered. Mark any missing or damaged components on the Bill of Lading **before your driver leaves**.

Flare Fireplaces LLC
880 N. Country Dr. Ste 300
Ridgeland, TN 37081
888.831.390
info@flarefireplaces.com
flarefireplaces.com

**FLARE
FIREPLACES**
Frameless In Every Way

Packing Slip

BILL TO		SHIP TO		INVOICE #
COMPANY	ADDRESS	COMPANY	ADDRESS	13241
EMAIL	PHONE	EMAIL	PHONE	DATE: 01/22/25

SHIP DATE	SHIP VIA	TRACKING NO.	PO	SERIAL NUMBER	FLARE ORDER#
01/22/25	COMPANY	000022333/48	43628	22345	22345

ACTIVITY	QTY
FLARE FRONT FACING 50"	1
DUFF 50 R	
INSURABLE MESH SAFETY SCREEN	
SET PROGRAM 2 GAS VALVE (NATURAL GAS)	
REMOTE	
REFLECTIVE BACK	1
30 FT. 30 R	

PLEASE NOTE INVOICE IS IN US DOLLARS
ALL SALES ARE FINAL
Late Fee of 1.5% monthly on past due balance


NOTICE

If any items from the packing slip are missing from inside the fireplace crate or damaged, please call Flare Fireplaces immediately to verify the shipment, as well as any potential resolution.

FLARE FIREPLACES

STEP 3

Remove and relocate the glass packet, DuraRock, optional media, remote, and spare parts bag to a safe location to not only lighten the load for transit to the jobsite, but to protect these elements from being lost or broken onsite. Please make sure to leave the fireplace, and its electronic components, wrapped until you are ready to install. Protecting them from unnecessary exposure onsite.

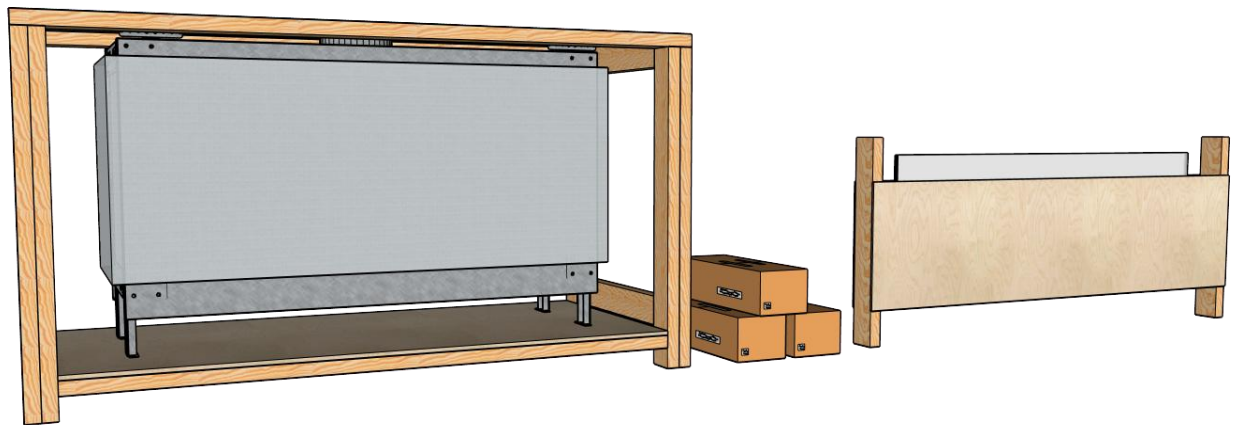

FLARE


FIREPLACES

SETTING THE FIREPLACE IN POSITION

Once the fireplace has been checked in and all items have been stored safely it's time to position the fireplace near its cavity and secure the unit in place.

STEP 1

Keeping the unit on its shipping pallet, slide on top of 4-wheeled roller carts to easily and safely push the unit into position.

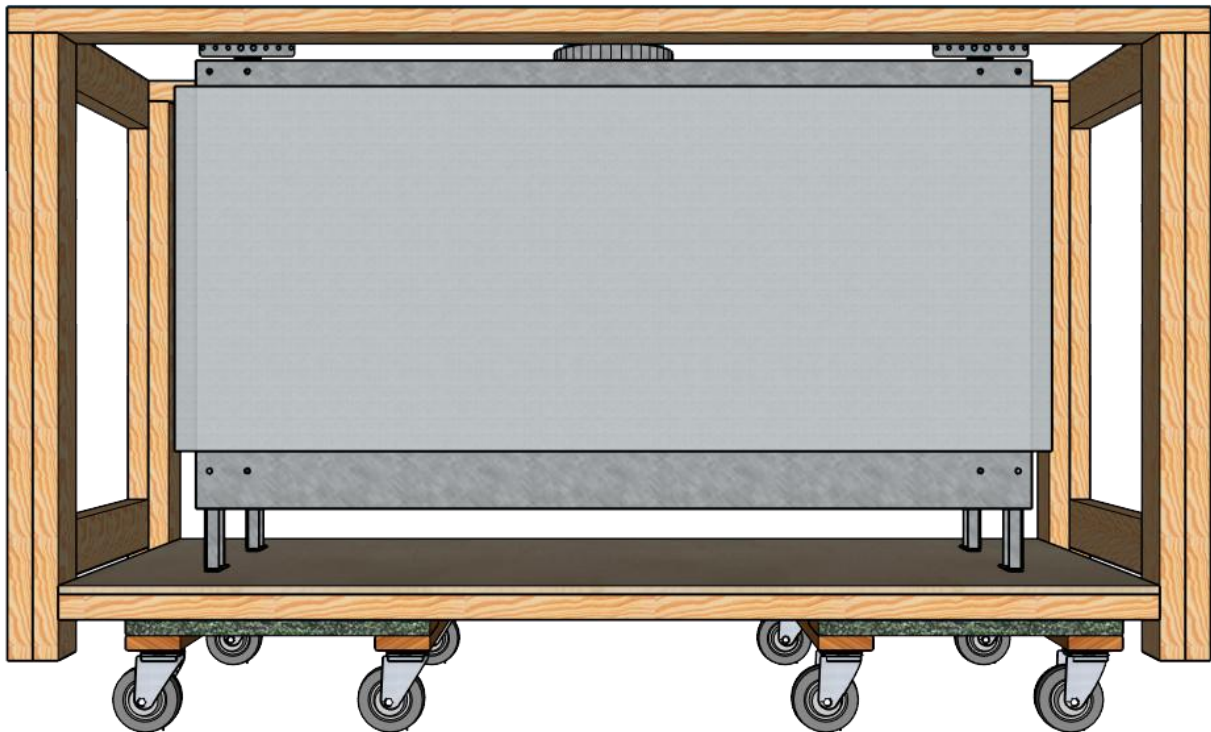

NOTICE


Keep the fireplace wrapped until you are ready to connect venting, electric, and gas.

FLARE FIREPLACES

STEP 2

Using the framing guide, verify the proper clearances and materials are being used in the cavity before sliding the fireplace into position.

METAL FRAMING

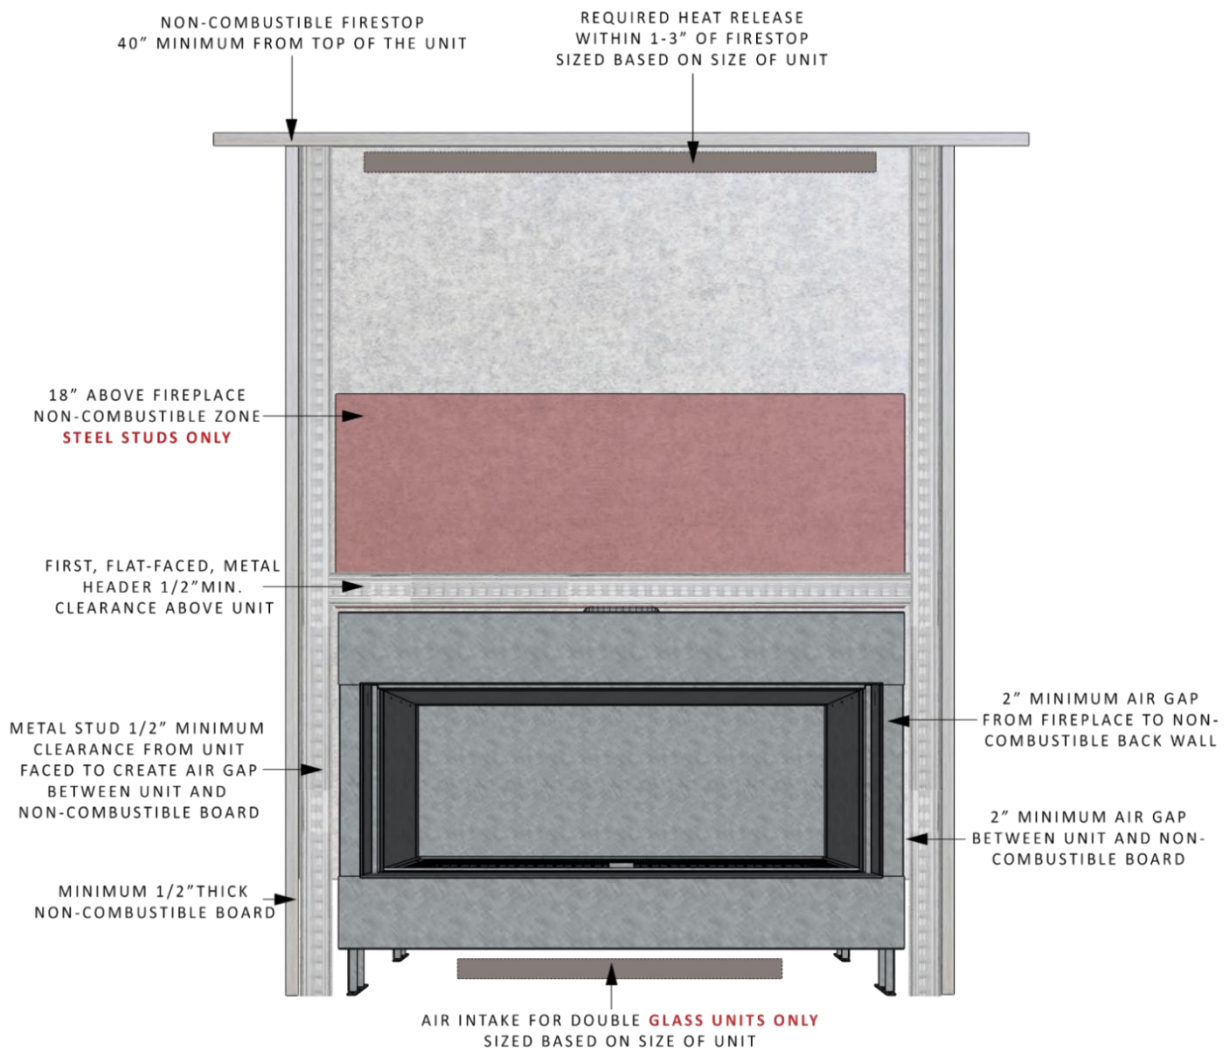


NOTICE

Use the fireplace framing guide for stud-to-stud framing dimensions based on fireplace style and size.

FLARE FIREPLACES

WOOD FRAMING

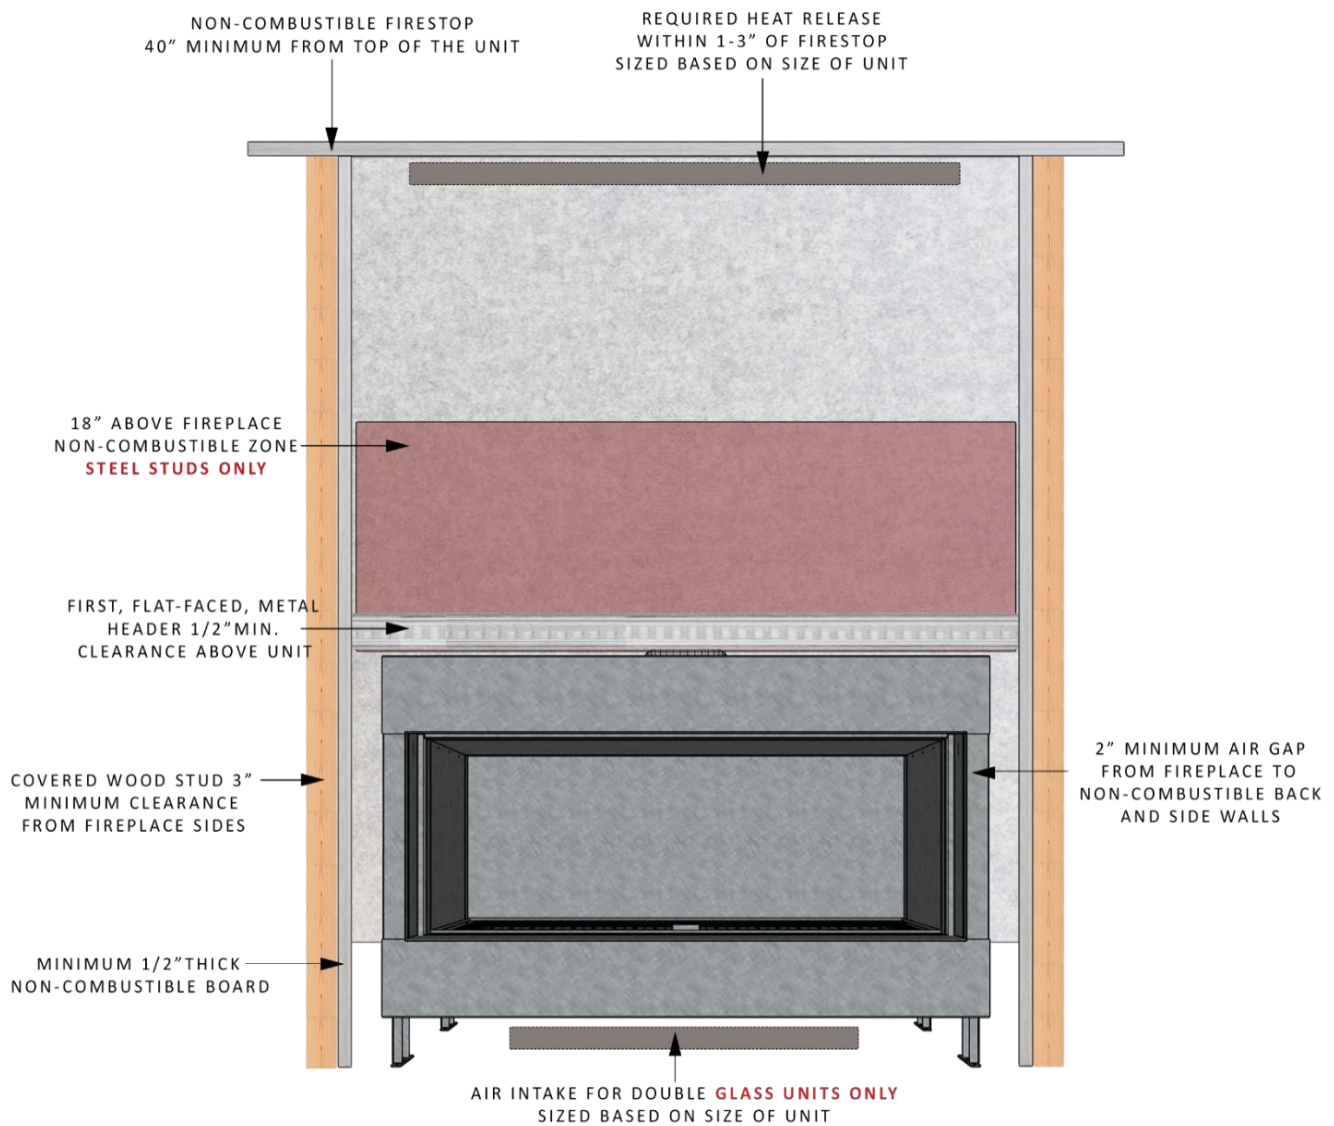

NOTICE


Use the fireplace framing guide for stud-to-stud framing dimensions based on fireplace style and size.

FLARE

FIREPLACES

STEP 3

Attach the fireplace stand-off brackets to the back wall or framing on the left and right side. Making sure they are only being attached to non-combustible materials.

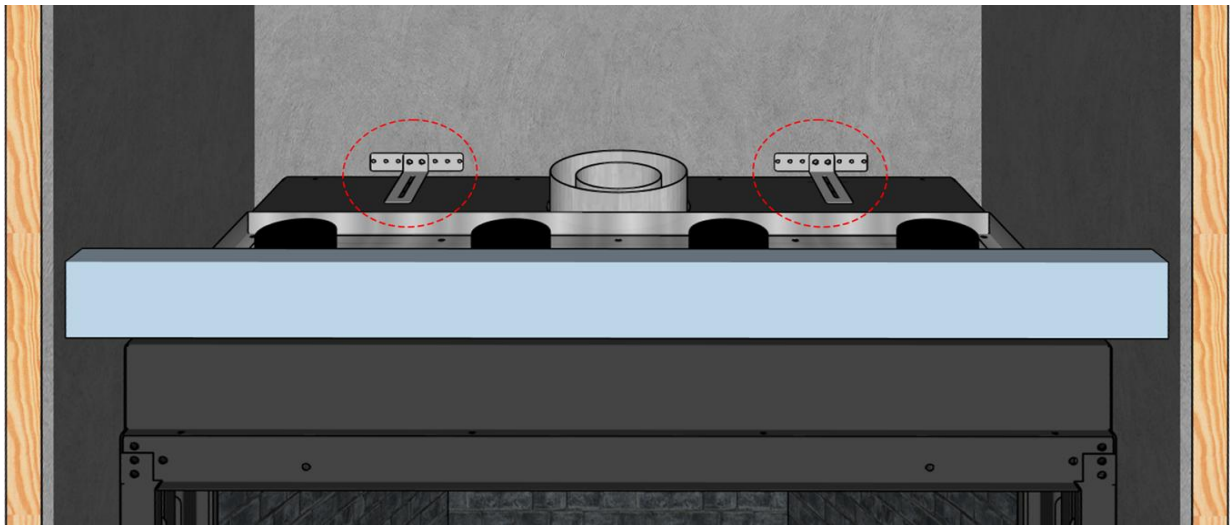

FLARE FIREPLACES

TELESCOPIC LEG SETUP

The fireplace legs will need to be set once the crate has been removed. The legs can be configured so the bottom of the glass will be between 10"-19" above the floor. This means the bottom of the fireplace will be 4"-13" above the floor. Follow the steps below for telescopic legs setup prior to final positioning of the fireplace.

[Telescopic Leg Manual – Minimums and Maximums](#)

[Telescopic Legs Setup Video – Front Facing and See-Through Fireplaces](#)

NOTICE

Corner style fireplace (Flare-RC/LC/DC/RD) legs will need to be attached to the fireplace, whereas front facing, and see-through styles will come attached from the factory.

WARNING


Fireplaces must **NOT** be installed without telescopic legs extracted to a minimum of 3". Installing the fireplace without telescopic legs is a fire hazard and may bend the frame causing glass breakage.

FLARE FIREPLACES

FRONT FACING AND SEE-THROUGH FIREPLACE LEG SETUP

The following outlines how to adjust your telescopic legs on front facing and see-through fireplaces.

Release the safety pin and two bolts from the leg you are adjusting.

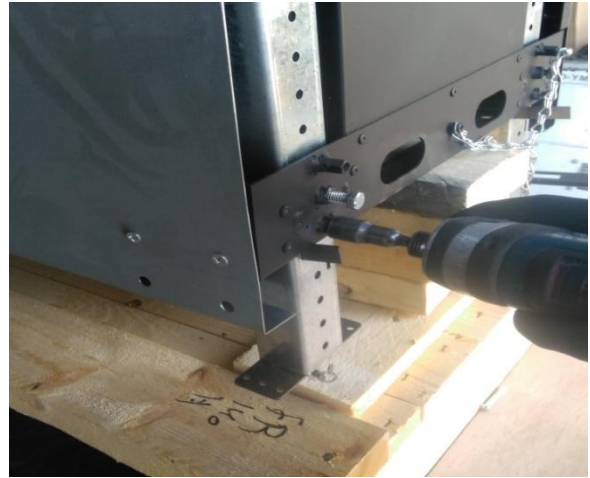

Extend your leg to the desired height, increasing in one-inch increments. Then lock-in your height by reinstalling the two bolts and safety pin. Repeating these steps for all four legs.



*Add leveling feet if fine-tuned leveling is required to balance your fireplace.

FLARE FIREPLACES

LEFT, RIGHT, AND DOUBLE CORNER FIREPLACE LEG SETUP

Step 1 - First, unpack your corner telescopic legs to verify the four legs and eight screws are present.

Step 2 - Next, determine which holes to insert the screws so the fireplace will stand at the desired height.

Step 3 - Attach legs one at a time to each corner using the screws to secure the legs into position.

Step 4 - Configure remaining legs to the same height.

Step 5 - Stand the fireplace up and fine tune your feet with the wrench supplied so the fireplace is level. Open the screws to raise the fireplace. Close the screws to lower the fireplace.



NOTICE



Please note all units must have their telescopic legs attached to achieve the minimum height required to the underside of the fireplace.

FLARE FIREPLACES

UNPACKING CONTROL UNIT AND ACCESSORIES

Unpack the accessories (remote, power adapter & wall switch). The gas valve, receiver, control module (for double glass units) **must remain wrapped until the first test of unit.**

- Place accessories (white bag) in a secure location.
- The control unit (gas valve and receiver) is attached to the fireplace on a 50" "umbilical cord".
- Once the fireplace is moved to its final location the control unit can be put close to the service access door.

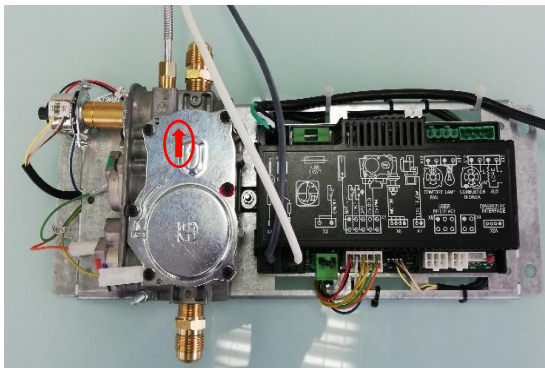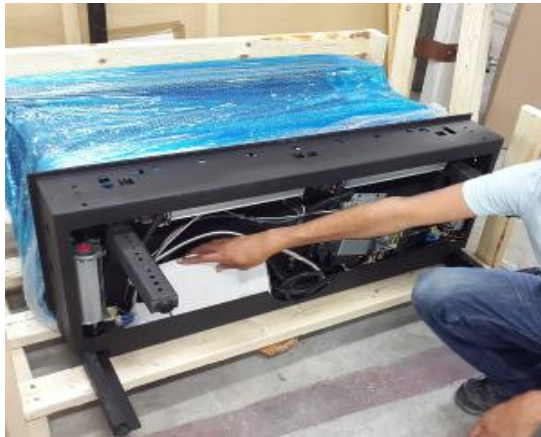

FLARE FIREPLACES

POSITIONING AND SECURING YOUR FIREPLACE

Once the telescopic legs have been properly attached and/or adjusted the fireplace can be safely moved, on its delivery pallet, and secured in its final installation location to the back wall or framing using the fireplaces top brackets.

NOTICE

Make sure to never drag the fireplace during installation. It is recommended to keep the fireplace on its delivery pallet to simplify positioning. The proper clearances and materials for the fireplace surround will need to be verified before attaching the fireplace to the back-wall or framing using the top brackets.



FLARE

FIREPLACES

RGB LED LIGHTING

These multi-colored lights are controlled by a touchscreen remote that allows for many different themes, colors, and levels of brightness.

Remote	
Dimensions	110 x 52 x 20 mm
Power	(x2) AAA Batteries
Material	ABS

Controller	
Dimensions	85 x 45 x 23 mm
Voltage	DC 12V ~ 24V
Control Way	3 Channel RGB
Max Load Per Channel	6A
Communication Distance	30 Meters

Number	Mode	Brightness	Speed
1	Static White	Adjustable	Not Adjustable
2	White Color Gradual Changes	Adjustable	Adjustable
3	All Colors Gradual Changes	Adjustable	Adjustable
4	Red/Green/Blue 3 Colors Gradual Change	Adjustable	Adjustable
5	7 Colors Jump to Change	Adjustable	Adjustable
6	3 Colors Jump to Change	Adjustable	Adjustable
7	Red/Green Jumps to Change	Adjustable	Adjustable
8	Red/Blue Jumps to Change	Adjustable	Adjustable
9	Blue/Green Jumps to Change	Adjustable	Adjustable
10	White Color Frequently Blinks	Adjustable	Adjustable
11	White Color Glitters	Adjustable	Adjustable
12	Red Color Frequently Blinks	Adjustable	Adjustable
13	Red Color Glitters	Adjustable	Adjustable
14	Green Color Frequently Blinks	Adjustable	Adjustable
15	Green Color Glitters	Adjustable	Adjustable
16	Blue Color Frequently Blinks	Adjustable	Adjustable
17	Blue Color Glitters	Adjustable	Adjustable
18	Yellow Color Frequently Blinks	Adjustable	Adjustable
19	Yellow Color Glitters	Adjustable	Adjustable
20	Circulation Mode		

FLARE FIREPLACES

PAIRING YOUR RGB LED REMOTE

Scan the QR code for a step-by-step video showing how to re-pair the RGB LED remote with its controller when communication issues occur.

GEN 1 - LED RESYNC




GEN 2 - LED RESYNC



FLARE FIREPLACES

LED REMOTE CONFIGURATION

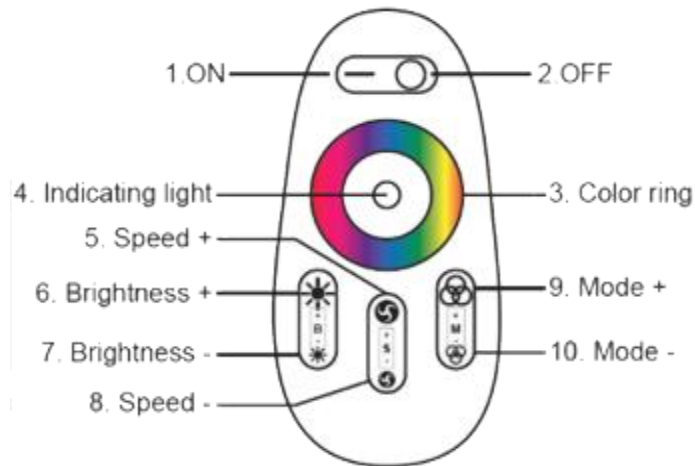

GEN 1 REMOTE PAIRING

Confirm your components are correctly connected. Remove power to the LED system, then after a short 5 second wait, reconnect power and press the #5 button the moment you see your LED lights in the firebox illuminate. If successful, your LED lights will flash twice.

GEN 1 REMOTE UNPAIRING

Confirm your components are correctly connected. Remove power to the LED system, then after a short 5 second wait, reconnect power and press the #5 button the moment you see your LED lights in the firebox illuminate. If successful, your LED lights will flash twice.

*GEN 2 REMOTE PAIRING

Confirm your components are correctly connected. Remove power to the LED system, then after a short 5 second wait, reconnect power and press the #1 and #10 buttons simultaneously the moment you see your LED lights in the firebox illuminate. If successful, your LED lights will flash twice.

***GEN 2 Remotes have no unpairing process**

FLARE FIREPLACES

RGB LIGHT VERIFICATION – PRE-INSTALL


It is best if LED lights are connected and evaluated during the initial stages of installation to allow easy access to the components (before the wall finishing material is done).

Evaluating the LED light requires a 110V power source.

Testing/Installation steps:

1. Remove all LED components from the shipping bag.
2. Components are pre-connected prior to shipping. Connect LED connectors (points **A**) to the fireplace using the quick-connect connectors.
3. Connect LED Controller to the LED power supply (point **B**)
4. Connect LED Power supply to LAMP port on the SIT receiver (point **C**). Using the SIT Fireplace remote, scroll to the LAMP setting and turn it ON. Use the LED remote to turn the LED on the LED system. Once ON, ensure the LED responds by pressing the color wheel. If it does not, follow the instructions below.

Once testing is done, connect the LED power adapter to final power source (Point **C**).

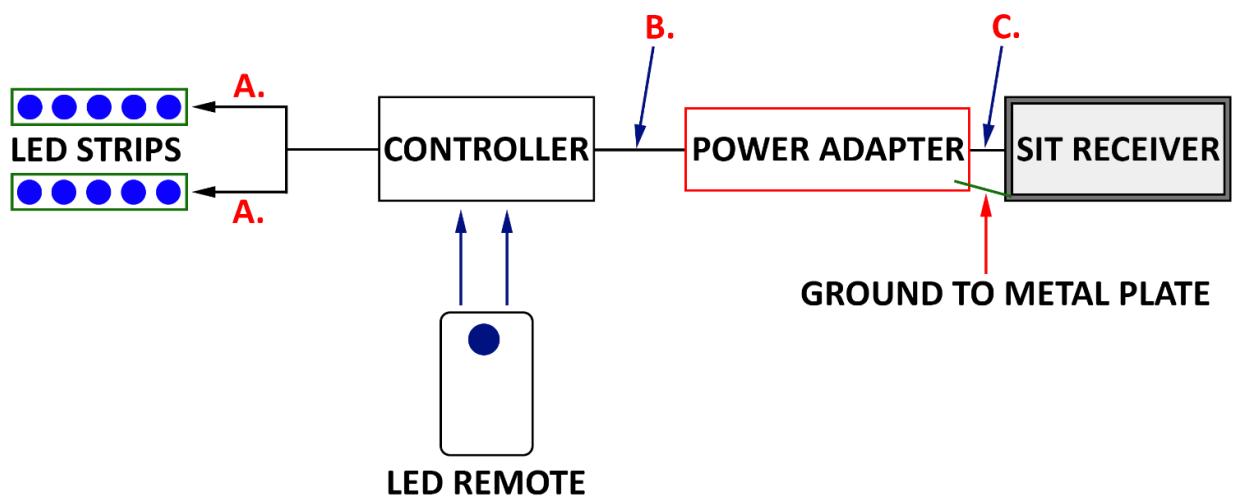

FLARE FIREPLACES

OPTIONAL BLOWER KIT – SCREEN UNITS ONLY

The Flare silent blower kit can be added to a safety screened unit to help circulate more heat from the front of the fireplace into the room. The blowers will be powered using a 110V plug. A switch controlling power to the outlet the plug is connected to will be needed to turn the fans On and Off, otherwise they will run at all times.

NOTICE

The blowers will need air intake to successfully operate. **Use the chart below to determine the size of the air intake required.**

Fireplaces sized between 30" – 50"	50 Sq" of open airflow
Fireplaces sized between 60" – 70"	70 Sq" of open airflow
Fireplaces sized between 80" – 100"	100 Sq" of open airflow

NOTICE

See-Through fireplaces must have air intake balanced on each side to evenly feed fresh air to blower fans. It is recommended to exceed the minimum sizing requirements to help extend the life of your blower fans.

FLARE

FIREPLACES

VENTING

This appliance is approved for use with M&G DuraVent venting and ICC. DO NOT mix pipe, fittings or joining methods from different manufacturers.

These instructions should be used as a guideline and do not supersede local codes in any way. Install venting according to local codes, these instructions, the current National Fuel Gas Code (ANSI-Z223.1) in the USA or the current standards of CAN/CSA-B149.1 in Canada.

Approved Pipe - This appliance is approved for use with M&G DuraVent venting and ICC. DO NOT mix pipe, fittings or joining methods from different manufacturers.

For detailed **DuraVent** chimney installation information please use the M&G DuraVent direct vent installation manual: <http://www.duravent.com>

For detailed **ICC** chimney installation information please use the ICC direct vent installation manual: <http://icc-chimney.com/en/exceldirect>

Instructions

- Where a vent pipe passes through a floor or ceiling, a ceiling firestop MUST be used to retain insulation and maintain proper clearances. Use roof support brackets where needed.
- Install the first section of vent pipe into the collar on top of the fireplace.
- Connections between each vent system component must be tightly joined and secured. Follow the vent manufacturer's instructions for information on how to seal and secure vent and vent connections.
- Horizontal runs of vent pipe must be supported to prevent any downward sags. Horizontal pipe sections should be supported at least every 4 feet. Wall Straps can be used for this purpose.
- When installing the vent pipe, make sure that the vent pipe is supported by the structural/frame surrounding and not by the fireplace.

Follow the vent manufacturer's instructions for information on how to install, seal, and secure vent and vent connections. Do not pack insulation around the vent pipe to prevent overheating. Always maintain specified clearances around venting and firestop systems. Install wall shield and ceiling firestops as specified.

FLARE

FIREPLACES

VENT PIPE SIZE USED ON EACH FIREPLACE

The vent pipe size used differs based on the size of the fireplace being installed. Also note that any fireplace that is being power vented automatically uses the 3x5 CVS pipe, and all Room Definer fireplaces use the 5x8 DVA pipe. Use the following chart to determine what pipe size is used on each fireplace.

Fireplace Size	Vent Pipe Size
Flare 30" Fireplace	4x6
Flare 45" Fireplace	4x6 or *5x8
Flare 50" Fireplace	5x8
Flare 60" Fireplace	5x8
Flare 70" Fireplace	5x8
Flare 80" Fireplace	5x8
Flare 100" Fireplace	5x8

(*Room Definer Only)

DIRECT VENT PIPE CLEARANCES

The following outlines the clearances for the direct vent pipe used to draft the fireplace.

HORIZONTAL VENT PIPE CLEARANCES

- A minimum clearance of **3 inches** (76mm) to the top and **1 inch** (51mm) to the sides and bottom of the vent pipe on all horizontal runs to combustibles is required.
- Horizontal vents must be level or have a 1/4-inch rise for every 1-foot run towards the termination.

VERTICAL VENT CLEARANCES

- A minimum of **1 inch** (25mm) all around the vent pipe on all vertical runs to combustibles is required except for clearances in appliance enclosures.
- When penetrating through combustible walls and ceilings, frame a minimum of 10.5" x 10.5" opening and ensure insulation is kept clear of the vent pipe using either a wall thimble or an attic insulation shield. Use the following DuraVent framing cutout table based on your selected part.

FLARE

FIREPLACES

DIRECT VENT PIPE CUT-OUT DIMENSIONS

Direct Vent Pro Cutout Dimensions		
46DVA-WT	Wall Thimble	10" x 10"
46DVA-WTS	Wall Thimble (Small)	9" x 9"
46DVA-WTU	Wall Thimble Universal	9" x 9"
46DVA-CS	Ceiling Support	10 ¾" x 10 ¾"
46DVA-FS	Fire Stop	9" x 9"
46DVA-WFS	Wall Fire Stop	10" x 10"
46DVA-VSS	Vinyl Siding Standoff	17" x 17"
46DVA-CF	Counter Flashing (Assembled)	13 ½" x 13 ½"
46DVACFK	Counter Flashing (4pc Kit)	13 ½" x 13 ½"
46DVA-CFKS	Counter Flashing (Small Kit)	10 ½" x 10 ½"
46DVA-VSK	Vinyl Siding Standoff (4pc Kit)	13 ½" x 13 ½"
46DVA-VSKS	Vinyl Siding Standoff (Small Kit)	10 ½" x 10 ½"
46DVA-IS	Insulation Sheild	9" x 9"
58DVA-WT	Wall Thimble	10 ½" x 10 ½"
58DVA-WTS	Wall Thimble (Small)	9" x 9"
58DVA-WTU	Wall Thimble (Universal)	9" x 9"
58DVA-CS	Ceiling Support	10 ¾" x 10 ¾"
58DVA-FS	Fire Stop	10 ½" x 10 ½"
58DVA-WFS	Wall Fire Stop	10 ½" x 10 ½"
58DVA-VSS	Vinyl Siding Standoff	19 ½" x 19 ½"
58DVA-VSK	Vinyl Siding Standoff (4pc Kit)	16" x 16"
58DVA-CF	Counter Flashing (Assembled)	16" x 16"
58DVA-CFK	Counter Flashing (4pc Kit)	16" x 16"
58DVA-IS	Insulation Sheild	11" x 11"

FLARE



FIREPLACES

SINGLE VERTICAL TERMINATION

See the table on the previous page for minimum cutout dimensions or frame openings around wall venting. Make sure clearances to combustible material are maintained based on vent part used.

NOTICE

Size of vents depends upon specific fireplace and cutout sizes vary according to the DuraVent or ICC part number used.

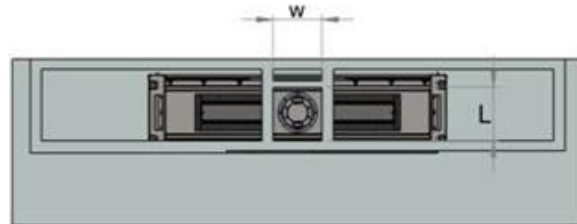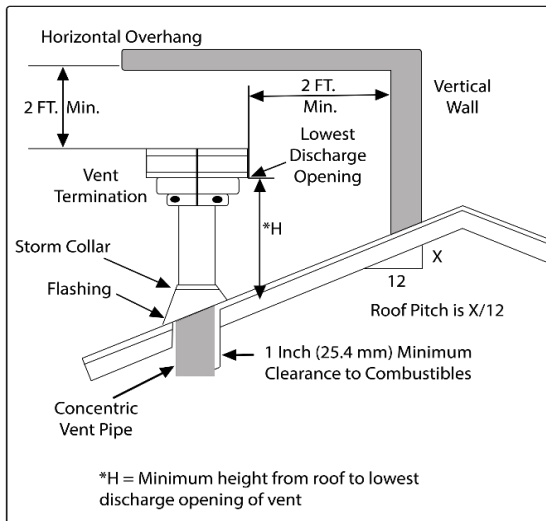

- Vertical Vent Termination Opening/Framing will depend on the part used. See table above or vent installation manual.
- Minimum of 24" horizontal clearance to any surface, such as an exterior wall, for vertical terminations.


Termination Heights Above Flat – Sloped Roofs (REF NFPA 54 / ANSI Z223.1)		
Pitch	Feet	Meters
Flat to 6/12	1'	0.3
6/12 to 7/12	1.25'	0.38
7/12 to 8/12	1.5'	0.46
9/12 to 9/12	2.0'	0.61
9/12 to 10/12	2.5'	0.76
12/12 to 11/12	3.25'	0.99
11/12 to 12/12	4.0'	1.22
12/12 to 14/12	5.0'	1.52
14/12 to 16/12	6.0'	1.83
16/12 to 18/12	7.0'	2.13
18/12 to 20/12	7.5'	2.29
20/12 to 21/12	8.0'	2.44

FLARE

FIREPLACES

MULTIPLE VERTICAL TERMINATIONS

A	B
6" Minimum up to 20"	18" minimum
20" and over	0" minimum

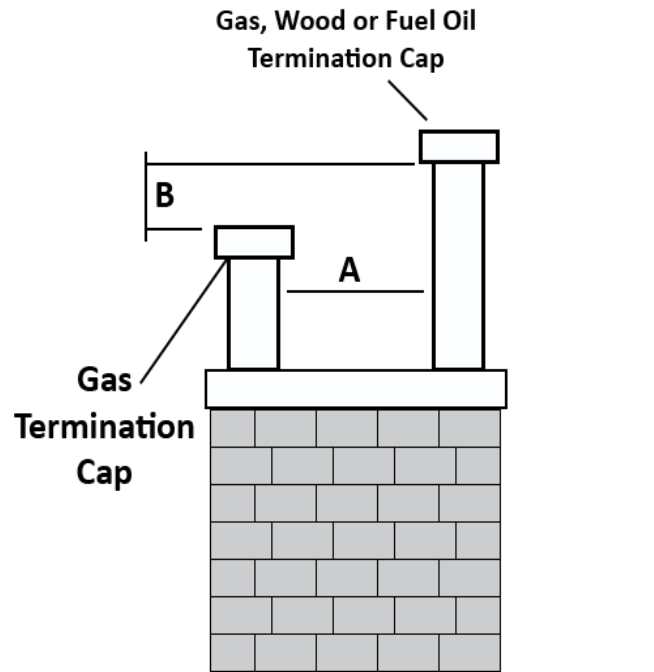

If using a decorative cap or cover, this distance may need to be increased. Refer to the Custom Chimney Shroud specification for details.


In a staggered installation with gas, wood, or fuel oil terminations, the wood or fuel oil termination cap must be higher than the gas termination cap.

FLARE

FIREPLACES

HORIZONTAL TERMINATIONS

Pipe Size	Width (W)	Height (H)
3" x 5"	7"	9"
4" x 6"	8"	10"
5" x 8"	10"	12"

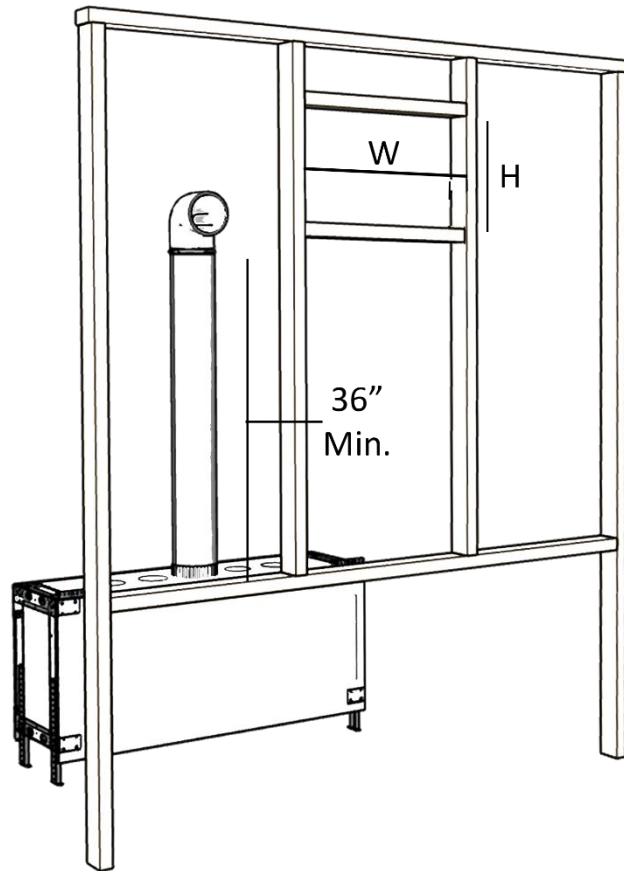

MULTIPLE HORIZONTAL TERMINATIONS

A minimum distance of 18" should be kept between multiple horizontal terminations

FLARE FIREPLACES

TERMINATION CLEARANCES

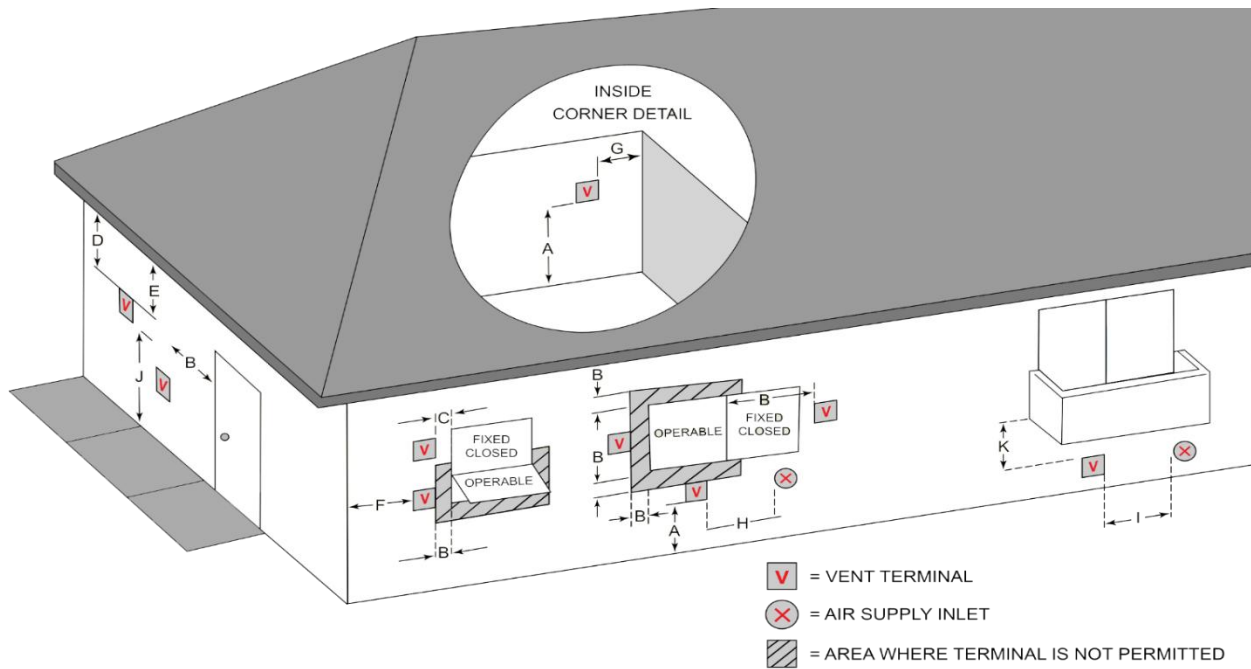


FIG.	LOCATION	MIN. CLEARANCES (DIRECT VENT)
A	Above finished grade, veranda, porch, deck, or balcony	12"
B	Clearance to operational & nonoperational window	12"
C	Non-openable window.	12"
D	Vertical clearance to ventilated soffit, above terminal within a 2' hor. distance from edge of the terminal.	24" – 80" to 100" fireplaces 18" – 70" and below fireplaces
E	Unventilated soffit	24" – 80" to 100" fireplaces 18" – 70" and below fireplaces
F	Outside Corner	6"
G	Inside Corner	6"
H	Non-mechanical air supply inlet	12"
I	Mechanical air supply inlet	6'
J	Above paved sidewalk, driveway on public property	7'
K	Underside of veranda, porch, deck, or balcony	20"

NOTICE

- Vent shall not terminate directly above a sidewalk or paved driveway, located between two single family dwellings, serving both dwellings.
- Only permitted if veranda, porch, deck, or balcony is fully open on a minimum of 2 sides beneath the door.
- Clearance in accordance with local installation codes and the requirements of the gas supplier.
- As specified in CGA B149 Installation Codes, note local Codes or Regulation may require different clearances.
- For U.S.A. Installations follow the current National Fuel Gas Code, ANSI Z223.1
- Horizontal vent termination minimum clearance to adjacent structure or fence is 48".
- Minimum 24" horizontal clearance to any surface (such as an exterior wall) for vertical terminations.
- Minimum 18" horizontal clearance to any Carbon Monoxide (CO) air outlet (12" clearance to any standard air outlet).

FLARE

FIREPLACES


VENT RESTRICTOR SETTING

The Flare Fireplace direct vent system is equipped with an adjustable vent restrictor. Use the Chimney Path Installation and Planning on the following pages to determine the proper setting for your installation.

NOTICE

A certified installer or fireplace technician should only manage vent Restrictor changes and setup.

- Unit leaves the factory with the vent restrictor open (1).
- Adjust using a 10mm wrench, in between safety barriers, within the upper portion of the fireplace frame.
- Setting can be moved from 1 - 6, based on fireplace size and planned vent run.
- **The installer must document the restrictor setting.**
- Use the vent planning guide and table to determine restrictor setting.

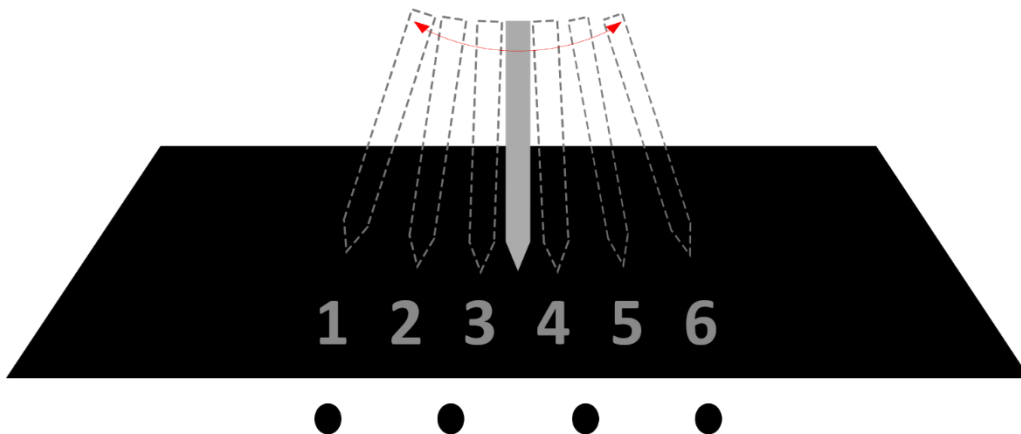

The vent restrictor may need adjustment if any of the following are occurring:

- Flame is excessively tall or lifting from burner.
- Flames lack natural movement.
- Flame height is too low
- Flame has excessive movement.

WARNING!

Document any changes to the restrictor setting. Contact flare for additional support.

FLARE

FIREPLACES

ADJUSTING AIR SHUTTER

The correct fuel-air mixture in your Flare Fireplace produces yellow flame tips, with blue base and offers minimal soot buildup. The Fuel-air mixture is set by the factory, but may need adjustment by fireplace installer, depending on site conditions. **In all cases, it is recommended to verify inlet pressure to match recommended values, in addition to setting the air shutter on the burner.**

1. Identifying and locating the air shutter on your Flare Fireplace.

EX 1: ON THE BURNER



EX 2: UNDER YOUR FIREPLACE



- **Example 1:** If there is no access to the underside of the fireplace, the adjustment can be made from inside the fireplace, on the burner. Each burner (**up to three burners, on units 60" and above**) has a + and – sign located on it. In between that + and – sign is a Philips head screw or bolt that can be turned to either open or close the air shutter. **See Ex. 1 above for visual.**
- **Example 2:** The second option allows you to adjust your Flare Fireplaces air shutter by accessing it from directly underneath the fireplace. **See Ex. 2 above for visual**

Adjust the Air shutter if the Air to Fuel mixture is not correct:

- If the flame is yellow or orange and produces soot (low air leading to a rich flame) - Introduce more air by turning clockwise.
- The flame is very blue (too much air) - Reduce the air by turning counterclockwise.

Common reason air shutter adjustment may be needed:

- LP conversion has been done.
- High above sea level installation. High elevation with low oxygen in the air.
- Soot buildup on the glass or termination cap

FLARE FIREPLACES

VENTING INSTALLATION & PLANNING

Before installing the vent system, the installer must review these instructions to confirm the correct vent configuration has been selected. Use the tables and guidelines below to calculate all vent runs. Power-vent requirements are model-specific, so verify the appropriate tables for your burner type.

Use the provided charts to determine the correct restrictor setting. If the installation environment involves unusual pressure conditions, such as strong HVAC systems or kitchen hoods, a power-vent system may be required to ensure proper operation.

- Diagonal runs consider both vertical and horizontal when calculating the effects. Use rise for the vertical and run for the horizontal.
- Various combinations of vent runs may be used. Refer to the tables below based on fireplace size.
- The numbers in the table represent the restrictor setting based on the vent path.
- Symbol “X” in the table means the path will not draft naturally and will require power venting.
- Setting the restrictor to 1 means there is no restriction.
- Numbers in the table represent the restrictor setting to be set.
- Document the restrictor setting configuration prior to leaving the installation site.
- The tables apply to both NG (Natural Gas) and Propane.
- Minimum 3 ft vertical run (A) required before any bend or turn.
- A maximum of **four** 90° vent elbows are allowed in the vent run. Any configuration with more than 4 elbows requires vent review and approval from Flare Fireplaces.
- Two 45° elbows may be used in place of one 90° elbow.
- The tables represent the manufacturer’s guideline based on testing and design. Additional external factors may affect the restrictor choice needed. If flames appear to be not typical, please contact Flare Fireplaces for restrictor recommendations.
- Use the empty table in the page below to document and calculate the installation vent path.
- Any venting pathway that does not appear in the tables below require approval from Flare Fireplaces.

NOTICE



For optimum performance and flame appearance, keep the vent length to a minimum and limit the number of elbows.

FLARE FIREPLACES

FLARE 30R/30H/PASSAGE

Suitable for all 30R/30H/30EH

Length Calculation Guide
Y-Effective Axis Parameters
A - 1st Flue Length (3 ft. Minimum Rise)
B - Vertical Flue Length
C - Roof Terminal = 1.5 ft.
H - Small Elbow (45°) = 1 ft.
X-Effective Axis Parameters
D - Horizontal Flue Length
E - Elbow (90°) = 3 ft.
F - Elbow (Lying 90°) = 6 ft.
G - Wall Terminal = 3 ft.

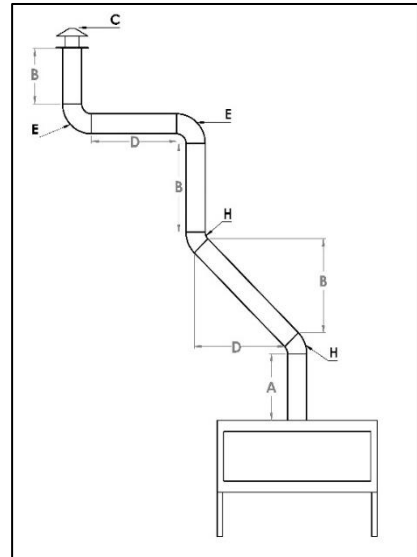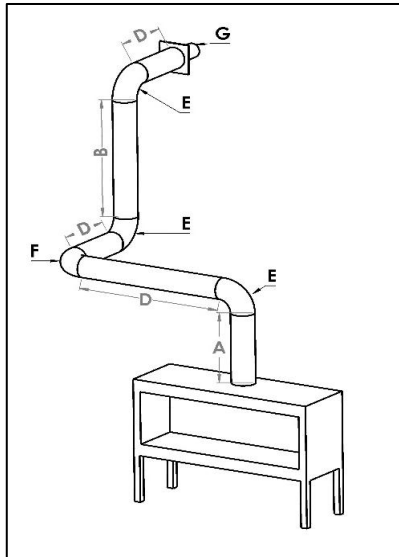

Vent Restrictor Setting: Determined by calculation of the unique run. Set to 1, 2, 3, 4, 5, 6 using chart below. An X requires the run to be power vented.



Y- Effective Vertical Length	X- Effective Horizontal Length													
	FEET	0	3	6'	10'	13'	17'	20'	23'	26'	30'	33'	36'	39'
3'	3	2	1	1	1	1	1	1	1	1	X	X	X	X
6'	3	2	2	1	1	1	1	1	1	1	1	1	X	X
10'	3	2	2	1	1	1	1	1	1	1	1	1	1	1
13'	2	2	1	1	1	1	1	1	1	1	1	1	1	1
16'	2	1	1	1	1	1	1	1	1	1	1	1	1	1
19'	2	1	1	1	1	1	1	1	1	1	1	1	1	1
23'	2	1	1	1	1	1	1	1	1	1	1	1	X	X
26'	1	1	1	1	1	1	1	1	1	1	1	1	X	X
30'	1	1	1	1	1	1	1	1	1	1	X	X	X	X
33'	1	1	1	1	1	1	1	1	1	1	X	X	X	X
36'	1	1	1	1	1	1	1	X	X	X	X	X	X	X
39'	1	1	1	1	1	1	1	X	X	X	X	X	X	X
43'	1	1	1	1	1	1	1	X	X	X	X	X	X	X
46'	1	1	1	1	1	1	1	X	X	X	X	X	X	X
50'	1	1	1	1	1	1	1	X	X	X	X	X	X	X

FLARE FIREPLACES

FLARE 45R/45H/45EH

Suitable for all 45R/45H/45EH Fireplaces

Length Calculation Guide
Y-Effective Axis Parameters
A - 1st Flue Length (3 ft. Minimum Rise)
B - Vertical Flue Length
C - Roof Terminal = 1.5 ft.
H - Small Elbow (45°) = 1 ft.
X-Effective Axis Parameters
D - Horizontal Flue Length
E - Elbow (90°) = 3 ft.
F - Elbow (Lying 90°) = 6 ft.
G - Wall Terminal = 3 ft.

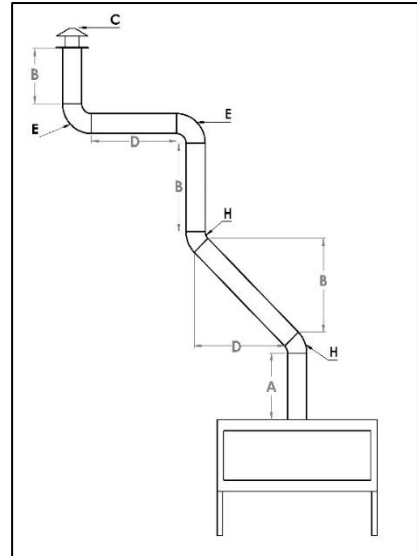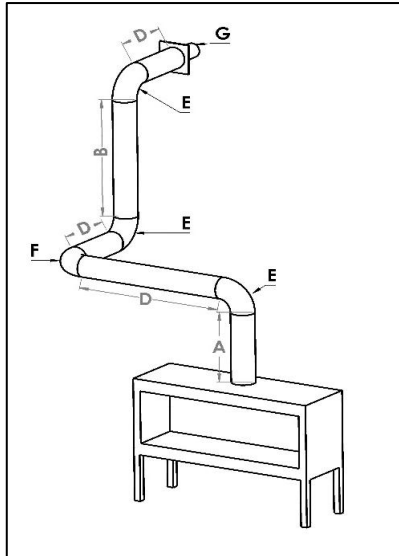

Vent Restrictor Setting: Determined by calculation of the unique run. Set to 1, 2, 3, 4, 5, 6 using chart below. An X requires the run to be power vented.



Y-Effective Vertical Length	Flare 45/45H/45EH FEET	X- Effective Horizontal Length												
		0	3	6'	10'	13'	17'	20'	23'	26'	30'	33'	36'	39'
3'	1	1	1	1	1	1	1	1	1	X	X	X	X	X
6'	3	2	2	1	1	1	1	1	1	X	X	X	X	X
10'	3	2	2	1	1	1	1	1	1	1	1	X	X	X
13'	2	2	2	1	1	1	1	1	1	1	1	1	1	X
16'	2	1	1	1	1	1	1	1	1	1	1	1	1	X
19'	2	1	1	1	1	1	1	1	1	1	1	1	X	X
23'	1	1	1	1	1	1	1	1	1	1	1	X	X	X
26'	1	1	1	1	1	1	1	1	1	1	X	X	X	X
30'	1	1	1	1	1	1	1	1	1	X	X	X	X	X
33'	1	1	1	1	1	1	1	1	1	X	X	X	X	X
36'	1	1	1	1	1	1	1	1	1	X	X	X	X	X
39'	1	1	1	1	1	1	1	1	X	X	X	X	X	X
43'	1	1	1	1	1	1	1	1	X	X	X	X	X	X
46'	1	1	1	1	1	1	1	X	X	X	X	X	X	X
50'	1	1	1	1	1	1	1	X	X	X	X	X	X	X

FLARE FIREPLACES

FLARE 50R/50H/50EH

Suitable for all 50R/50H/50EH Fireplaces

Length Calculation Guide
Y-Effective Axis Parameters
A - 1st Flue Length (3 ft. Minimum Rise)
B - Vertical Flue Length
C - Roof Terminal = 1.5 ft.
H - Small Elbow (45°) = 1 ft.
X-Effective Axis Parameters
D - Horizontal Flue Length
E - Elbow (90°) = 3 ft.
F - Elbow (Lying 90°) = 6 ft.
G - Wall Terminal = 3 ft.

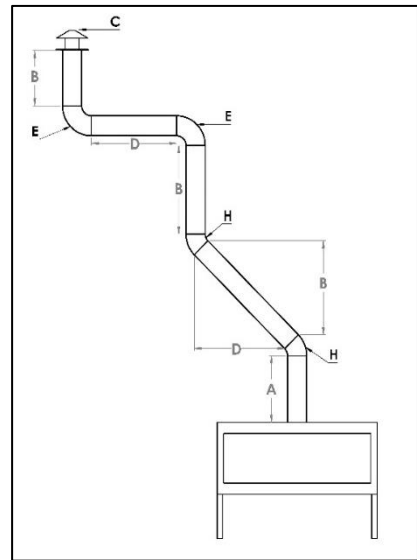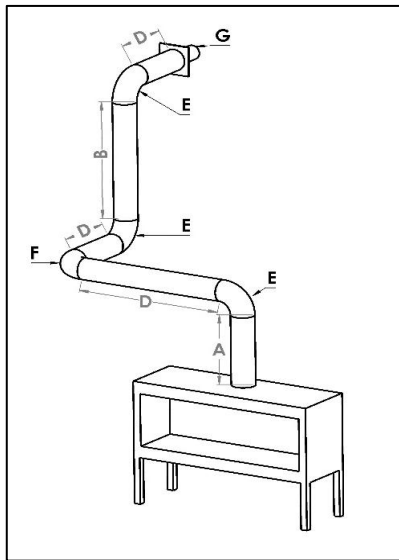

Vent Restrictor Setting: Determined by calculation of the unique run. Set to 1, 2, 3, 4, 5, 6 using chart below. An X requires the run to be power vented.



Y-Effective Vertical Length	Flare 50/50H	X- Effective Horizontal Length												
	FEET	0	3	6'	10'	13'	17'	20'	23'	26'	30'	33'	36'	39'
3'	2	2	2	2	1	1	1	1	1	1	1	1	X	X
6'	3	3	2	2	2	2	1	1	1	1	1	1	1	1
10'	3	3	2	2	2	2	1	1	1	1	1	1	1	1
13'	3	3	2	2	2	1	1	1	1	1	1	1	1	1
16'	3	3	2	2	2	1	1	1	1	1	1	1	1	1
19'	2	2	2	2	2	1	1	1	1	1	1	1	1	1
23'	2	2	2	2	1	1	1	1	1	1	1	1	1	1
26'	2	2	2	2	1	1	1	1	1	1	1	1	1	1
30'	2	2	2	1	1	1	1	1	1	1	1	1	1	1
33'	1	1	1	1	1	1	1	1	1	1	1	1	1	1
36'	1	1	1	1	1	1	1	1	1	1	X	X	X	
39'	1	1	1	1	1	1	1	1	1	1	X	X	X	
43'	1	1	1	1	1	1	1	1	1	1	X	X	X	
46'	1	1	1	1	1	1	1	1	1	X	X	X	X	
50'	1	1	1	1	1	1	1	1	1	X	X	X	X	

FLARE FIREPLACES

FLARE 60R/60H/60EH

Suitable for all 60R/60H/60EH Fireplaces

Length Calculation Guide	
Y-Effective Axis Parameters	
A - 1st Flue Length (3 ft. Minimum Rise)	
B - Vertical Flue Length	
C - Roof Terminal = 1.5 ft.	
H - Small Elbow (45°) = 1 ft.	
X-Effective Axis Parameters	
D - Horizontal Flue Length	
E - Elbow (90°) = 3 ft.	
F - Elbow (Lying 90°) = 6 ft.	
G - Wall Terminal = 3 ft.	

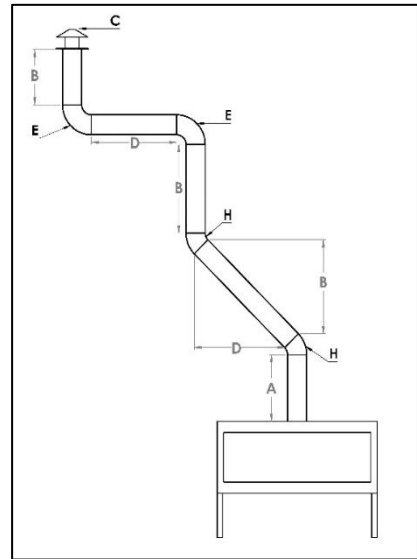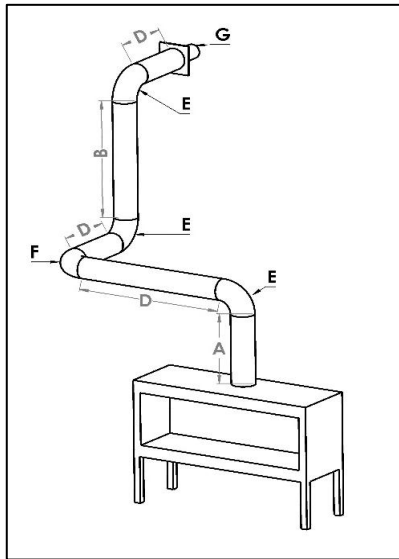

Vent Restrictor Setting: Determined by calculation of the unique run. Set to 1, 2, 3, 4, 5, 6 using chart below. An X requires the run to be power vented.



Y-Effective Vertical Length	Flare 60/60H	X- Effective Horizontal Length												
	FEET	0	3	6'	10'	13'	17'	20'	23'	26'	30'	33'	36'	39'
3'	2	2	1	1	1	1	1	1	1	1	1	X	X	X
6'	3	3	2	1	1	1	1	1	1	1	1	1	1	X
10'	2	2	2	1	1	1	1	1	1	1	1	1	1	1
13'	2	2	2	2	1	1	1	1	1	1	1	1	1	1
16'	2	2	2	1	1	1	1	1	1	1	1	1	1	1
19'	2	2	1	1	1	1	1	1	1	1	1	1	1	1
23'	2	2	1	1	1	1	1	1	1	1	1	1	1	1
26'	1	1	1	1	1	1	1	1	1	1	1	1	1	1
30'	1	1	1	1	1	1	1	1	1	1	1	1	1	1
33'	1	1	1	1	1	1	1	1	1	1	X	X	X	X
36'	1	1	1	1	1	1	1	1	1	1	X	X	X	X
39'	1	1	1	1	1	1	1	1	1	1	X	X	X	X
43'	1	1	1	1	1	1	1	1	1	X	X	X	X	X
46'	1	1	1	1	1	1	1	1	1	X	X	X	X	X
50'	1	1	1	1	1	1	1	1	1	X	X	X	X	X

FLARE FIREPLACES

FLARE 70R/70H/70EH

Suitable for all Flare 70R/70H/70EH Fireplaces

Length Calculation Guide	
Y-Effective Axis Parameters	
A	1st Flue Length (3 ft. Minimum Rise)
B	Vertical Flue Length
C	Roof Terminal = 1.5 ft.
H	Small Elbow (45°) = 1 ft.
X-Effective Axis Parameters	
D	Horizontal Flue Length
E	Elbow (90°) = 3 ft.
F	Elbow (Lying 90°) = 6 ft.
G	Wall Terminal = 3 ft.

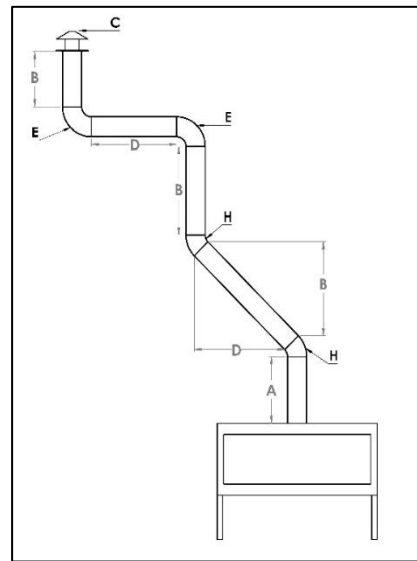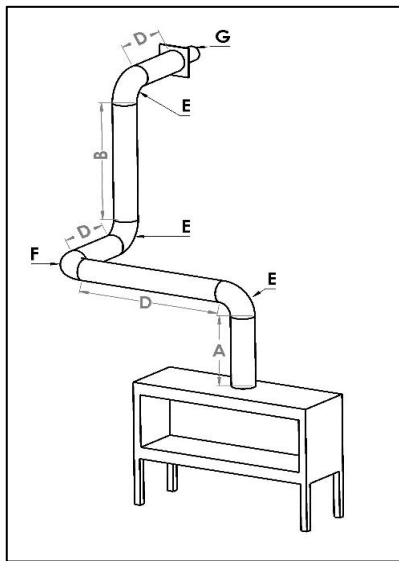

Vent Restrictor Setting: Determined by calculation of the unique run. Set to 1, 2, 3, 4, 5, 6 using chart below. An X requires the run to be power vented.



Y-Effective Vertical Length	X- Effective Horizontal Length													
	FEET	0	3'	6'	10'	13'	17'	20'	23'	26'	30'	33'	36'	39'
3'	1	1	1	1	1	1	1	1	1	1	X	X	X	X
6'	2	2	1	1	1	1	1	1	1	1	1	X	X	X
10'	3	2	1	1	1	1	1	1	1	1	1	1	1	X
13'	3	2	1	1	1	1	1	1	1	1	1	1	1	X
16'	2	2	1	1	1	1	1	1	1	1	1	1	1	1
19'	2	2	1	1	1	1	1	1	1	1	1	1	1	X
23'	2	1	1	1	1	1	1	1	1	1	1	1	X	X
26'	1	1	1	1	1	1	1	1	1	1	1	X	X	X
30'	1	1	1	1	1	1	1	1	1	1	1	X	X	X
33'	1	1	1	1	1	1	1	1	1	X	X	X	X	X
36'	1	1	1	1	1	1	1	1	1	X	X	X	X	X
39'	1	1	1	1	1	1	1	1	X	X	X	X	X	X
43'	1	1	1	1	1	1	1	1	X	X	X	X	X	X
46'	1	1	1	1	1	1	1	1	X	X	X	X	X	X
50'	1	1	1	1	1	1	1	1	X	X	X	X	X	X

FLARE FIREPLACES

FLARE 80R/80H/80EH

Suitable for all Flare 80R/80H/80EH Fireplaces

Length Calculation Guide
Y-Effective Axis Parameters
A - 1st Flue Length (6ft. Minimum Rise)
B - Vertical Flue Length
C - Roof Terminal = 1.5 ft.
H - Small Elbow (45°) = 1 ft.
X-Effective Axis Parameters
D - Horizontal Flue Length
E - Elbow (90°) = 3 ft.
F - Elbow (Lying 90°) = 6 ft.
G - Wall Terminal = 3 ft.

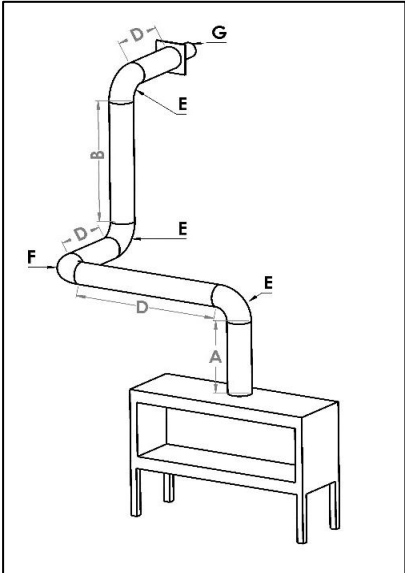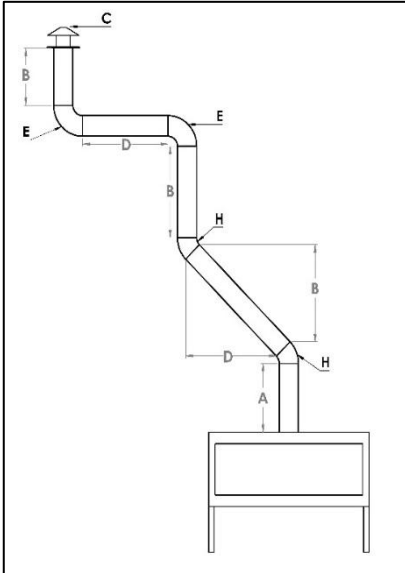Vent Restrictor Setting: Determined by calculation of the unique run. Set to 1, 2, 3, 4, 5, 6 using chart below. An X requires the run to be power vented.

		X- Effective Horizontal Length												
		0	3'	6'	10'	13'	17'	20'	23'	26'	30'	33'	36'	39'
Y- Effective Vertical Length	FEET	X	X	X	X	X	X	X	X	X	X	X	X	X
	3'	2	1	1	1	1	1	X	X	X	X	X	X	X
	6'	2	2	1	1	1	1	1	1	X	X	X	X	X
	10'	2	2	1	1	1	1	1	1	1	X	X	X	X
	13'	2	1	1	1	1	1	1	1	1	X	X	X	X
	16'	2	1	1	1	1	1	1	1	1	X	X	X	X
	19'	2	1	1	1	1	1	1	1	1	X	X	X	X
	23'	1	1	1	1	1	1	1	1	1	1	X	X	X
	26'	1	1	1	1	1	1	1	1	1	1	1	X	X
	30'	1	1	1	1	1	1	1	1	1	1	X	X	X
	33'	1	1	1	1	1	1	1	1	1	X	X	X	X
	36'	1	1	1	1	1	1	1	1	X	X	X	X	X
	39'	1	1	1	1	1	1	1	1	X	X	X	X	X
	43'	1	1	1	1	1	1	1	X	X	X	X	X	X
	46'	1	1	1	1	1	1	X	X	X	X	X	X	X
50'	1	1	1	1	1	1	X	X	X	X	X	X	X	



FLARE

FIREPLACES

FLARE 100/100H/100EH

Suitable for all Flare 100/100H/100EH Fireplaces

Length Calculation Guide
Y-Effective Axis Parameters
A - 1st Flue Length (6ft. Minimum Rise)
B - Vertical Flue Length
C - Roof Terminal = 1.5 ft.
H - Small Elbow (45°) = 1 ft.
X-Effective Axis Parameters
D - Horizontal Flue Length
E - Elbow (90°) = 3 ft.
F - Elbow (Lying 90°) = 6 ft.
G - Wall Terminal = 3 ft.

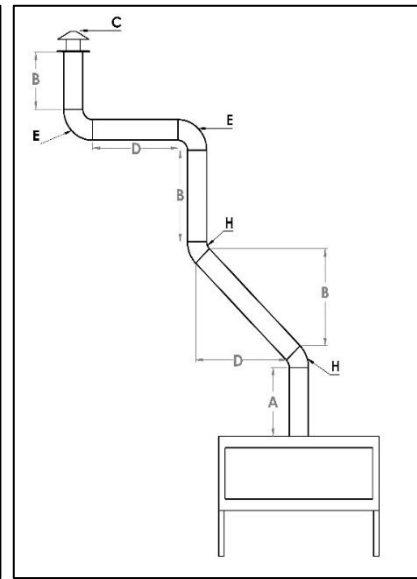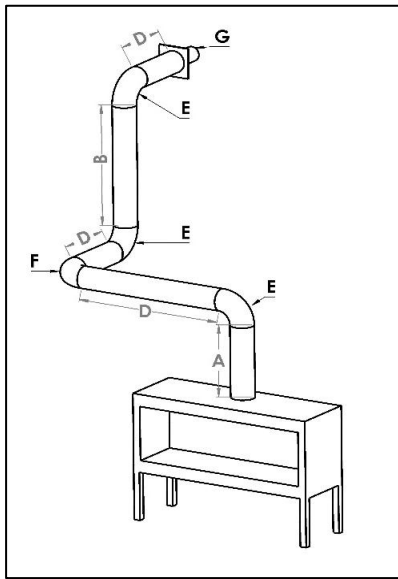

Vent Restrictor Setting: Determined by calculation of the unique run. Set to 1, 2, 3, 4, 5, 6 using chart below. An X requires the run to be power vented.

Y-Effective Vertical Length	X- Effective Horizontal Length													
	FEET	0	3	6'	10'	13'	17'	20'	23'	26'	30'	33'	36'	39'
3'	X	X	X	X	X	X	X	X	X	X	X	X	X	X
6'	2	1	1	1	1	1	X	X	X	X	X	X	X	X
10'	2	2	1	1	1	1	1	1	X	X	X	X	X	X
13'	2	2	1	1	1	1	1	1	1	X	X	X	X	X
16'	2	1	1	1	1	1	1	1	1	X	X	X	X	X
19'	2	1	1	1	1	1	1	1	1	X	X	X	X	X
23'	1	1	1	1	1	1	1	1	1	1	X	X	X	X
26'	1	1	1	1	1	1	1	1	1	1	1	X	X	X
30'	1	1	1	1	1	1	1	1	1	1	X	X	X	X
33'	1	1	1	1	1	1	1	1	1	X	X	X	X	X
36'	1	1	1	1	1	1	1	1	X	X	X	X	X	X
39'	1	1	1	1	1	1	1	1	X	X	X	X	X	X
43'	1	1	1	1	1	1	1	X	X	X	X	X	X	X
46'	1	1	1	1	1	1	X	X	X	X	X	X	X	X
50'	1	1	1	1	1	1	X	X	X	X	X	X	X	X


FLARE

FIREPLACES

POWER VENTING

For unsupported vent routes (based on the gravity vent tables above) a power venting solution is required. The power venting solutions allow Flare Fireplaces to operate in vent conditions that would not be possible without the motor unit. See the [Flare Power Vent Installation Manual](#) for more specific instructions.

The system is designed and tested with DuraVent 3x5 gasket direct vent pipes. It is critical for the safety and operation of the system to use the DuraVent 3x5 gasket system.

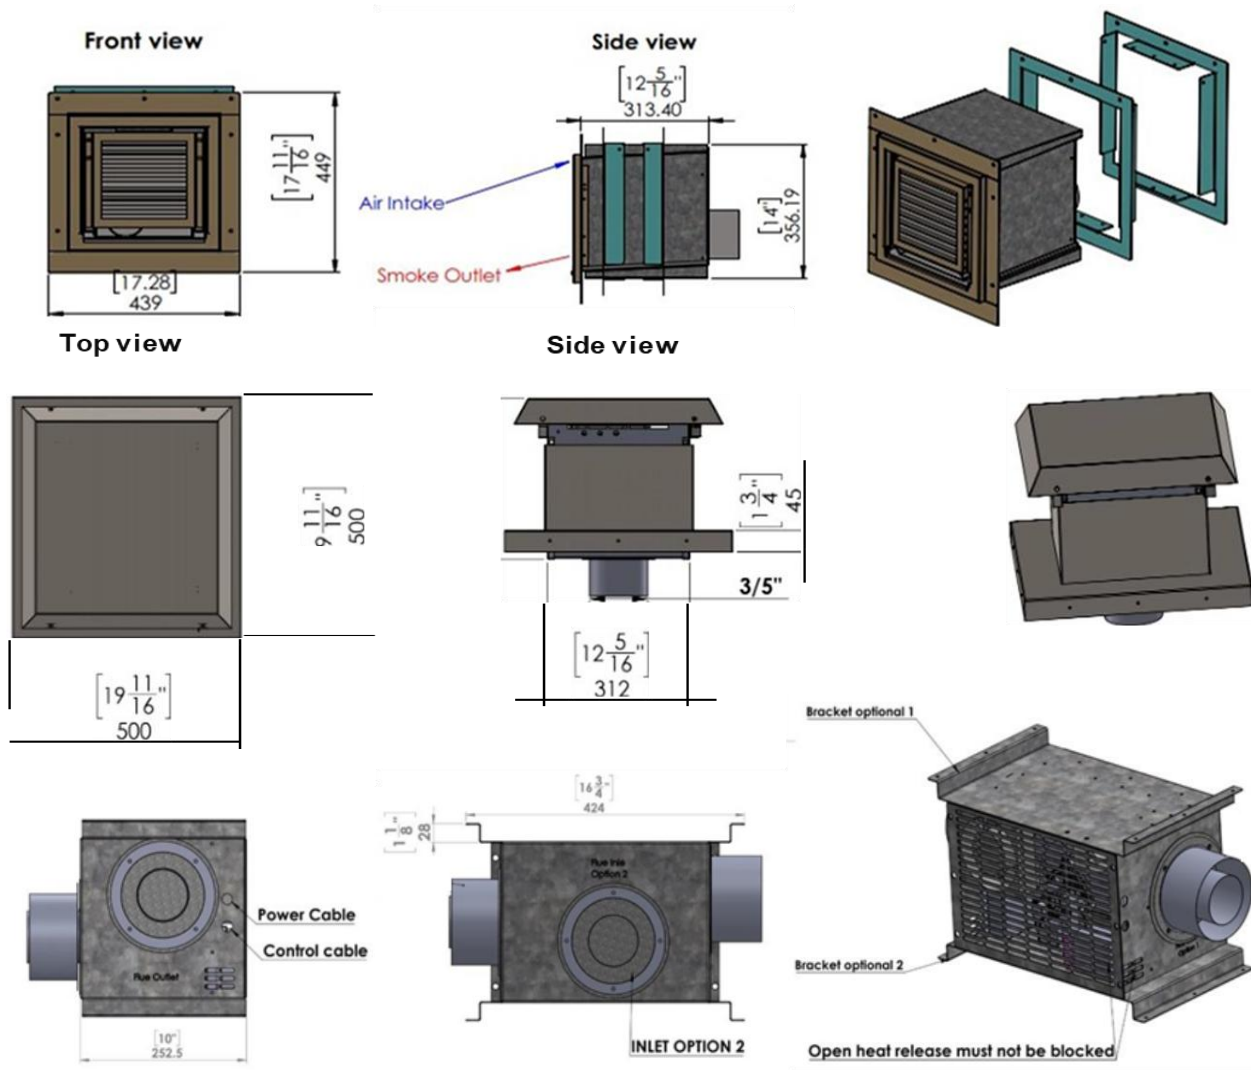


FLARE FIREPLACES

When using the power vent system, direction of flow through the vents can be up, down, horizontal or diagonal since the system is sealed and vacuumed. The vent restrictor level should be set based on length in feet, number of elbows and the vent termination.

NOTICE

A minimum length of **12ft venting** is required between the Fireplace and the SK, Flare Fireplaces sizes **30"-70"**. A minimum length of **15ft**, Flare sizes **80"-100"**, is required between the fireplace and the SK. For more information, please reference the [Power Vent Installation Manual](#).

Clearance - Clearances between the vent pipe and combustible materials must be maintained at 3" inches top and 1" for side and below. Maintain the same clearance from the power vent box to any combustible materials.

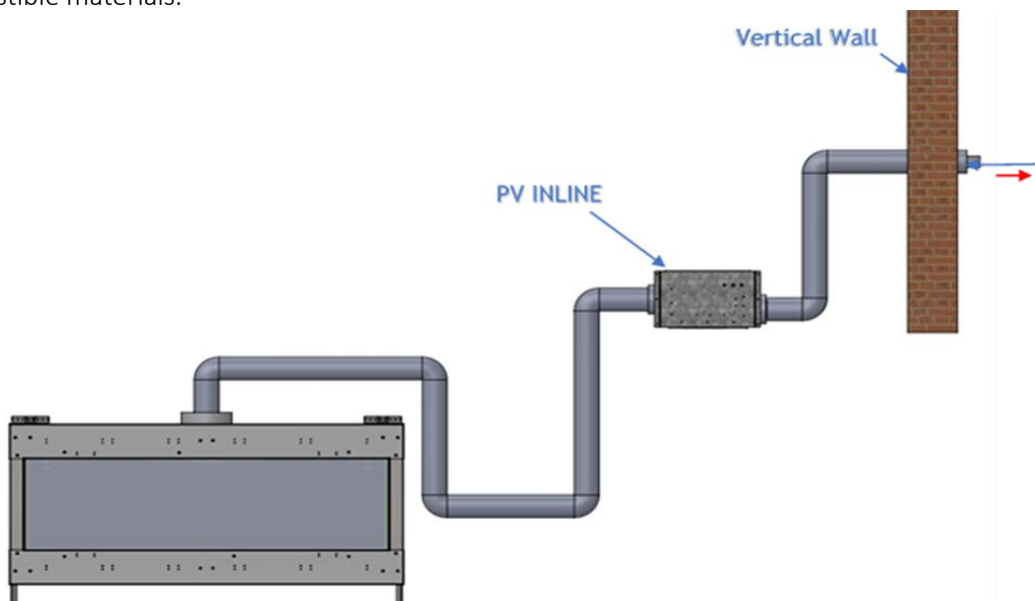



WARNING

A power vented unit must be installed by a qualified installer in accordance with these instructions. CAUTION! Failure to install, operate, and maintain the power venting system in accordance with manufacturer's instructions will result in conditions which may produce bodily injury and/or property damage.

FLARE FIREPLACES

ELECTRICAL CONNECTION TO THE POWER VENT SYSTEM


- The PV system will be getting 115V from the Flare Fireplace board.
- The PV system is connected to the Fireplace control system with a **high voltage 4 wire cable** - labeled below as connection “PV Power 115V”.
- Cable to be used is 16 AWG-4 copper wire. Cable is not included with the PV kit and can be sourced separately.
- Connect 4 wire high voltage cable from the Power Vent to matching colors - white to white, black to black & green to green and red to red on the PV system.
- The Flare Fireplaces Fan board is a must for operating a Flare Fireplace with a PV system.

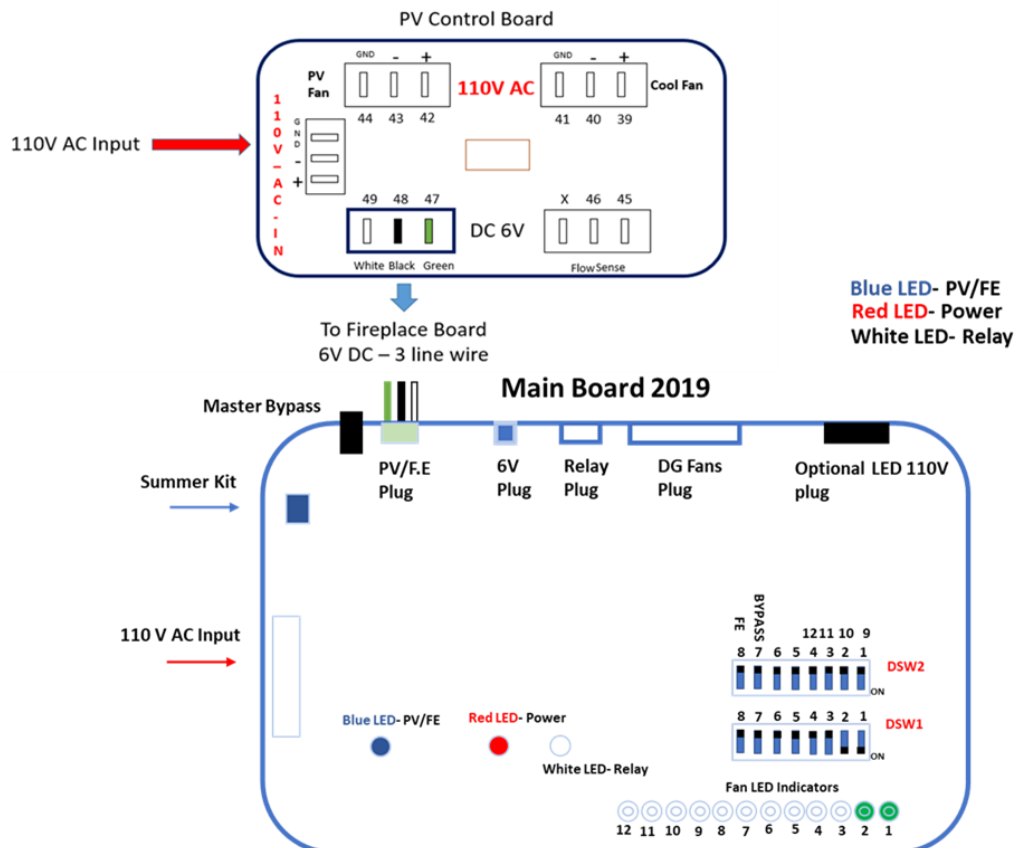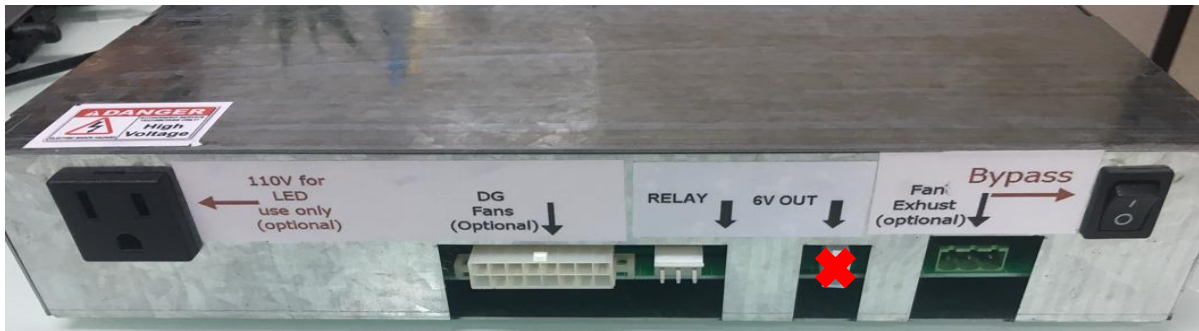

FLARE

FIREPLACES

POWER VENT BOARD ELECTRICAL WIRING DRAWING

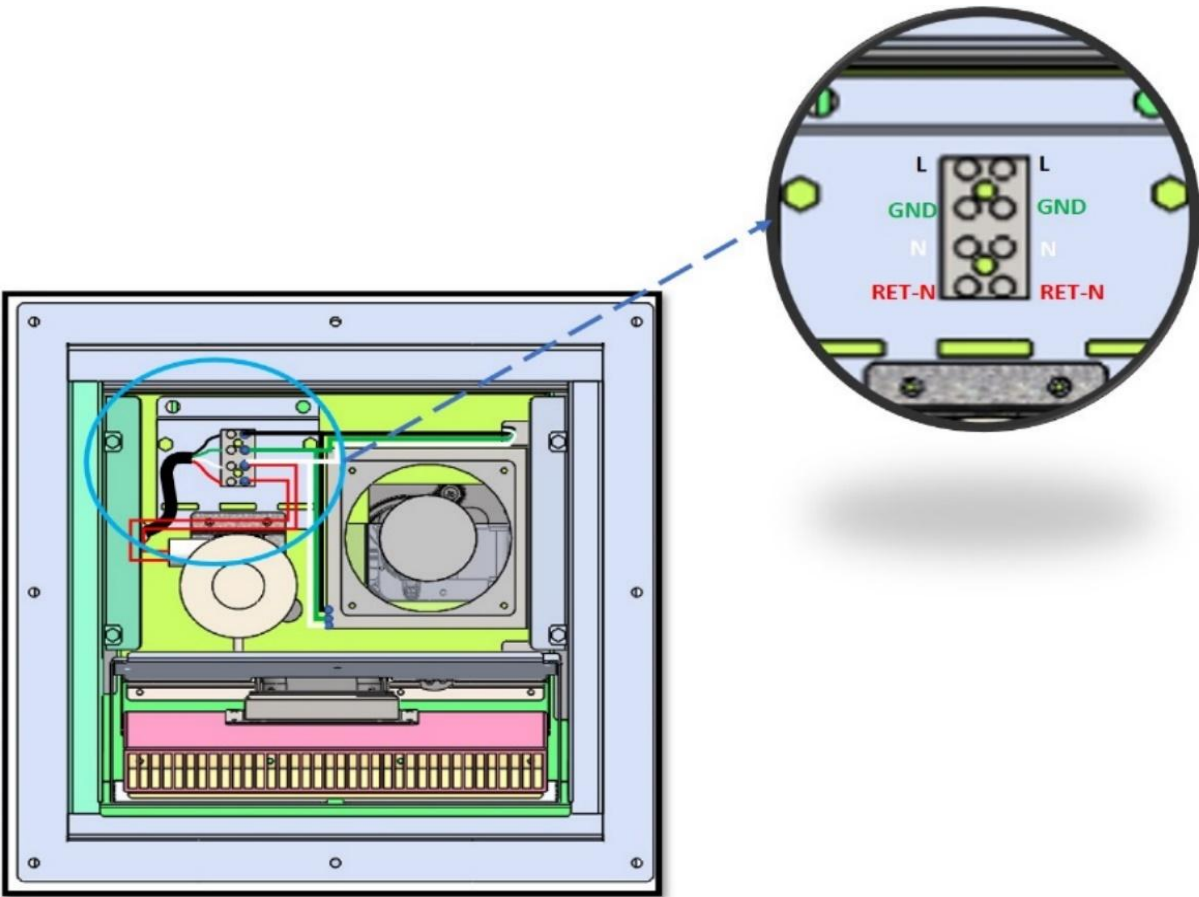

FLARE

FIREPLACES

GAS REQUIREMENTS

WARNING! Risk of Fire or Explosion!
All gas handling and installation should be performed by qualified service technician or installer.
Gas build-up during line purge could ignite. Ensure adequate ventilation. Make sure there are no ignition sources/sparks or open flames.
Do not change the gas valve setting! The fireplace gas valve has been preset at the factory.
Installing an external manual gas valve before connection to the fireplace is necessary.
Check for gas leaks before lighting the fireplace for the first time. Do not use open flame for test.

This appliance and its individual shut off valve must be disconnected from gas supply piping system during any pressure testing of that system at test pressures more than ½ psig (3.5 kPa). This appliance must be isolated from the gas supply piping system by closing its individual manual shut off valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psig (3.5 kPa).

- Move the appliance into position and secure it to the wall using the back or side mount.
- Install a manual gas valve before the connection to the fireplace appliance automatic valve.
- Connect the gas line to the fireplace. The appliance is designed to accept a 1/2" (13mm) gas supply.
- Connect the gas supply in accordance with local codes, CAN/CSA-B149.1 in Canada or to the current National Fuel Gas Code, ANSI Z223.1 / NFPA 54 in the United States.
- Check for gas leaks using non-corrosive commercially available leak-check solution before operating the gas appliance.
- Measure and document gas pressure here: Inlet _____ W.C. Burner (Manifold) _____ W.C. -- Make sure the Min/Max inlet pressure matches the table below.
- Lighting the fireplace for the first time may take some time until the line is purged.

Gas Pressure	Natural Gas	Propane
Inlet pressure	7.0" W.C	10". W.C

Do not place gas valves above the burner line of the fireplace

WARNING! Risk of Fire or Explosion! High pressure will damage the valve. Low pressure could cause an explosion.


Verify inlet pressures - Verify minimum pressures when other household gas appliances are operating

FLARE

FIREPLACES

SIT PROFLAME II GAS VALVE LAYOUT

Have the gas supply line installed in accordance with local codes, if any. If not available, follow ANSI 223.1. Installation should be done by a qualified installer approved and/or licensed as required by the locality (in the Commonwealth of Massachusetts installation must be performed by a licensed plumber or gas fitter).

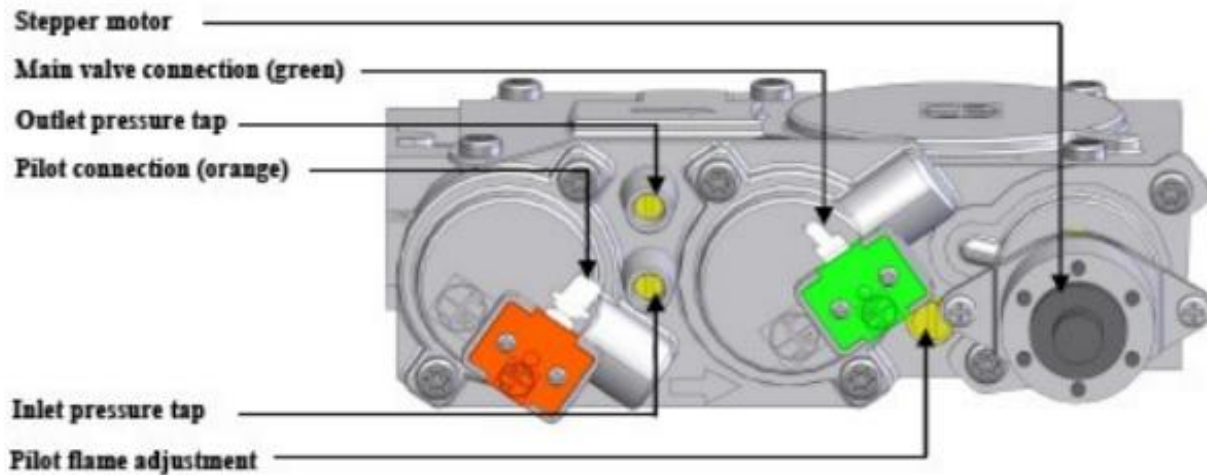

FLARE

FIREPLACES

USING A REDUCER TO DE-RATE YOUR FLARE FIREPLACE

Flare Fireplaces appliances use the SIT ProFlame II valve and are evaluated/approved for installations at elevations of 0–4500 feet (0–1372 meters) above sea level using the standard burner orifice sizes. At the time of installation, it must be determined by the installer if the appliance needs to be de-rated for elevations above 4500 feet.

Contact your local gas supplier for the de-rating requirements in your area. Only use the Flare Fireplaces de-rating reducer on installations above 4500 Ft. **If the installer must convert the unit to adjust for varying altitudes, the information sticker must be filled out by the installer and adhered to the appliance at the time of conversion.**

DERATE TABLE


MODEL	GAS TYPE	REDUCER SIZE	CALC BTU.	STANDARD BTU
25"	LPG	1.6 mm	18000	23000
30"	LPG	1.6 mm	18000	23000
45"	LPG	1.9 mm	22000	28000
50"	LPG	2.0 mm	27000	35000
60"	LPG	2.2 mm	36000	43000
70"	LPG	2.5 mm	38000	45000
80"	LPG	2.7 mm	42000	49000
100"	LPG	2.9 mm	51000	57000
25"	NG	3.0 mm	27000	33000
30"	NG	3.0 mm	27000	33000
45"	NG	3.2 mm	30000	36000
50"	NG	3.5 mm	35000	45000
60"	NG	3.8 mm	40000	51000
70"	NG	4.1 mm	44000	52000
80"	NG	4.5 mm	48000	55000
100"	NG	4.7 mm	49000	57000

FLARE FIREPLACES


ADDING THE FLARE FIREPLACES DE-RATING REDUCER

Add the de-rating reducer when your fireplace is being installed at elevations over 4500 ft above sea level. Please contact your local gas supplier for de-rating requirements in your area.

1. Shut off gas, remove power, and locate your gas valve. Once disconnected, verify direction of gas flow by locating the flow-arrow on top of the valve. Turn off gas and remove hard line to valve. **SEE EXAMPLE 1**

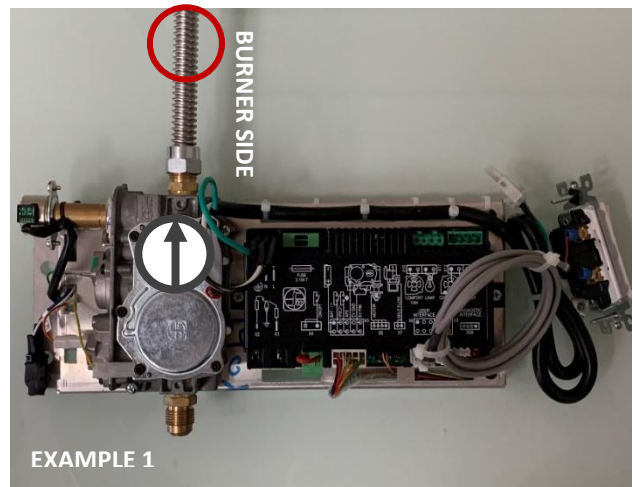

2. Add reducer between gas hard line and flex line connected to SIT ProFlame II valve on the burner side. Use appropriate reducer as specified in "DERATE TABLE". **SEE EXAMPLE 2**

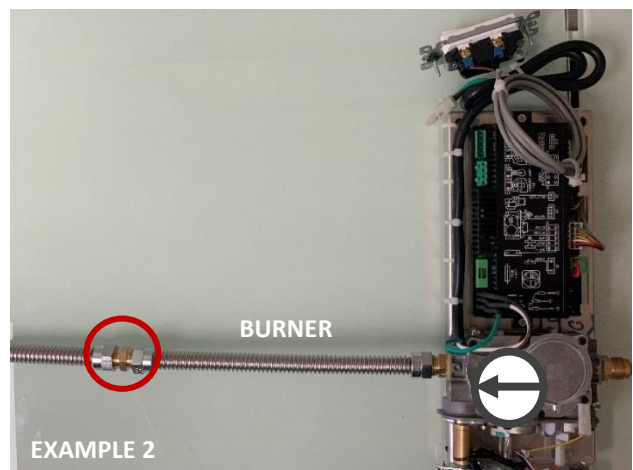

FLARE

FIREPLACES

ORIFICE SIZE

Flare Fireplace appliances are evaluated and approved for installations at elevations of 0–4500 feet (0–1372 meters) above sea level using the standard burner orifice sizes. At the time of installation, it must be determined if the appliance needs to be de-rated. Contact your local gas supplier for derating requirements for your area. De-rated installation consideration can start at 2000 Ft above sea level. At higher elevations, the amount of BTU fuel value delivered must be reduced by either using gas that has been de-rated by the gas company or by changing the burner orifice to a smaller size as regulated by the local authorities that have jurisdiction and by the (USA) National Fuel Gas Code NFPA 54/ANSI Z223.1 - latest edition or in Canada, the CAN/CSA-B149.1 code – latest edition.

MANUAL GAS SHUT OFF

The installation of this appliance **REQUIRES** the implementation of a readily accessible Manual Gas Shut Off. Confirm requirements of location and shut off type with your local codes.

NOTICE

The Electronic Ignition of Flare Fireplaces does not satisfy the requirement for a Manual Gas Shut Off. See below for example of Manual Gas Shut Off



FLARE FIREPLACES

LIQUID PROPANE USAGE IN A FLARE FIREPLACE

The Flare Fireplace can operate and fire using Natural Gas (Default) or Liquid Propane gas. If your installation requires the fireplace to operate using Liquid Propane gas, make sure only to use the Flare Fireplaces liquid propane conversion kit.

Depending on your fireplace ignition system, LPG conversion kit may include the following:

- LPG burner orifices
- Pilot LPG orifices
- SIT Valve LPG Conversion Kit

Never operate a fireplace ordered for natural gas with LP gas unless converted by a certified fireplace technician. Use only Flare Fireplace LP conversion kit. Always measure gas inlet pressure and outlet pressure post conversion

Your fireplace may be shipped to support Liquid Propane Gas. Check your Flare Fireplaces gas rating plate at the back of your valve to confirm the gas type.

SIT NG - LP CONVERSION



SIT NG - LP MOTOR



WARNING!

Flare Fireplaces does offer the ability to run your fireplace with a liquid propane tank though there are certain limitations this fuel type presents when compared to the usage of natural gas. Liquid propane burns more efficiently and hotter than natural gas so to accommodate this increase in heat we must use smaller orifices to achieve a lower BTU that can cause your flame to appear smaller than on a unit run on natural gas. Flame height on Flare Fireplaces using Liquid Propane is roughly 4-6" in height because of this adjustment.

FLARE FIREPLACES

COMMONWEALTH OF MASSACHUSETTS

The following requirements reference various Massachusetts and national codes not contained in this manual. For all sidewall horizontally vented gas fueled equipment installed in every dwelling, building or structure used in whole or in part for residential purposes, including those owned or operated by the Commonwealth and where the side wall exhaust vent termination is less than (7) feet above finished grade in the area of the venting, including but not limited to decks and porches, the following requirements shall be satisfied:

INSTALLATION OF CARBON MONOXIDE DETECTORS: At time of installation of side wall horizontally vented gas fueled equipment, the installing plumber or gasfitter shall observe that a hard-wired carbon monoxide detector with an alarm and battery back-up is installed on the floor level where the gas equipment is to be installed. In addition, the installing plumber or gasfitter shall observe that a battery operated or hard-wired carbon monoxide detector is installed on each additional level of the dwelling, building or structure served by the side wall horizontal vented gas fueled equipment. It shall be the responsibility of the property owner to secure the services of qualified licensed professionals for the installation of hard-wired carbon monoxide detectors. In the event that the side wall horizontally, vented gas fueled equipment is installed in a crawl space or attic, the hard-wired carbon monoxide detector with alarm and battery back-up may be installed on the next adjacent floor level. In the event that the requirements of this subdivision cannot be met at the time of completion of installation, the owner shall have a period of thirty (30) days to comply with the above requirements; provided, however, that during said thirty (30) day period, a battery-operated carbon monoxide detector with an alarm shall be installed.

APPROVED CARBON MONOXIDE DETECTORS: Each carbon monoxide detector as required in accordance with the above provisions shall comply with NFPA 720 and be ANSI/UL 2034 listed, and IAS certified.

SIGNAGE: A metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum of eight (8) feet above grade directly in line with the exhaust vent terminal for the horizontally vented gas fueled heating the appliance or equipment. The sign shall read, in print no less the one-half inch (1/2") in size, "GAS VENT DIRECTLY BELOW. KEEP CLEAR OF ALL OBSTRUCTIONS".

INSPECTION: The state or local gas inspector of the side wall horizontally vented gas fueled equipment shall not approve the installation unless, upon inspection, the inspector observes carbon monoxide detectors and signage installed in accordance with the provisions of 248 CMR 5.08 (2) (a) 1 through 4.

FLARE FIREPLACES

COMMON WEALTH OF MASSACHUSETTS

EXEMPTIONS: The following equipment is exempt from 248 CMR 5.08 (2) (a) 1 through 4: The equipment listed in Chapter 10 entitled “Equipment Not Required To Be Vented” in the most current edition of NFPA 54 as adopted by the Board; and Product Approved side wall horizontally vented gas fueled equipment installed in a room or structure separate from the dwelling, building or structure used in whole or in part for residential purposes.

MANUFACTURER REQUIREMENTS: Gas Equipment Venting System Provided: When the manufacturer of Product Approved side wall horizontally vented gas equipment provides a venting system design or venting system components with the equipment, the instructions provided by the manufacturer for installation of the equipment and the venting system shall include: Detailed instructions for the installation of the venting system design or the venting system components; and a complete parts list for the venting system design or venting system.

GAS EQUIPMENT VENTING SYSTEM NOT PROVIDED: When the manufacturer of Product Approved side wall horizontally vented gas equipment does not provide the parts for venting the flue gases, but identifies “special venting systems”, the following requirements shall be satisfied by the manufacturer: The referenced “special venting systems” instructions shall be included with the appliance or equipment installation instructions and; The “special venting systems” shall be Product Approved by the Board, and the instructions for that system shall include a parts list and detailed installation instructions. A copy of all installation instructions for all Product Approved side wall horizontally vented gas fueled equipment, all venting instructions, all parts lists for venting instructions, and/or all venting design instructions shall remain with the appliance or equipment at the completion of the installation.

FLARE FIREPLACES

TELEVISION MOUNTING ABOVE THE FIREPLACE

The Flare Fireplace frameless design directs the heat from the fireplace into the fireplace chase to be released from the top vent opening. The design allows for a relatively low temperature on the external wall above the fireplace. Follow the drawings and instructions below for suggested installation of a television above the fireplace.


- Electronic cables and wiring for the television and its accessories must run through the framing between non-combustible layers to prevent exposure to heat inside the fireplace cavity.
- It's critical wiring does not run over or on top of the fireplace.
- Placing insulation above the fireplace will result in a fire hazard.
- Area above the fireplace must remain free of obstruction to allow excess heat to be released.
- Electronic cables and wires must be anchored to the frame to prevent dropping on top of the Fireplace.
- TVs can be mounted flush, recessed, and with or without a mantel.
- Wires should be inserted into the recess from the top or sides to avoid proximity to the fireplace vent.
- Increasing the size of the heat release will relieve heat buildup and keep the TV cool.

WARNING!

Most television manufacturers advise against installing a TV above or near a fireplace. Mounting a television in this location is the owner's decision and responsibility. Flare assumes no liability for damage or performance issues affecting televisions, artwork, or other equipment placed near the appliance. It is the customer's responsibility to confirm that their TV or artwork can tolerate the wall temperatures present at the installation site.

FLARE FIREPLACES

TV INSTALL – FLAT EXAMPLE

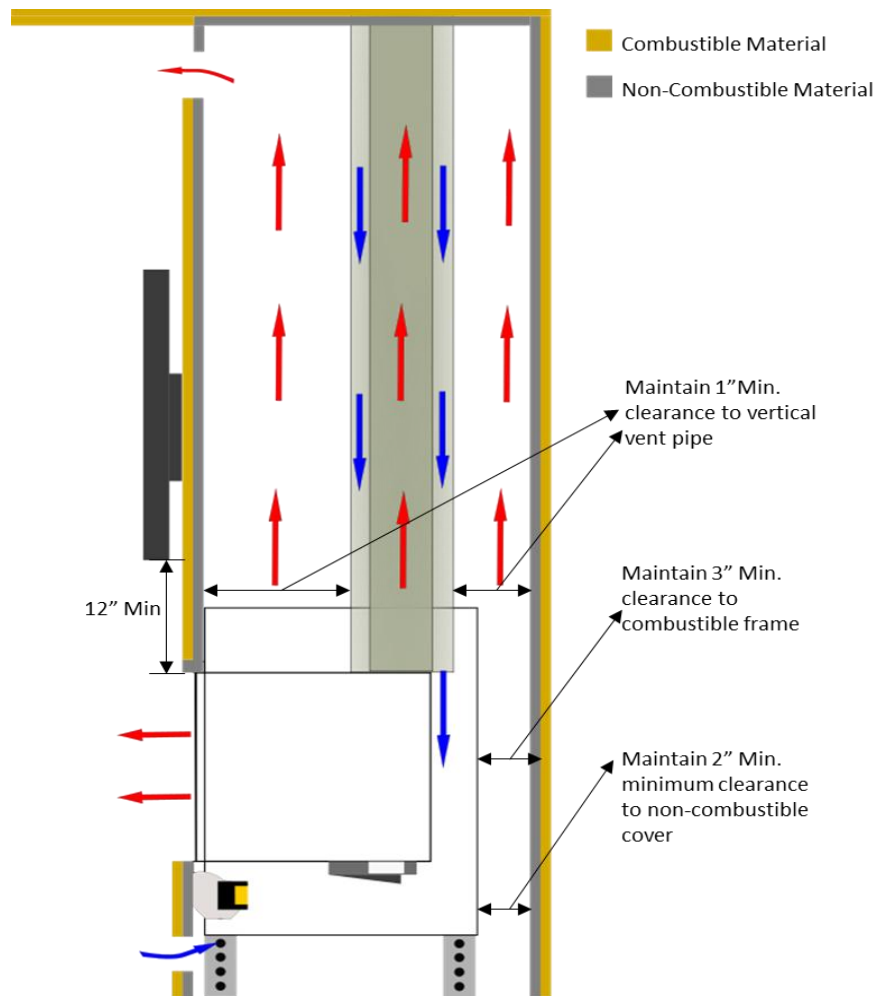

WARNING!


The example above is a general reference only. It does not represent every installation. Use the listed measurements as guidance for all units when determining flush television mounting locations.

WARNING – Maintain Open Air flow between the fireplace and drywall. Make sure cables or any other materials are not blocking hot air flow.

FLARE

FIREPLACES

TV INSTALL – RECESSED WITH FIREPLACE OVERHANG

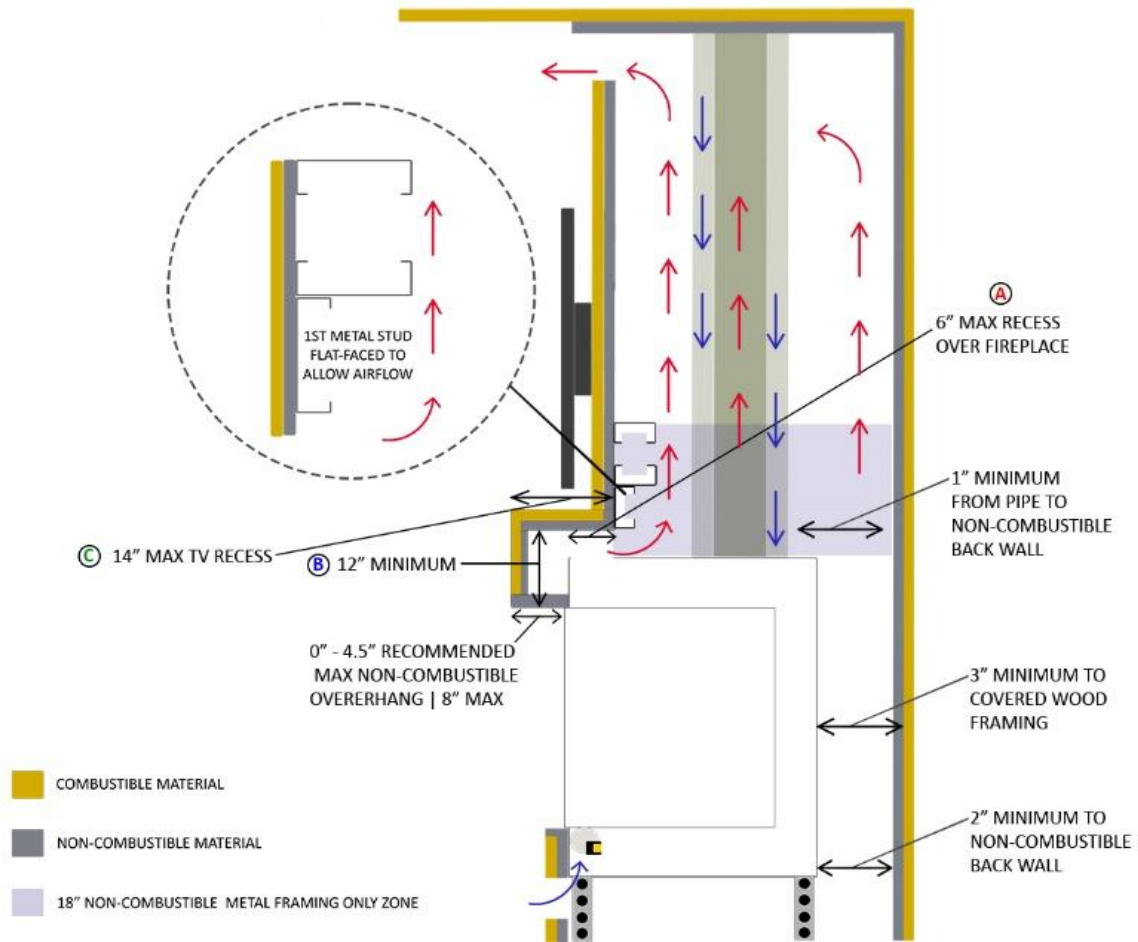

- A. Directly over the fireplace the television recess should be no deeper than 6" inches.
- B. A minimum of 12" above the top of the fireplace glass opening to the underside of the recess.
- C. Extending the overhang to the max of 8" and recessing into the cavity to the max of 6" can create an overhang up to 14" deep.

WARNING!

The example above is a general reference only. It does not represent every installation. Use the listed measurements as guidance for all units when determining flush television mounting locations.

WARNING – Maintain Open Air flow between the fireplace and drywall. Make sure cables or any other materials are not blocking hot air flow.

FLARE FIREPLACES

45-DEGREE ELBOW ON TOP OF FIREPLACE TO MAINTAIN CLEARANCE TO RECESS



When planning a TV recess, clearance to the vent pipe in the chase is critical and needs to be a minimum of 1" to the non-combustible recessed wall. This is to prevent heat from radiating from the vent to the recessed wall and being transferred to the TV. Due to the central location and diameter of the vent (8 inches) on our front facing & see-through models, one of the following solutions may be necessary to maintain the clearance requirement:

1. The television recess should be no more than 6" inches deep, **12" above the top of the fireplace glass opening**. You must maintain a 1" clearance from your recess to the vent pipe to prevent overheating.
2. Install two 45 elbows directly above the fireplace followed by a minimum 4 ft vertical vent rise. The two small elbows will move the vertical section back 5 5/8". Note that the 1-inch clearance from the vent applies also to the back non-combustible wall.
3. Do not use any elbow with an angle larger than 45 degrees.
4. A **4 ft** minimum vertical vent rise must be used after the **two 45-degree** elbows on fireplaces sized between **30"** and **70"**. A **6 ft** minimum rise will be required for units sized at **80"** and **100"**.
5. **Note: Max recess of TV into the cavity should not exceed 6"**. Recesses exceeding this dimension run the risk of creating a shelf and hindering air flow above unit, resulting in a wall that may overheat.
6. **The following vent path should be used for Flare Front and Flare See Through only.**

FLARE

FIREPLACES

4x6		5x8	
Offset	Rise	Offset	Rise
5"	13 1/2"	5 5/8"	15 3/8"

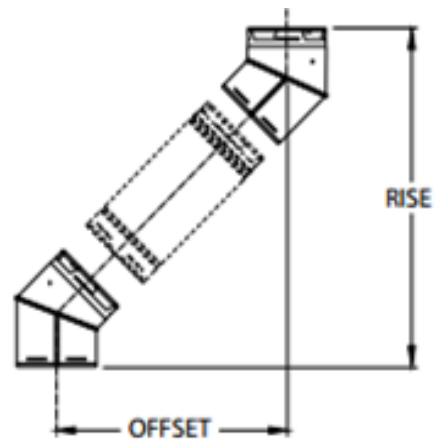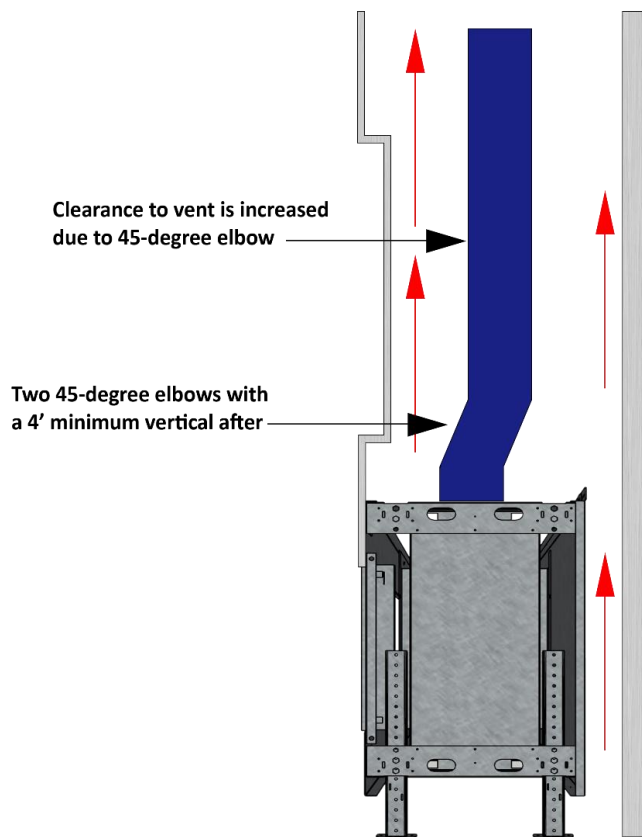


FLARE FIREPLACES

TV INSTALL – NO RECESS WITH MANTEL

Minimum Requirements for Installing a Television without a Recess:

- The TV must be at least 11 Inches total above the glass of the fireplace.
- The mantel must be at least 1 inch thick, 6 inches deep, and be installed a minimum of 8 inches above the glass.
- The TV must be at least 2 inches above the mantel and 1 inch back from the edge of the mantel.
- To reduce the amount of heat around and below the TV, increase the size of the heat release above the minimum.
- All measurements shown are minimum requirements.

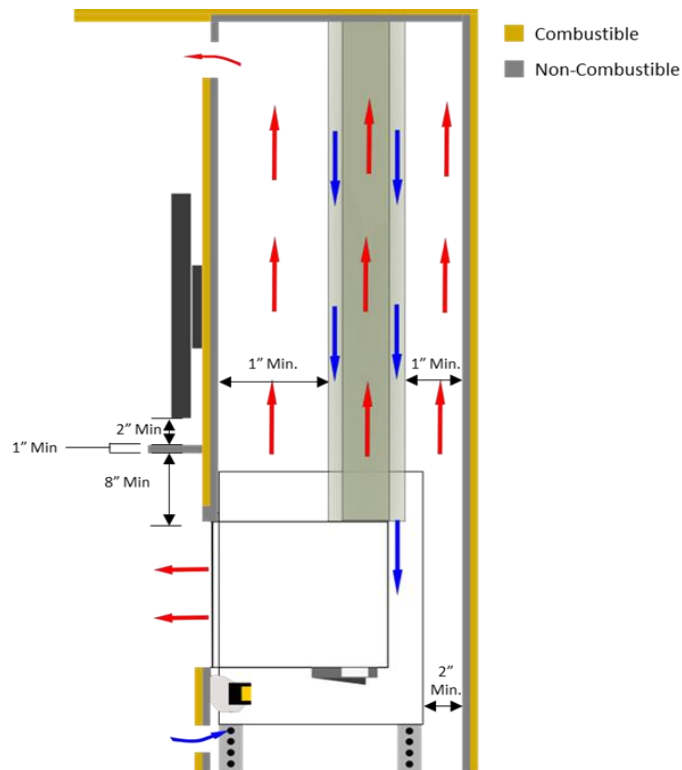

WARNING!


The example above is a general reference only. It does not represent every installation. Use the listed measurements as guidance for all units when determining flush television mounting locations.

WARNING – Maintain Open Air flow between the fireplace and drywall. Make sure cables or any other materials are not blocking hot air flow.

FLARE FIREPLACES

FRAMING SPECIFICATIONS

METAL FRAMING

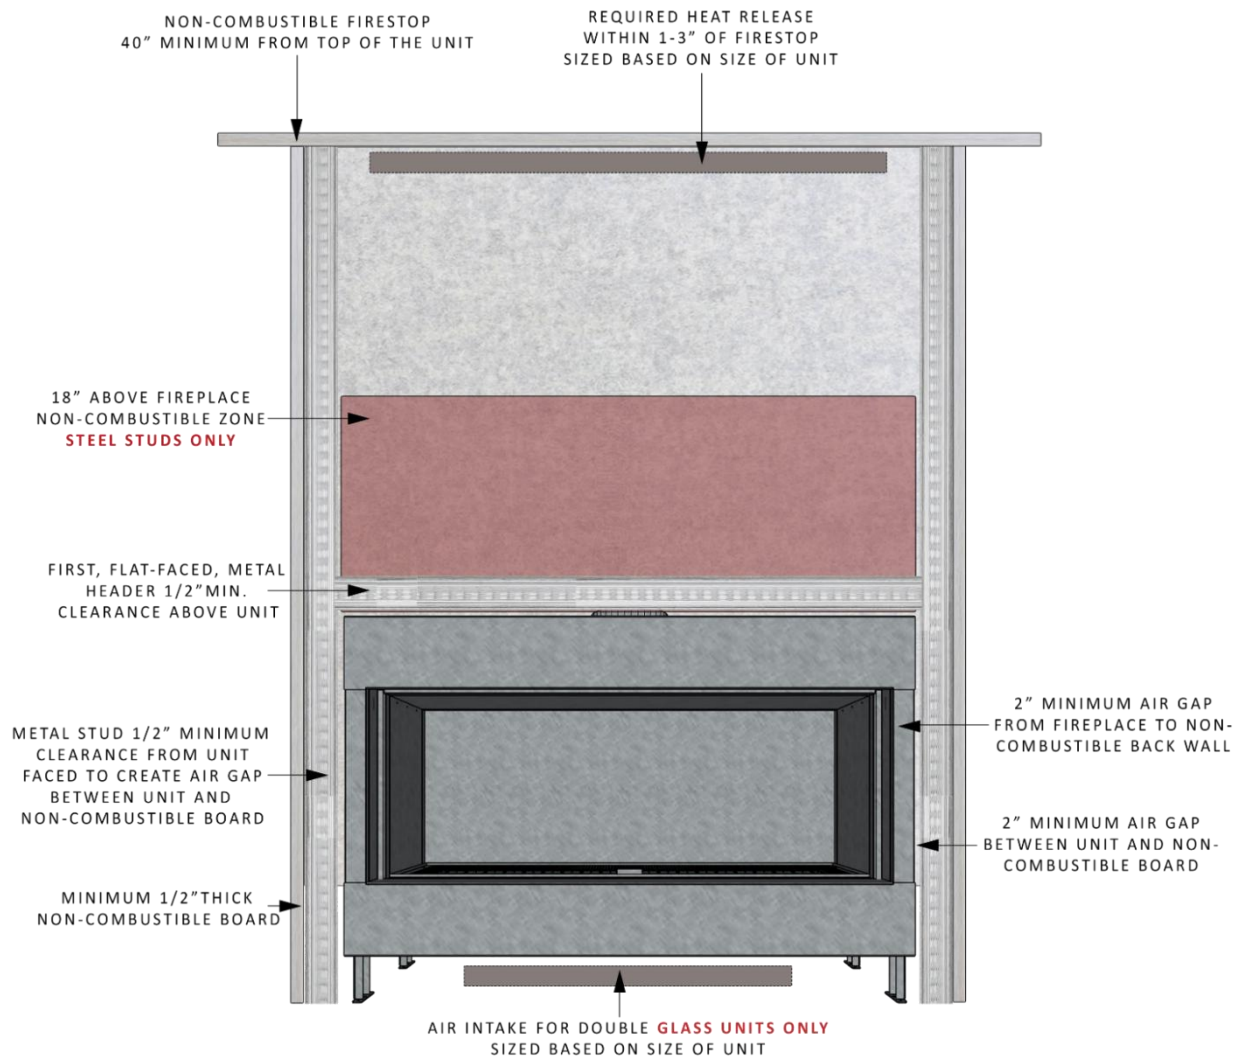


NOTICE

For more detailed framing information please refer to your unit specific framing guide

FLARE FIREPLACES

WOOD FRAMING

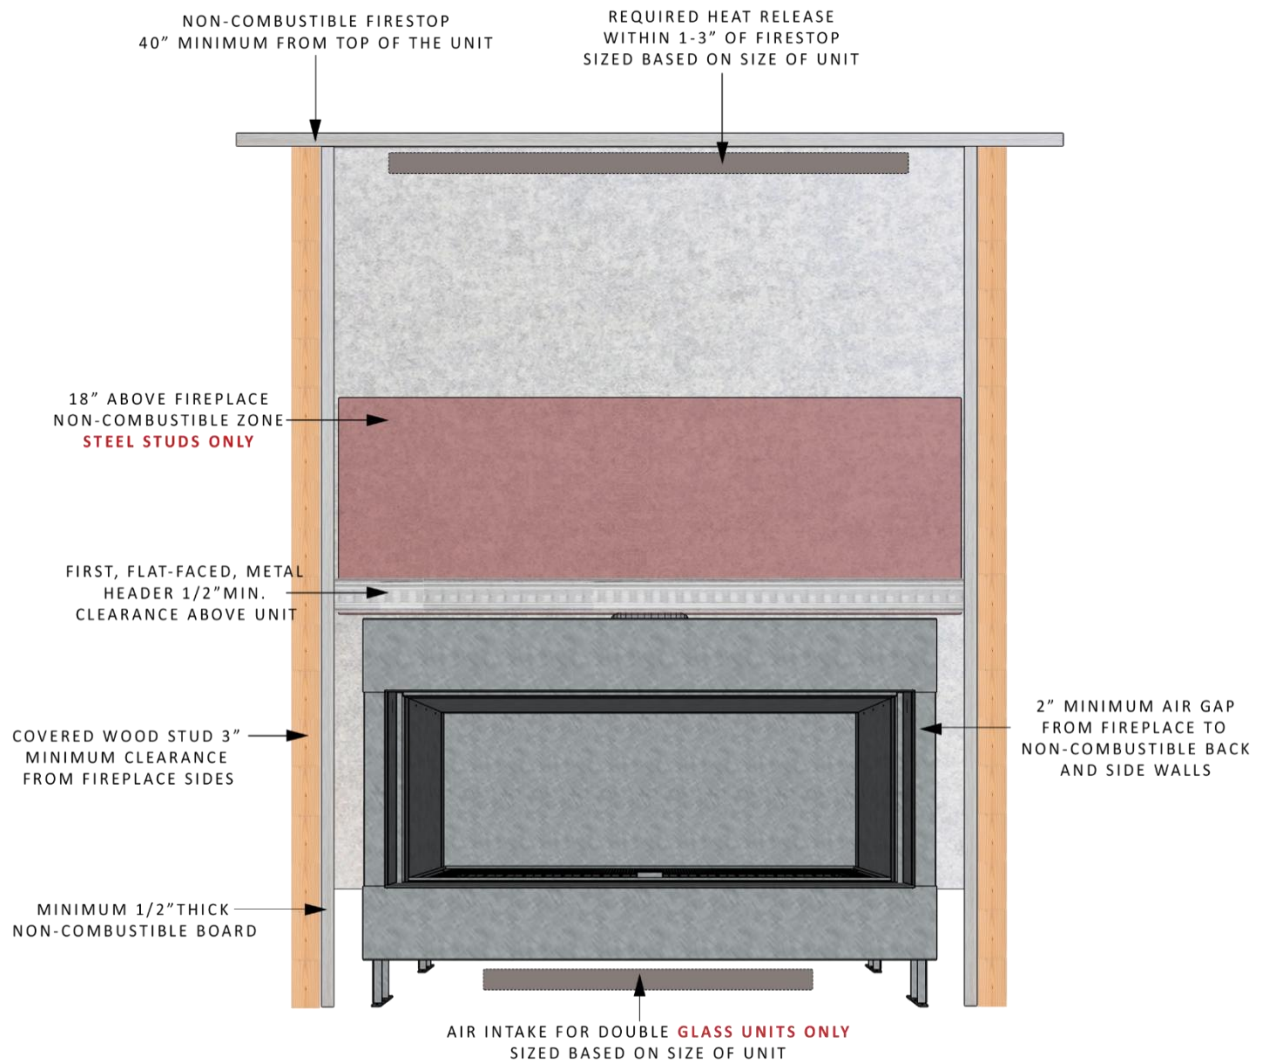

NOTICE

For more detailed framing information please refer to your unit specific framing guide

FLARE

FIREPLACES

FIREPLACE CLEARANCES

1. **Floor Clearance** – The minimum clearance from the floor to the fireplace is 3 inches. The fireplace comes with telescopic legs pre-set to 4 inches but can be adjusted down by 1 inch to meet the minimum clearance. The unit can also be recessed into the floor, provided all other clearance and installation requirements are met.

NOTE: Install appliance on hard metal, cement board, drywall, or wood surfaces, extending full width and depth.

WARNING! - DO NOT install directly on carpeting, vinyl, or any combustible material other than wood.

2. **Glass Front Clearance** – Keep all furniture and combustible objects at least 36 inches away from the glass front of the appliance.
3. **Clearance to Metal Stud Framing** – A minimum clearance of 1/2 inch is required from metal framing. If a header is necessary within the first 18" above the fireplace, it must be made of metal framing.
4. **Direct Vent Pipe Minimum Clearances to Combustibles** –

- **Horizontal Run:** Horizontal vent runs must maintain a minimum clearance of 3 inches at the top and 1 inch at the sides and bottom from combustibles. Additionally, the vent pipe must have a minimum rise of 1/4 inch (6 mm) per foot towards the termination.
- **Vertical Rise:** Vertical vent runs must maintain a minimum of 1 inch (25mm) around the vent pipe on all vertical runs, to combustibles, is required. Except for clearances in appliance enclosures.

WARNING! - Never allow the vent to run downward. A downward slope can trap heat and become a possible fire hazard.

WARNING! Maintain vent clearance to combustibles as detailed above. DO NOT pack air space with insulation or other materials. Failure to keep insulation or other materials away from vent pipe could cause overheating and fire.


WARNING! Flare fireplaces are not designed to be load bearing or support weight of any architectural framing. All framings should be self-supported, supported by back wall, side wall, or ceiling. Mounting the framing to a fireplace subjects' glass to unsupported weight and could result in damage to fireplace. Improper framing or mounting to unit will void product warranty. Please consult Flare Fireplaces directly for additional questions or concerns about framing options.

FLARE

FIREPLACES

5. **Combustible Mantel Clearance** – Combustible mantel clearance can vary per mantel size and location. Use chart and provided table for information on mantel installation. Do not anchor any mantel or shelf to the fireplace. Only use metal studs above the fireplace as anchor points.

REF	Height	Mantel Depth
A	2"	1"
B	4"	4"
C	6"	6"
D	10"	12"

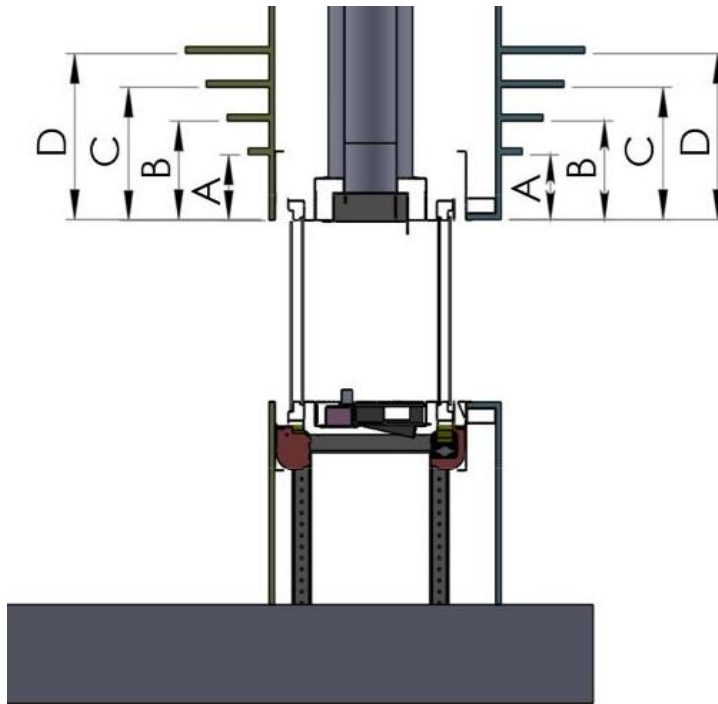

NOTICE

*Non-combustible mantels do not have a minimum clearance to the fireplace opening and can be brought as close to the glass as allowed by the frame of the fireplace. Please keep in mind any material used could potentially heat up dramatically the closer to the fireplace you bring it and the longer the fireplace is on.

FLARE

FIREPLACES

6. **Fireplace Shelf Enclosure** – The minimum height to the inside of a shelf above the top of the fireplace is 6 inches (**12 inches above the glass**). This shelf must be built with non-combustible material at least 5/8" thick. Due to the low size of the shelf enclosure, it is recommended to build the enclosure using Skamol board. The Skamol board is a light non-combustible material that can help prevent the formation of cracks and is a good insulator. *The shelf enclosure **MUST** have a heat release opening centered on top of your shelf, and on the front or back of the longest face of the surround, doubling the opening requirement seen when using standard floor to ceiling surround. See example below



NOTE: You may avoid a top release, when at least doubling the minimum heat release requirement by creating an opening that releases heat from all sides of the shelf-enclosure.

- A. Required heat release on top of shelf enclosure, sized based on size of the fireplace. [Heat Release Specification Manual](#)
- B. 12" minimum from glass opening to underside of non-combustible board within shelf enclosure.

WARNING!

*Room Definer fireplaces, depending on the surround configuration, may require an additional heat release to alleviate heat build-up caused by the vent pipe. Please contact Flare Fireplaces at 1 (866) 639-1590 to verify your application is safe.

FLARE


FIREPLACES

7. **Ceiling Clearance-** The minimum ceiling height for a Flare Fireplace is 40" above the top of the fireplace.

WARNING! The heat released above the fireplace is critical for keeping the chase and surrounding walls at a relatively low temperature.

8. **Minimum Clearance From Non-Combustible to Fireplace Sides and Back** – The minimum clearance from the back and sides of the fireplace to any **non-combustible** material (i.e., cement board or Type X fire rated board) is 2 inches. This clearance allows for proper air flow.
9. **Minimum Clearance From Covered Combustible to Fireplace Sides and Back** – Combustible material at the back or sides of the fireplace, **MUST** be covered with non-combustible material that is at least ½ inch thick, and in some cases 5/8" thick. Wood studs, covered with non-combustible material, can be placed a minimum of 3" away from the side and back.

Example: A non-combustible cement board is placed 2 ½" inches from the back of the fireplace. The cement board used is ½" inch thick. Combustible material can be used behind cement board as it is a total of 3 inches away from the back of the fireplace and is covered with a non-combustible material.

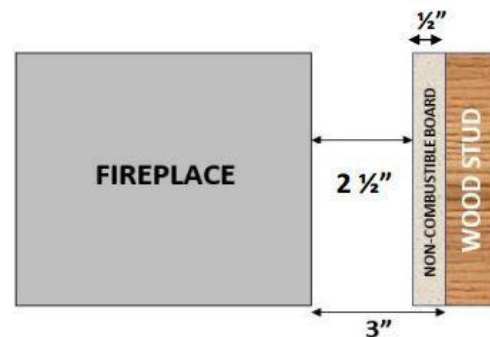

10. **Minimum Clearance From Combustible to Fireplace Sides and Back** – Clearance to uncovered combustible material at the back or sides of the fireplace, **below the non-combustible line is 8"**.
11. **Minimum Clearance Directly Above the Fireplace, Inside the Chase** – The first 18" above the fireplace is a non-combustible zone. Only non-combustible metal studs can be installed, maintaining a minimum of ½" away from the fireplace. Metal studs should not connect to or touch the fireplace. Doing so will result in heat transfer from the fireplace to the metal stud. Make sure not to block hot air flow to the heat release by front facing the first metal stud in the event you are adding a header in the non-combustible zone.


FLARE

FIREPLACES

12. Minimum Clearance Above the Fireplace Non-Combustible Zone, Inside the Chase –

Zone A: First 18” directly above the fireplace **MUST** be framed using metal studs if adding a header.

Zone B: All combustibles above the 18” must be covered with non-combustible board. There should be no combustible materials left uncovered above the fireplace inside the chase. Fireplace chase should be designed and built to allow hot air to be released from the unit and rise-up in a non-combustible channel to the heat release.

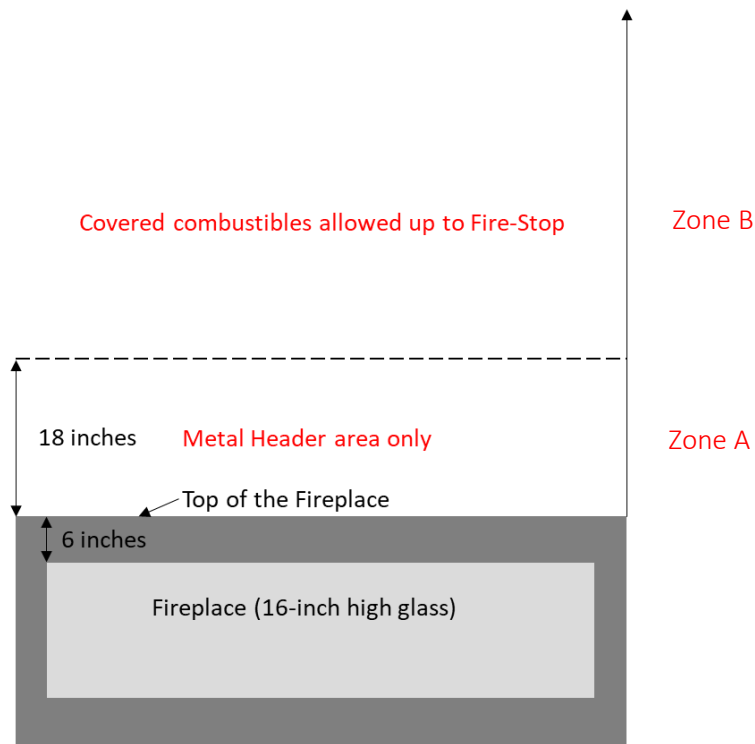

13. Chase Ceiling – Top of the chase (Firestop) must be covered with noncombustible material. No exposed combustible materials are allowed inside the chase.

FLARE FIREPLACES



14. Hearth Clearances –

- A. Clearance to an **uncovered combustible hearth** below the glass is **2 inches** as seen below.
- B. When bringing your hearth to glass height it must be non-combustible for the first 7” extending from the glass before any combustible material can be used to finish the hearth. As seen below.

15. Clearance to an adjacent sidewall –


Combustible Adjacent sidewall: 7” clearance from glass.

Non-Combustible sidewall: 4 ½” clearance from glass.

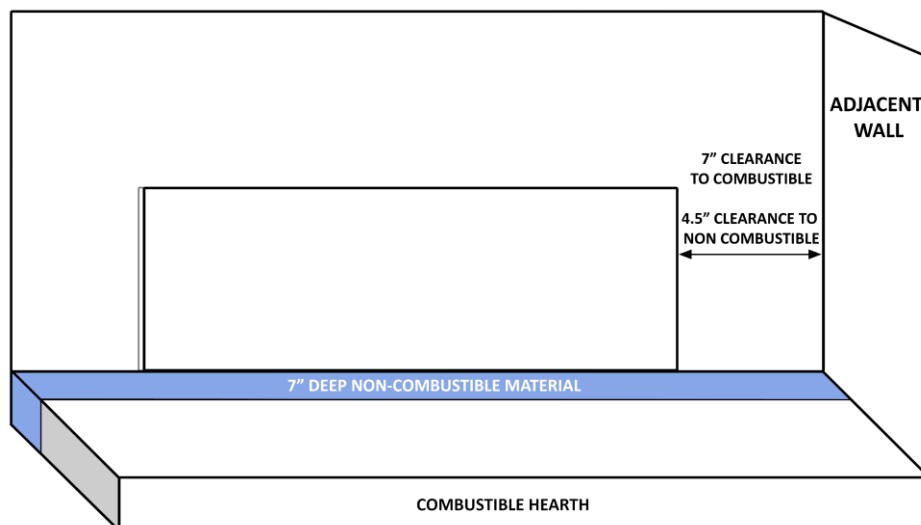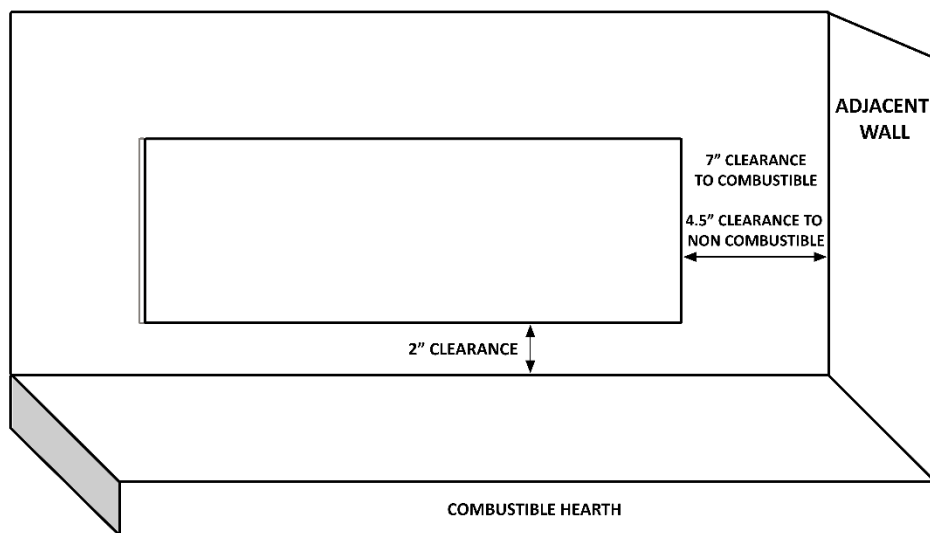

FLARE FIREPLACES

16. **Finishing Around Front of Fireplace** – Non-combustible finishing material (i.e., cement board, brick, stone, and tile) **MUST** be used to finish around the front of the appliance. Covered combustible material can also be used to finish around the front of the fireplace, but only if the proper distance from the fireplace is maintained. See Examples 1, 2, and 3 below for further details

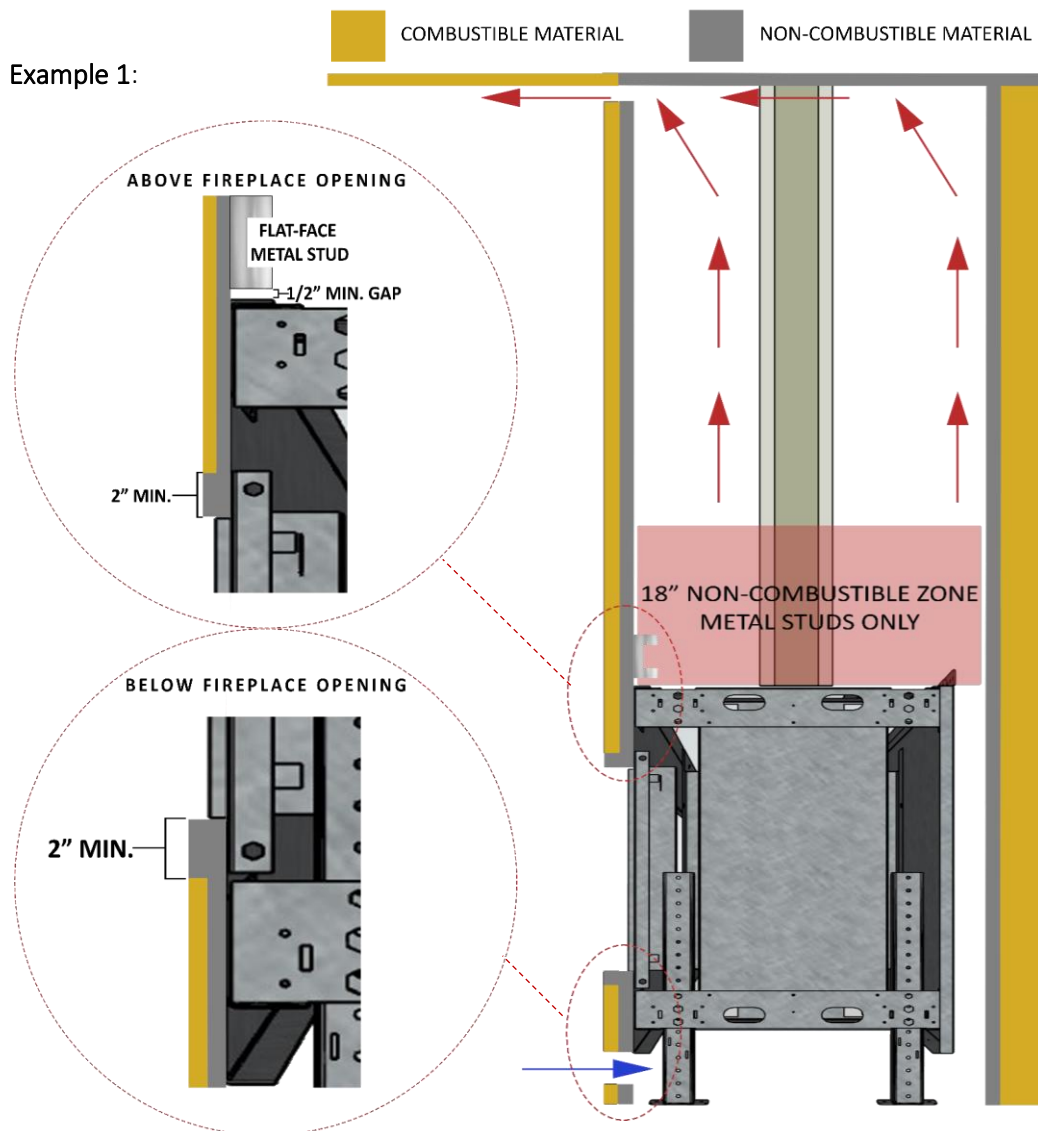


NOTICE

Do not connect materials to or drill into the metal fireplace frame. This can result in excessive heat transfer and/or damage to the fireplace and surrounding materials.

FLARE

FIREPLACES

Example 2:

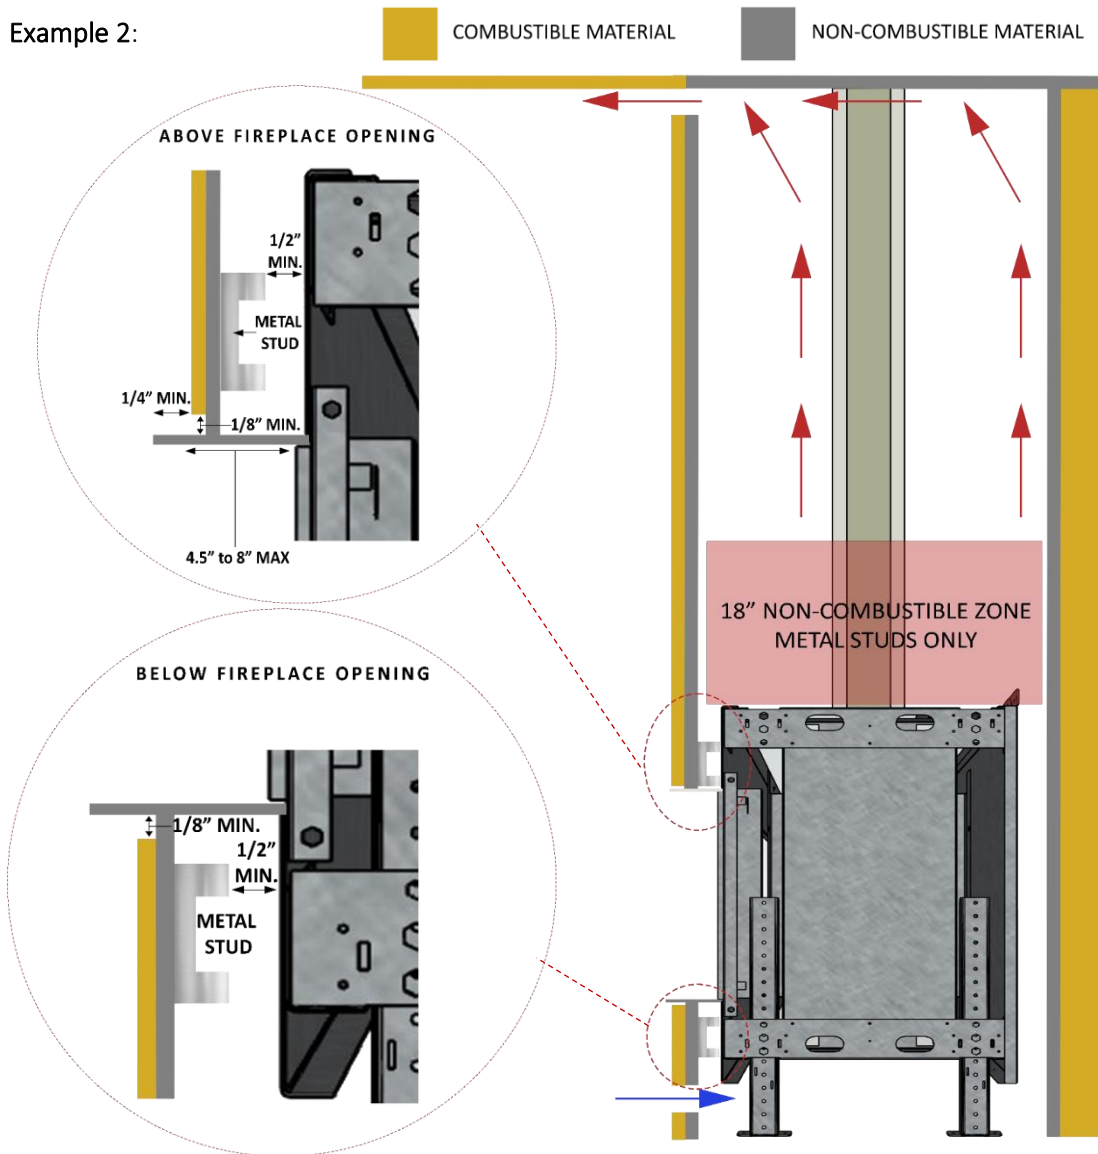


NOTICE

Do not connect materials to or drill into the metal fireplace frame. This can result in excessive heat transfer and/or damage to the fireplace and surrounding materials.

FLARE

FIREPLACES

Example 3:

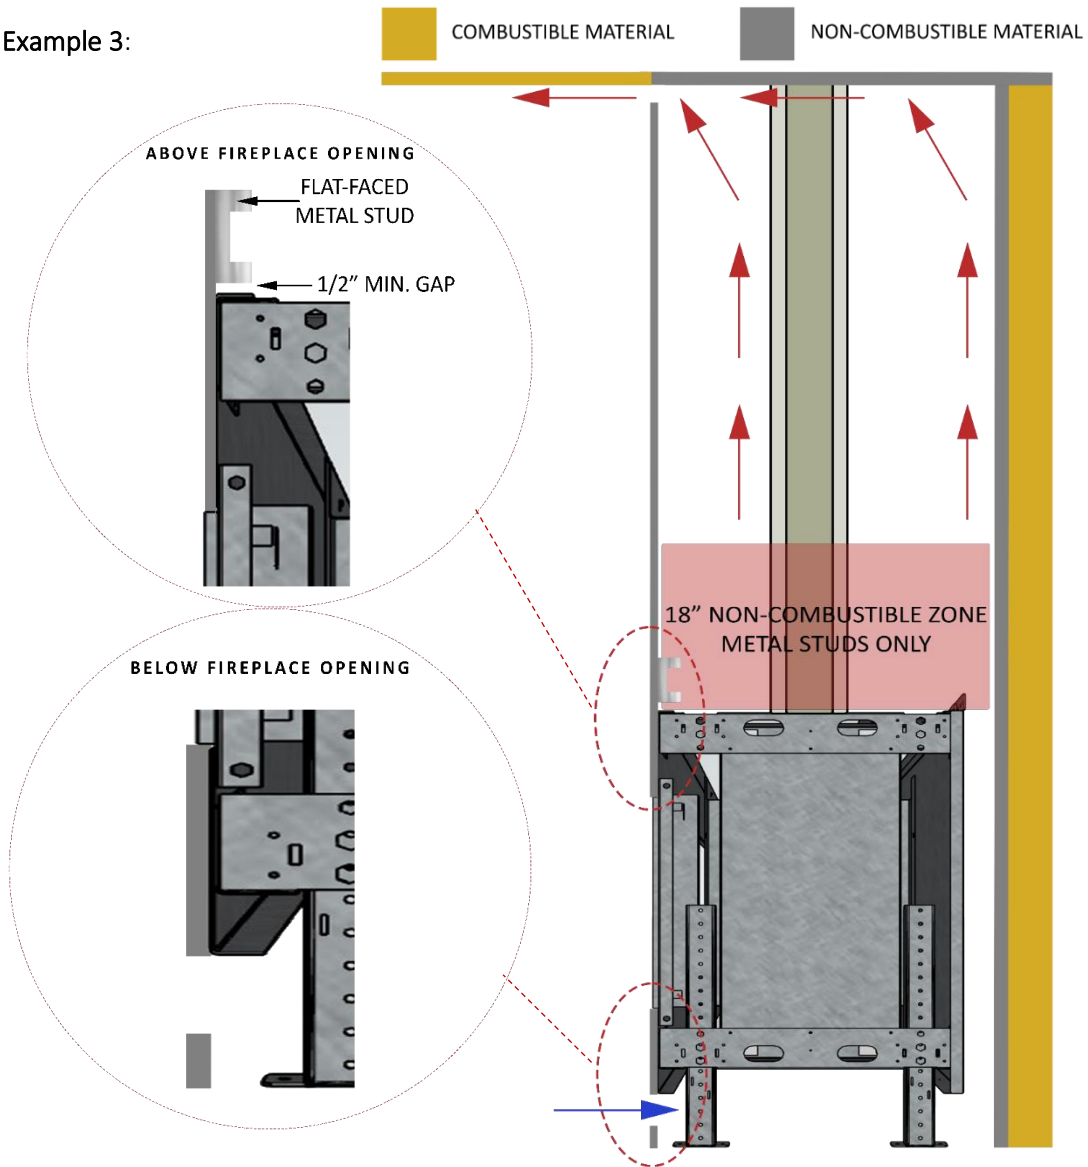

NOTICE

Do not connect materials to or drill into the metal fireplace frame. This can result in excessive heat transfer and/or damage to the fireplace and surrounding materials.

FLARE

FIREPLACES

NON-COMBUSTIBLE MATERIALS SPECIFICATIONS

Non-Combustible Materials Specification

Material which will not ignite and burn. Such materials are those consisting entirely of steel, iron, brick, tile, concrete, slate, glass or plasters, or any combination thereof. Materials that are reported as passing ASTM E 136, Standard Test Method for Behavior of Materials in a Vertical Tube Furnace at 750 °C shall be considered non-combustible materials. Non-combustible cement board approved must be at least 1/2" (13 mm) thick.

Non-combustible material may be installed on the fireplace frame to cover the metal part as detailed in the installation examples and clarifications only if there is no weight transfer to the fireplace. Facing and/or finishing materials must never overhang into the glass opening.

DO NOT connect materials to or drill into the metal fireplace frame. This can result in excessive heat transfer and/or damage to the fireplace and surrounding materials.

All joints between the finished wall sheathing and the appliance must be sealed with non-combustible materials.

WARNING! Risk of Fire! DO NOT apply combustible materials beyond the minimum clearances. Comply with all minimum clearances to combustibles as specified in this manual. Examples of acceptable noncombustible materials:

- Skamol Skamotec
- Promat Promafour System 1/2" 12 mm, 5/8" 15 mm, 3/4"/18 mm
- James Hardie - Hardiebacker® 1/2" 12 mm Cement Board
- 5/8" 15 mm Type X fire rated drywall.
- 1/2" 12 mm Type C fire rated drywall
- PermaBASE Cement Board 1/2" 12mm and 5/8" 15 mm


Combustible Materials Specification

Materials made of or surfaced with wood, compressed paper, plant fibers, plastics, or other material that can ignite and burn, whether flame-proofed or not, or plastered or un-plastered shall be considered combustible materials.

FLARE FIREPLACES

CLEARANCE TO A SPRINKLER

In a situation where a sprinkler head is installed within proximity to a Heat Release, the diagram below **MUST** be followed. The distance between the sprinkler head & Heat Release opening cannot be less than 60" in length at every point from the origin of the Heat Release. You must also verify the sprinkler head sensor is set to the proper heat setting so it does not activate when the room heats up from the fireplace being operated normally. **DO NOT INSTALL A SPRINKLER IN THE FIREPLACE CAVITY.** Please follow the local building code to determine what temperature setting is relevant for your installation.

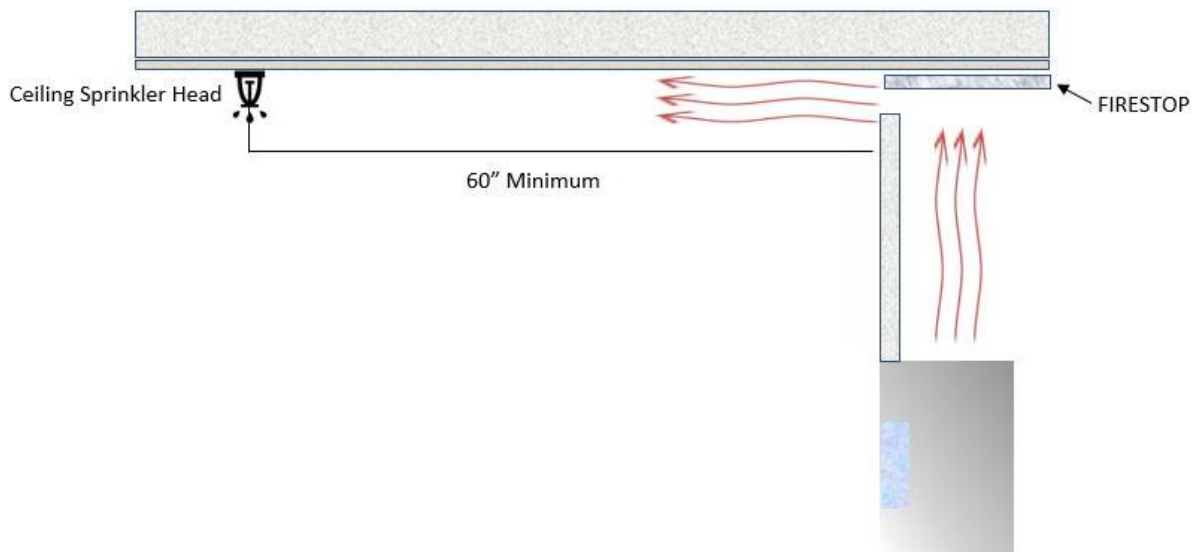

WARNING!

Vaulted ceilings can create a channel that funnels hot air directly towards a sprinkler head placed at the proper distance from heat release, as stated above. If the sprinkler head sensor is not rated for high heat it could potentially set off the sprinkler system inadvertently. Please work with builder & inspector to verify your sprinkler system is properly set to accommodate higher temperatures & is not set up in a heat channel

FLARE FIREPLACES

HEAT MANGAMENT – HEAT RELEASES AND AIR INTAKES


For more specific information related to understanding the Heat Release and Air Intake please use the following links, and read the information outlined below.

[Heat Release Manual](#)

[Air Intake Manual](#)

For purchasing and installation details on Flare’s standardized heat release and air intake solution, click the link to the [Free Flow Manual](#) below.

[Free Flow - Standardized Heat Release Manual](#)

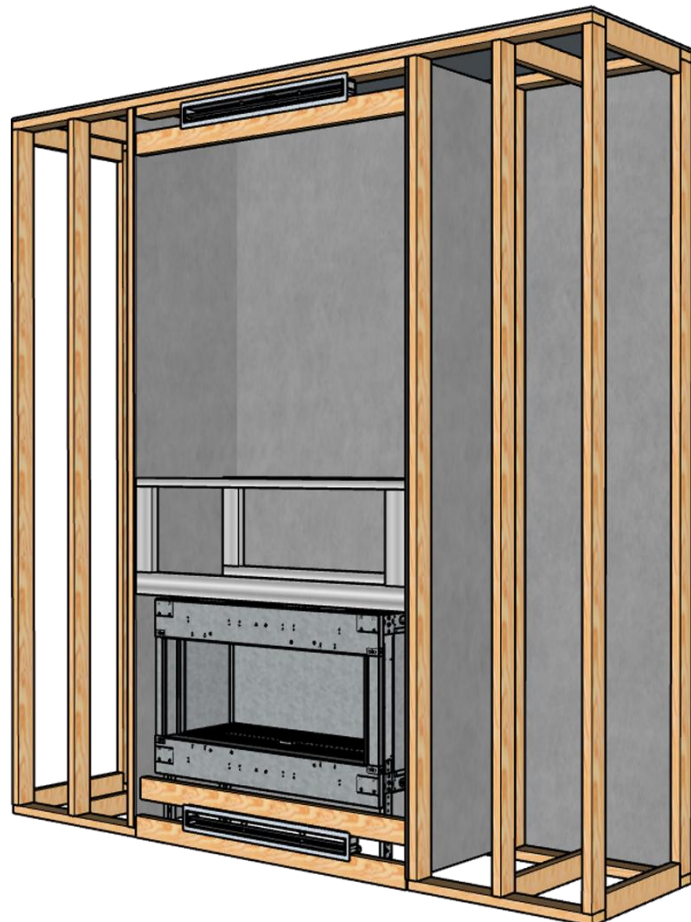

FLARE

FIREPLACES

HEAT RELEASES

The **heat release opening is required for all fireplaces** and allows warm air to passively flow back into the room. This controls the temperature of the surrounding walls, keeping them relatively cool, and allowing a TV or art piece to hang 12" from the glass opening regardless of fireplace size, style, or safety barrier.

Heat Release Keys:

1. Must remain open at all times.
2. Must be at the top of the enclosure and within 1" – 3" of the non-combustible firestop.
3. Can be located on any interior side of the surround
4. If placed on the side of the surround it must be on both sides and sized equally
5. The heat release must be interior facing
6. The heat release may be oriented horizontally or *vertically.
* **Vertically oriented heat releases must be 30% larger than horizontally oriented heat releases and must be kept 3" below the firestop and 24" above the top of the fireplace.**
7. Restriction created by finishing over opening must be considered when calculating open-air flow
8. All sizing is assuming the surround stops a minimum of 40" above the fireplace

Fireplaces sized **30" – 50"** the vent area must be at least **100 square inches of open-air flow.**
(*130 square inches of open-air flow if vertically oriented)

Fireplaces sized **60" – 70"** the vent area must be at least **140 square inches of open-air flow.**
(*182 square inches of open-air flow if vertically oriented)

Fireplaces sized **80" – 100"** the vent area must be at least **200 square inches of open-air flow.**
(*260 square inches of open-air flow if vertically oriented)

NOTICE

Any opening greater than the minimum size is highly recommended and will help reduce the temperature of the surrounding walls. Make sure a non-combustible fire stop is placed atop the inside of the chase and is framed in a way that does not allow any pockets of heat to be formed. All heat should be able to rise to the fire stop and freely flow out of the heat release opening into the room.


FLARE

FIREPLACES

HEAT RELEASE EXAMPLES


DROP WALL

The drop-wall heat release is implemented by creating a surround that reaches the minimum ceiling level of 40" above the top of the fireplace, and instead of bringing the surround all the way to the ceiling you hold your entire surround from the ceiling, opening the top of the surround to allow heat to rise out of the top and into the room.

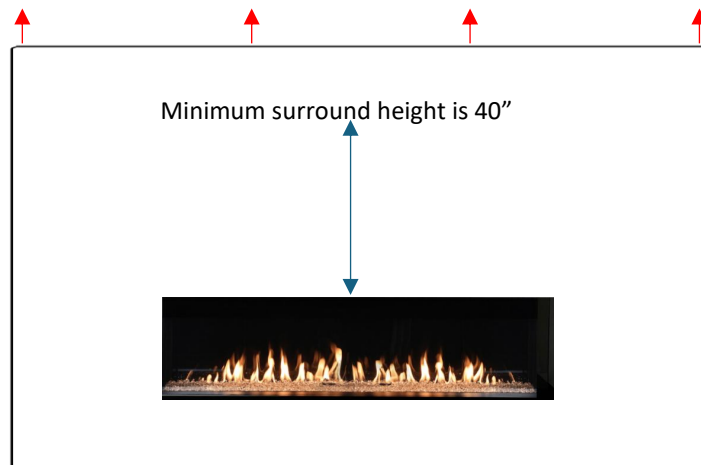

SHADOW LINE

The shadow line heat release is implemented by dropping your surround 1" – 3", recessing your build back 3" – 4" then finishing to the ceiling. This will create a small L-shaped reveal at ceiling level where the portion of the reveal running parallel to the ceiling is left open across the length and/or sides of the surround.

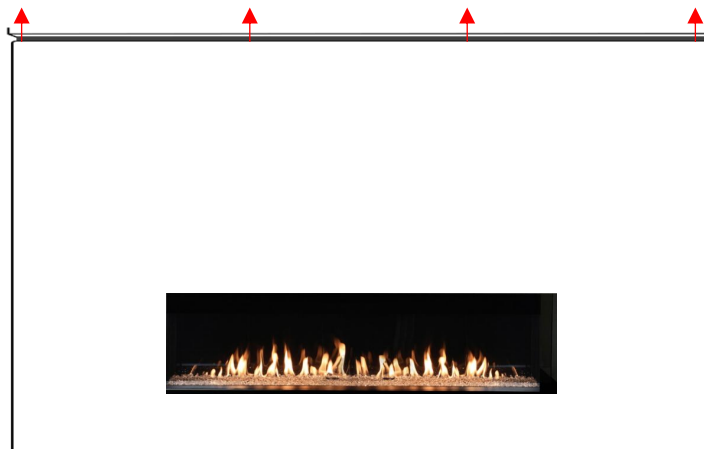


FLARE

FIREPLACES

LINEAR SLOT OR LOUVERED GRATE

The linear slot or louvered grate heat release is implemented by creating an opening in your fireplace surround within 1" – 3" of the non-combustible firestop which meets the open air-flow requirements and allows the heat to enter the room through the opening provided.

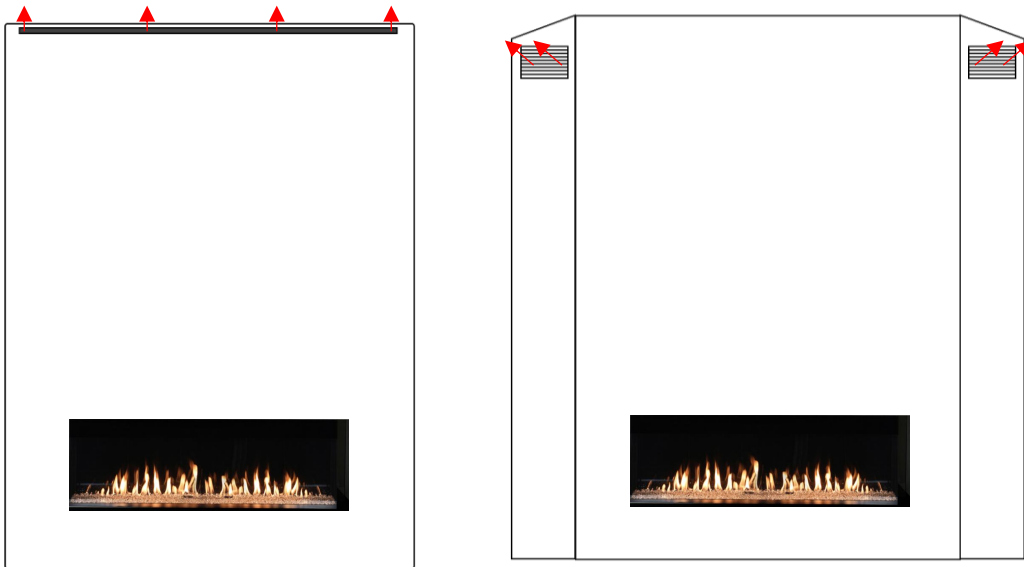

FLARE

FIREPLACES

AIR INTAKE

The air intake opening is required for all fireplaces equipped with the upgraded double/triple glass safety barrier. The air intake allows for fresh air from a conditioned space to cool the outer glass safety barrier, preventing it from reaching temperatures that require a screen. This also contributes to the temperature of the surrounding walls, so its implementation is key to a safe and long-lasting fireplace.

Air Intake Keys:

1. Must remain open at all times.
2. Must be at the bottom of the enclosure and begin within 2" – 4" off the floor.
Notes: The available height off the floor may increase or decrease based on the use of telescopic legs or implementation of a platform.
3. Can be located on any interior side of the surround
4. If placed on the side of the surround it must be on both sides and sized equally
5. The air intake must be interior facing
6. The air intake must be horizontally oriented.
7. Restriction created by finishing over opening must be considered when calculating open-air flow
8. May pull room-temp air from a space below the fireplace, like an attic or conditioned crawl space

Fireplaces sized 30" - 50" - vent area must be at least **50 square inches of open-air flow**.

**See-Through and Room Definer 30" – 50" vent area must be at least 100 square inches of open-air flow.*

Fireplaces sized 60" - 70" - vent area must be at least **70 square inches of open-air flow**.

**See-Through and Room Definer 60" – 70" vent area must be at least 140 square inches of open-air flow.*

Fireplaces sized 80" - 100" - vent area must be at least **100 square inches of open-air flow**.

**See-Through and Room Definer 80" – 100" vent area must be at least 200 square inches of open-air flow.*

NOTICE


Any opening greater than the minimum size is highly recommended and will help reduce the temperature of the glass and surrounding walls. Make sure if building a platform to raise the fireplace, the platform is completely open to allow fresh air to flow to the underside of the fireplace. All room temperature air should be able to easily reach the underside of the fireplace. **See-Through and Room Definer fireplaces must have their air intake doubled, and preferably balanced on both long sides of the unit to feed the double glass fans evenly.*

FLARE FIREPLACES

DOUBLE GLASS REQUIRED AIR INTAKE EXAMPLES

FLOATING HEARTH

The floating hearth intake uses the depth of an existing hearth to mask an opening tucked underneath. This masking allows you to create an opening that is both large enough to exceed the minimum sizing requirements and allow a technician a large space for accessing the components.

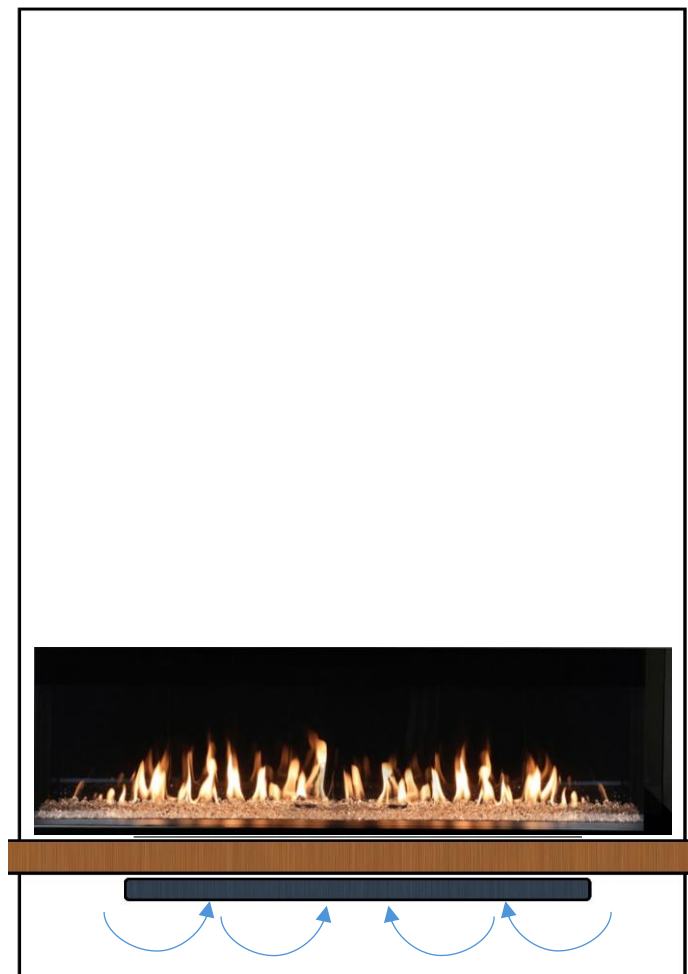

FLARE FIREPLACES

TOE-KICK REVEAL


To implement a toe-kick reveal, construct your build so that it stops 2" – 4" above the floor and is recessed 2" – 3" from the front edge. Then, extend the finishing to the floor. This creates an upside-down L-shape, where the segment of the L parallel to the floor remains open along the entire length. This design allows you to also remove the portion of the build that sits perpendicular to the floor, opening up large access to the fireplace components.



FLARE FIREPLACES

LEFT AND RIGHT-SIDE VENTS

Vents may be cut into the finishing material or placed over an opening in the surround to finish out the air intake. It's critical that if putting an air intake on the side of your surround it's on both sides and sized evenly to allow enough fresh air to reach the fireplace in a balanced manner.

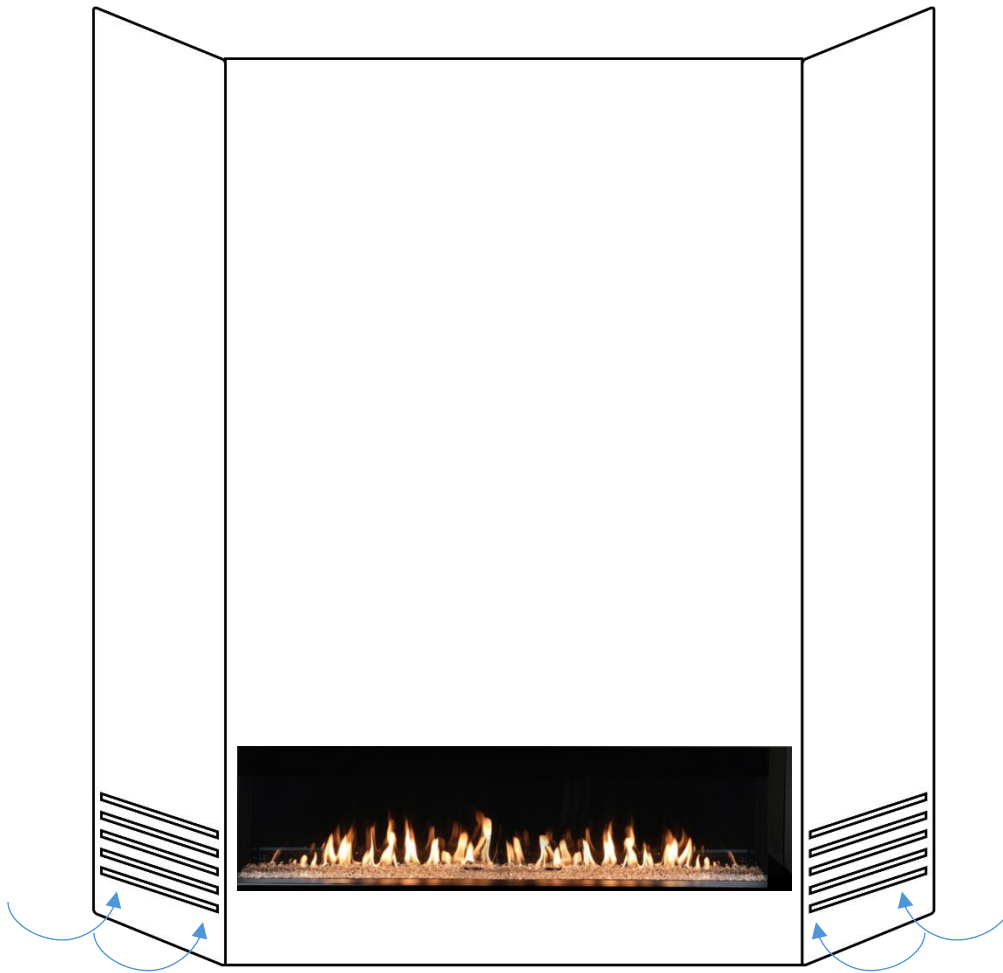


NOTICE

Fireplaces Sized 70"-100" may require openings to either be larger to feed the center of your fireplace, or an opening also placed across the front to prevent the fans found at the center of your fireplace from being starved of fresh air, creating hot spots on your glass.

FLARE FIREPLACES

LINEAR SLOT

The linear slot is an effective and straightforward method for implementing an air intake. Simply cut a slot in the face or backside of the fireplace surround to meet the necessary airflow requirements. If you are adding a custom finishing piece, consider any restrictions this piece creates, and ensure it does not obstruct the opening and maintains proper airflow.

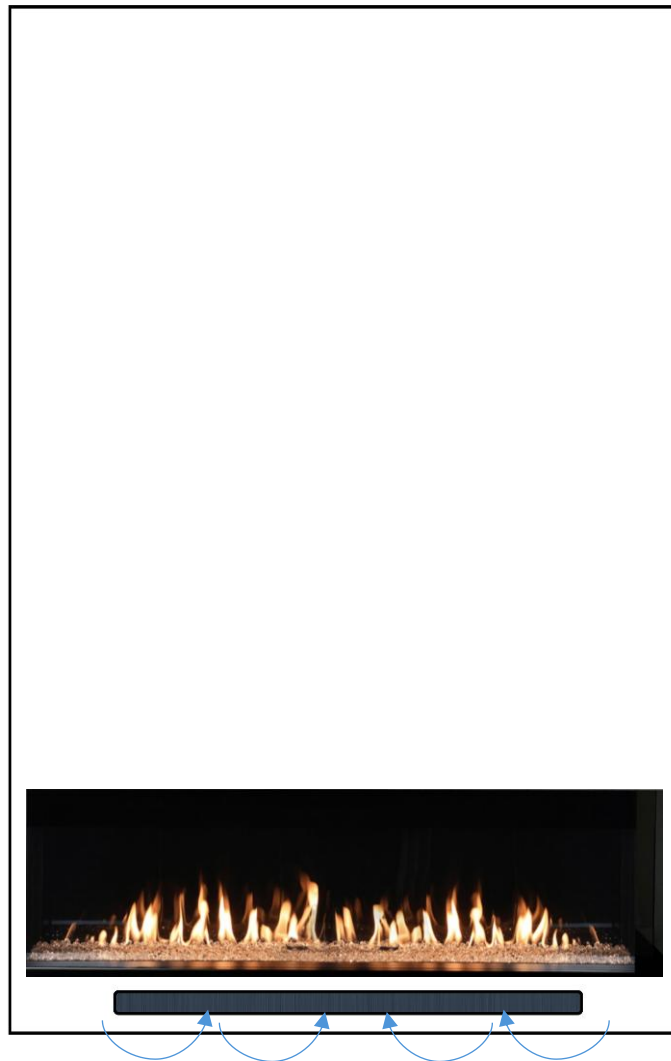


FLARE

FIREPLACES

FLARE FRONT, SEE THROUGH, AND CORNER FIREPLACE CLEARANCE

FLAT – SIDE AND ISOMETRIC VIEW & CLEARANCES

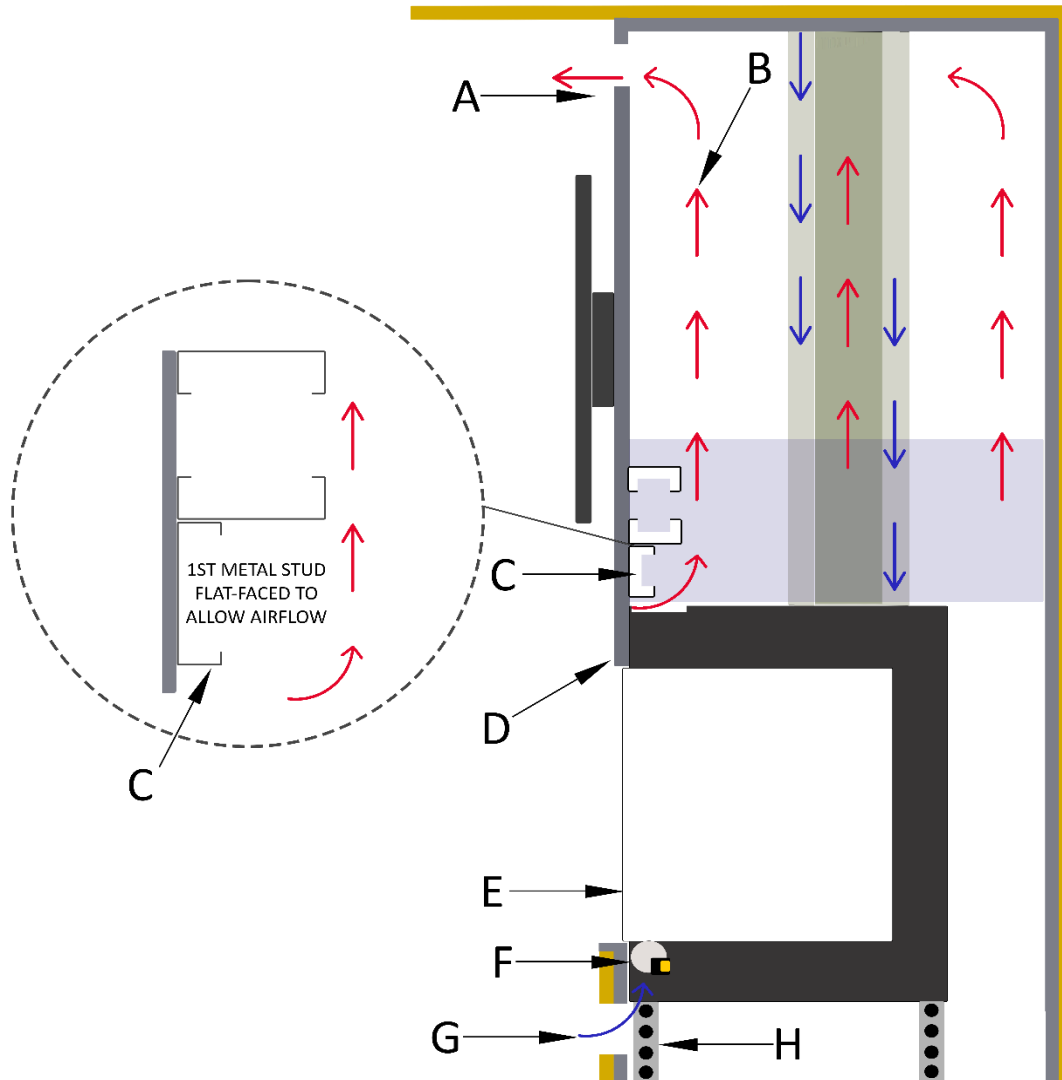

Warning! – Maintain open Air flow between the fireplace and drywall. Make sure cables or any other materials are not blocking.

FLARE

FIREPLACES

- A. Top Vent system - Hot Airflow outlet from the wall enclosure **MUST** remain open. The outlet must be at the top part of the enclosure, but not necessarily at the front, if the measurements below are maintained.

Fireplaces sized **30" – 50"** the vent area must be at least **100 square inches of open-air flow.**

(*130 square inches of open-air flow if vertically oriented)

Fireplaces sized **60" – 70"** the vent area must be at least **140 square inches of open-air flow.**

(*182 square inches of open-air flow if vertically oriented)

Fireplaces sized **80" – 100"** the vent area must be at least **200 square inches of open-air flow.**

(*260 square inches of open-air flow if vertically oriented)

- B. Open air flow for hot air to rise from the fireplace to the top of the enclosure. The enclosure can be supported by studs, but open-air flow **MUST** always be maintained. In case needed, insulation for electric wires or systems may be added but it is **important** to keep most of the air flow open. **Never place any insulation on the fireplace.**
- C. Metal Stud below non-combustible material line. Below the non-combustible line, all studs used should be metal type. No studs to be connected to the fireplace frame (1/2 Inch clearance). Open hot airflow **MUST** be maintained and should not be blocked. **Note: Max recess of TV cavity should not exceed 6". Recesses exceeding this dimension run the risk of creating a shelf and hindering air flow above unit, resulting in a wall that may overheat.**
- D. Non-combustible material is placed flat on the front fireplace support bracket. The support bracket holds the fire-rated, non-combustible, material and allows hot air to rise from the glass into the fireplace enclosure. Hot air is to be released into the room using the top static vent opening.
- The fireplace enclosure must allow air to rise and circulate from the top of the fireplace glass (from lower vent opening), to be released back to the room from the top.
 - To increase heating, the enclosure should prevent hot air from being released to the attic by venting it back to the room using the static vent system (A).
 - Non-combustible stud **MUST NOT** be connected or drilled into the fireplace frame. Drilling into the fireplace frame can result in damage to the fireplace.
- E. Cold air, drafted from the room through the lower static vent, (G) flows up and is heated by the fireplace. The Cold air gap should remain open to allow air to flow up and exchange heat with the fireplace. The fireplace can be installed with double glazing glass system or safety screens. A blower system may be used to push cold air up (F).

FLARE

FIREPLACES

F. Heat exchange blowers are optional when a fireplace is installed with safety screens. Heat exchange blowers must be included when installing a double glass fireplace. The blowers are designed to move cold air from the room using the lower vent opening (G) up against the fireplace glass. As the air flows on the glass, it is heated and released back to the room from the glass front and from the top (A) vent opening.

G. Lower vent opening. **OPTIONAL** for normal installation. A **MUST** for double glass installation or blower kit option.

For fireplaces sized **80" & 100"** – vent area must be at least **100 square inches OPEN AIR FLOW**.

For fireplaces sized **60" & 70"** - vent area must be at least **70 square inches OPEN AIR FLOW**.


For fireplaces sized **50"** and below - vent area must be at least **50 square inches OPEN AIR FLOW**.

WARNING! See Through and Room Definer fireplaces the air intake requirements are double, equal on both sides.

H. Adjustable fireplace legs.

FLARE FIREPLACES

L SHAPE – SIDE AND ISOMETRIC VIEW

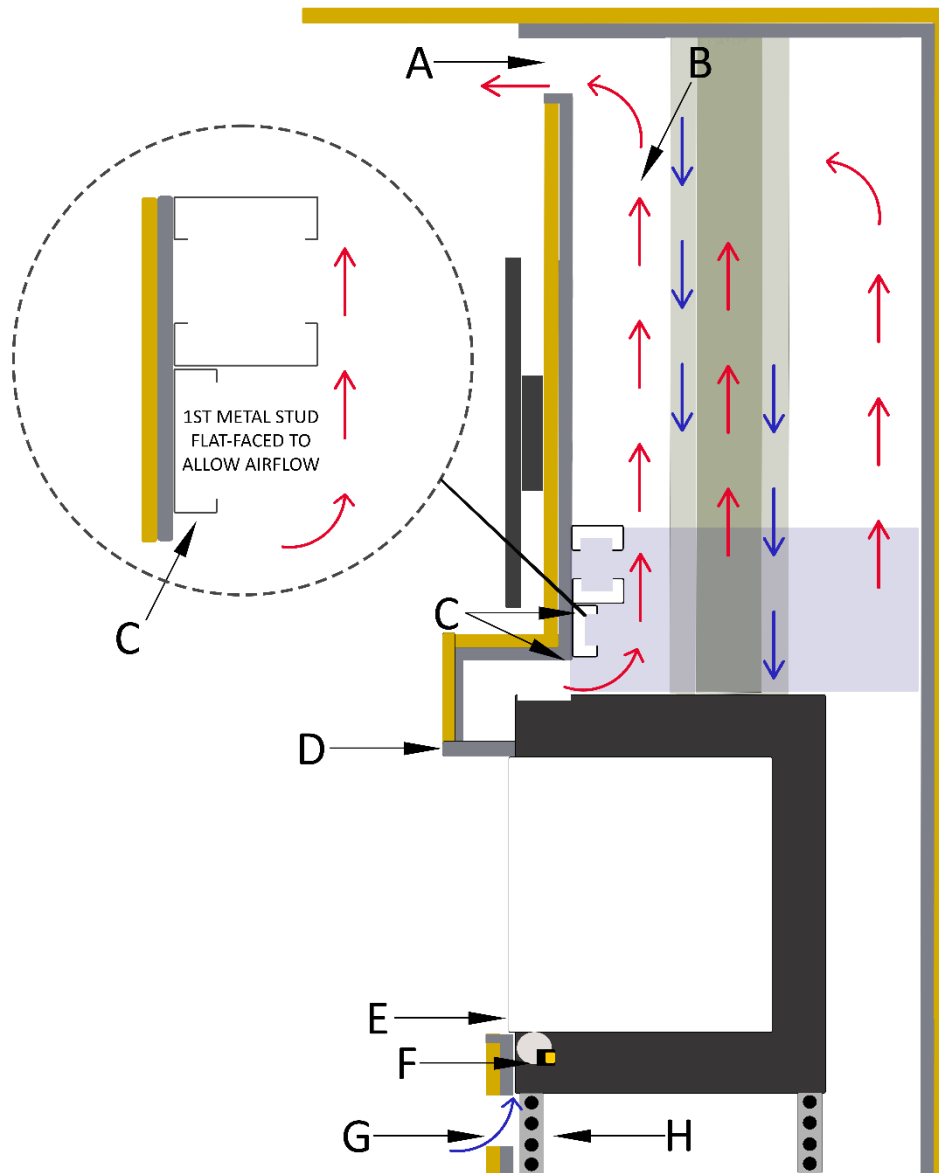

Warning! – Maintain open Air flow between the fireplace and drywall. Make sure cables or any other materials are not blocking.

FLARE

FIREPLACES

- A. Top Vent system - Hot Airflow outlet from the wall enclosure **MUST** remain open. The outlet must be at the top part of the enclosure, but not necessarily at the front, if the measurements below are maintained.

Fireplaces sized **30" – 50"** the vent area must be at least **100 square inches of open-air flow.**

(*130 square inches of open-air flow if vertically oriented)

Fireplaces sized **60" – 70"** the vent area must be at least **140 square inches of open-air flow.**

(*182 square inches of open-air flow if vertically oriented)

Fireplaces sized **80" – 100"** the vent area must be at least **200 square inches of open-air flow.**

(*260 square inches of open-air flow if vertically oriented)

- B. Open air flow for hot air to rise from the fireplace to the top of the enclosure. The enclosure can be supported by studs, but open-air flow **MUST** always be maintained. In case needed, insulation for electric wires or systems may be added but it is **important** to keep most of the air flow open. **Never place any insulation on the fireplace.**
- C. Metal Stud below non-combustible material line. Below the non-combustible line, all studs used should be metal type. No studs to be connected to the fireplace frame (1/2 Inch clearance). Open hot airflow **MUST** be maintained and should not be blocked. **Note: Max recess of TV cavity should not exceed 6". Recesses exceeding this dimension run the risk of creating a shelf and hindering air flow above unit, resulting in a wall that may overheat.**
- D. Non-combustible material is placed flat on the front fireplace support bracket. The support bracket holds the fire-rated, non-combustible, material and allows hot air to rise from the glass into the fireplace enclosure. Hot air is to be released into the room using the top static vent opening.
- The fireplace enclosure must allow air to rise and circulate from the top of the fireplace glass (from lower vent opening), to be released back to the room from the top.
 - To increase heating, the enclosure should prevent hot air from being released to the attic by venting it back to the room using the static vent system (A).
 - Non-combustible stud **MUST NOT** be connected or drilled into the fireplace frame. Drilling into the fireplace frame can result in damage to the fireplace.
- E. Cold air, drafted from the room through the lower static vent, (G) flows up and is heated by the fireplace. The Cold air gap should remain open to allow air to flow up and exchange heat with the fireplace. The fireplace can be installed with double glazing glass system or safety screens. A blower system may be used to push cold air up (F).

FLARE

FIREPLACES

F. Heat exchange blowers are optional when a fireplace is installed with safety screens. Heat exchange blowers must be included when installing a double glass fireplace. The blowers are designed to move cold air from the room using the lower vent opening (G) up against the fireplace glass. As the air flows on the glass, it is heated and released back to the room from the glass front and from the top (A) vent opening.

G. Lower vent opening. **OPTIONAL** for normal installation. A **MUST** for double glass installation or blower kit option.

For fireplaces sized **80" & 100"** – vent area must be at least **100 square inches OPEN AIR FLOW**.

For fireplaces sized **60" & 70"** - vent area must be at least **70 square inches OPEN AIR FLOW**.

For fireplaces sized **50"** and below - vent area must be at least **50 square inches OPEN AIR FLOW**.

WARNING! See Through and Room Definer fireplaces the air intake requirements are double, equal on both sides.


H. Adjustable fireplace legs.

FLARE FIREPLACES

SIDE OVERHANG SPECIFICATION FOR LEFT, RIGHT, AND DOUBLE CORNER FIREPLACES

When installing a Left, Right, or Double Corner fireplace with left and right non-combustible overhangs, please follow the specification outlined below to maintain a safely operating fireplace and surround.

- First 18" of framing above the fireplace must be metal studs.
- All finishing materials within and above this glass recess must be non-combustible
- At no point can your overhang reach down into the viewing area.
- There is no maximum distance for overhangs on the left or right side of the fireplace.
- Minimum distance to a non-combustible is 12" from the glass
- Minimum distance to a combustible is 36" from the glass

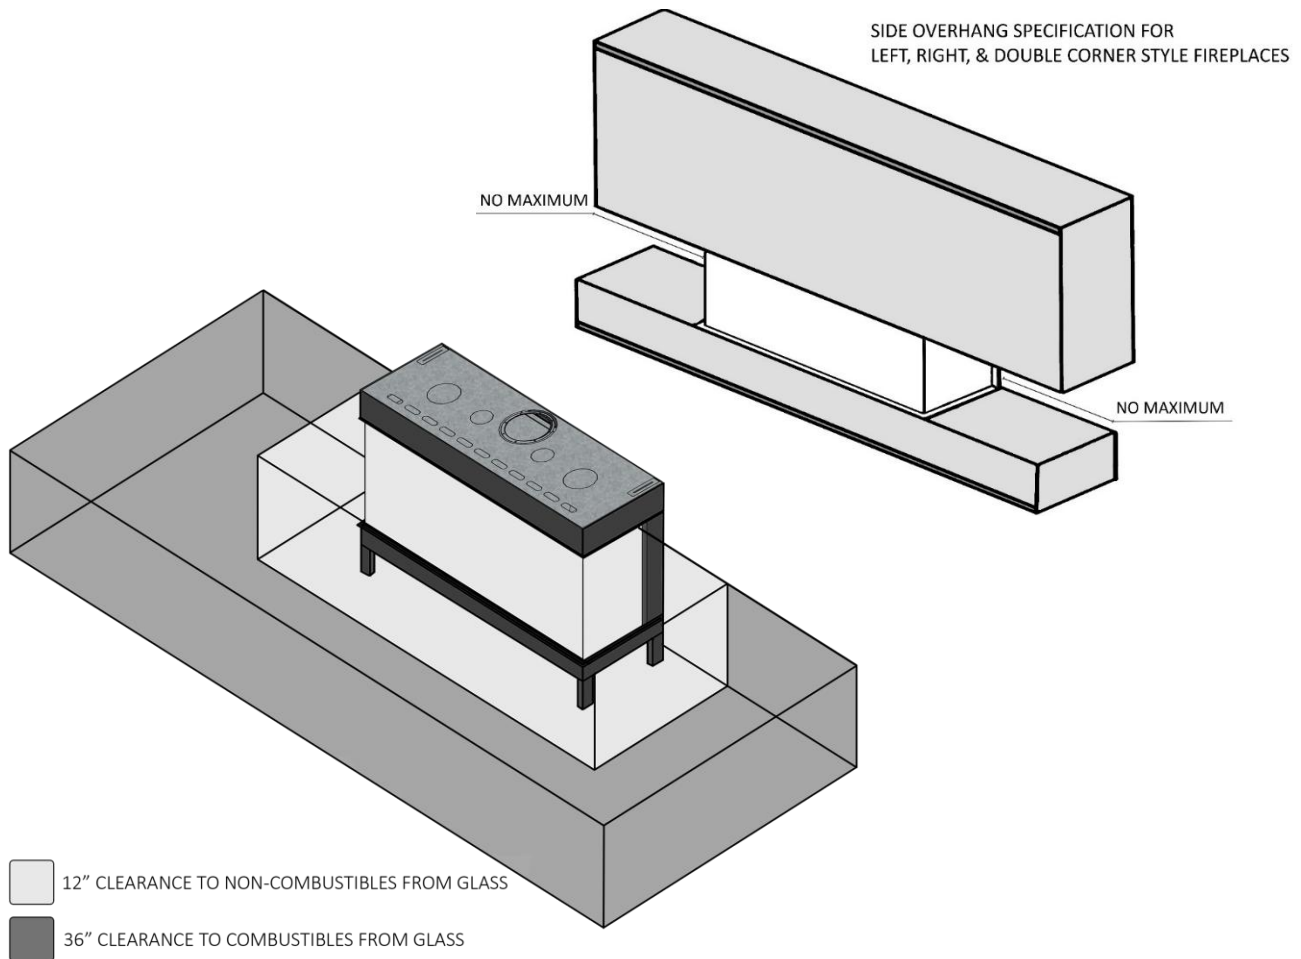

FLARE

FIREPLACES

INDOOR/ OUTDOOR KIT

The following installation information is used for the Flare Fireplace outdoor kit. The outdoor window kit can only be used with Flare Front, Flare See Through, and the Flare See Through Passage fireplaces. The Flare outdoor kit is installed like a window and must be weatherproofed on all sides. It must include an overhang or cover to protect the face from exterior elements. All fireplace clearances must be followed when installing a Flare Fireplace next to this outdoor window kit. Appliance location

OUTDOOR KIT INSTALLATION CONSIDERATIONS

Because the outdoor kit only adds weather resistance to the face of an interior fireplace, a weatherproof enclosure is required for the unit and its components. It will also need the openings for your heat release, and if using double glass, air intakes to face the interior of the build, and only install these units with the proper overhang or roof considerations. This will help with the long-term protection of your fireplace and its components.


Below are other examples of elements to consider for your outdoor kit equipped fireplace.

- The fireplace must be installed in a completely weatherproof enclosure, with one interior facing the wall.
- The outdoor kits are made from a high-quality black painted stainless steel and are weather resistant on the front window only.
- All fireplace controls and gas components must be installed in a weatherproof enclosure.
- The outdoor kit can occasionally tolerate small amounts of water but is not waterproof.
- The fireplace must be enclosed in a weatherproof enclosure covered in typical weatherproof material, such as siding/ stucco/stone/tile, etc. and have a weatherproof structure to shed water that extends horizontally beyond the front and side perimeter of the fireplace.
- Water running down vertical surfaces should be directed away from the fireplace using flashing. Measures must be taken to ensure any accumulated water drains away from the fireplace and structure.
- When the fireplace is installed on surfaces where water may collect or cause damage, a suitable drainage pan should be placed under the unit and the water drained away.
- Do not use the remote-controlled handset supplied with the appliance. The use of the thermostat on the remote may result in continued operation of the fireplace.
- Exposure to outdoor sun - Exposure to outdoor sunlight will cause some painted finishes to fade over time. Fading is unavoidable and not covered under warranty. Minimize fading by installing the fireplace away from direct sunlight.
- Make sure the fireplace is fully turned off when attempting to clean the front of the fireplace (including pilot).

FLARE FIREPLACES

OUTDOOR KIT OVERHANG REQUIREMENTS


A weatherproof overhang in front of the fireplace is $\frac{1}{2}$ the height of the fireplace face-wall, measured from the base of the unit to the ceiling.

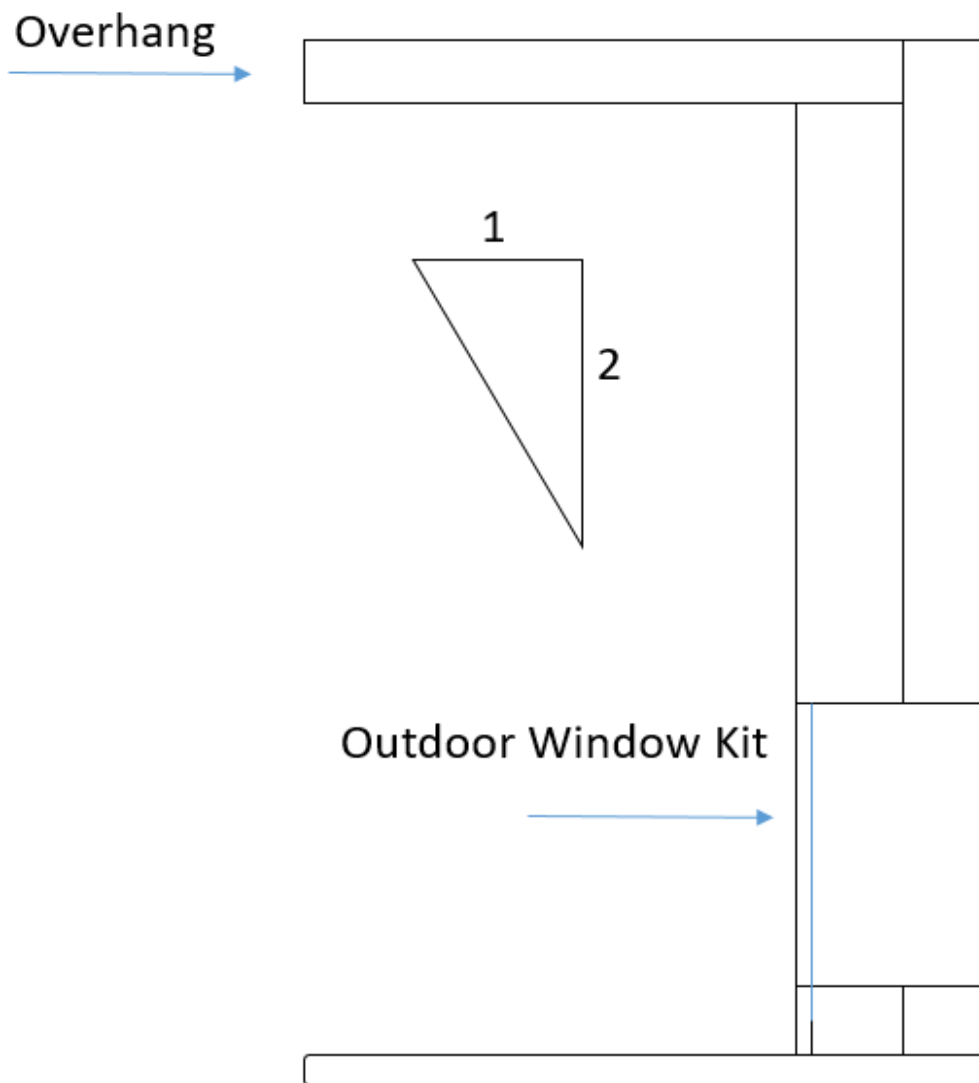


FLARE FIREPLACES

OUTDOOR KIT FRAMING AND FINISH

All studs and surrounding material should follow the fireplace clearances and non-combustible requirements

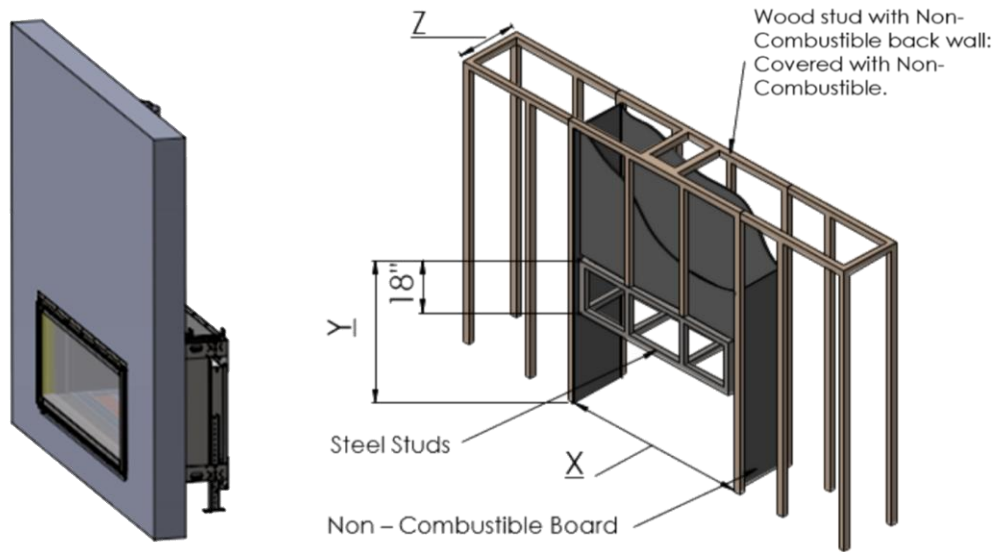



OUTDOOR KIT CLEARANCE TO NON-COMBUSTIBLE WALL

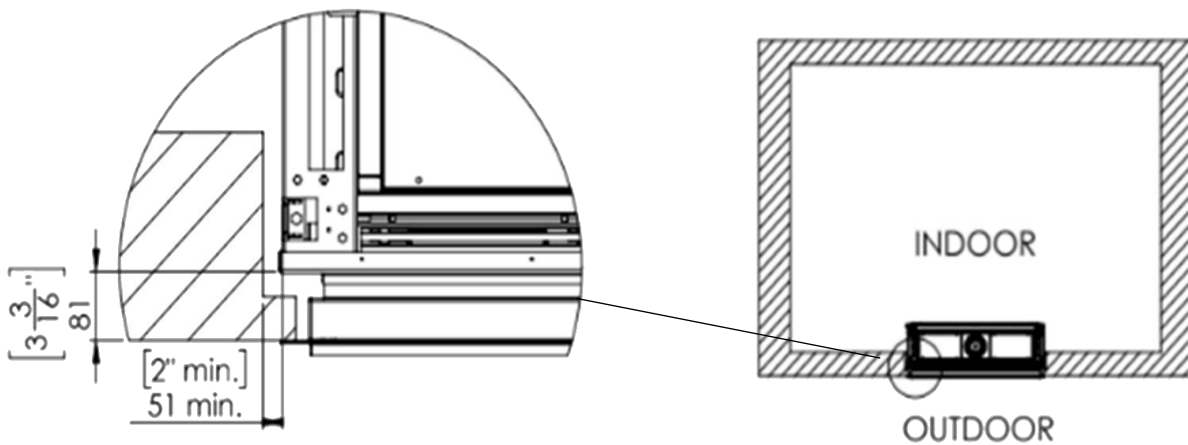

FLARE

FIREPLACES

OUTDOOR KIT OPENING DIMENSIONS

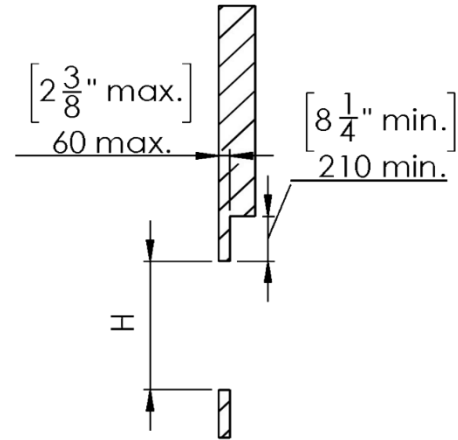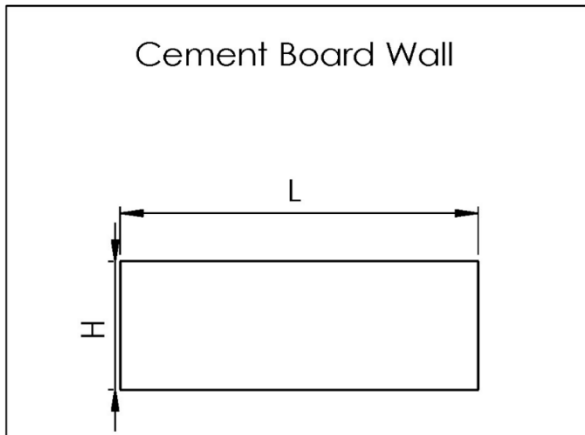

External Opening Dimensions			
		H	L
45	Inch	20	43 ¹³ / ₁₆
	mm	508	1113
50	Inch	20	50 ⁸ / ₁₆
	mm	508	1283
60	Inch	20	60 ⁵ / ₁₆
	mm	508	1783
70	Inch	20	70 ³ / ₁₆
	mm	508	1783
80	Inch	20	82 ¹² / ₁₆
	mm	508	2102
100	Inch	20	99 ¹¹ / ₁₆
	mm	508	2532

Use the Flare architectural guide for information on the window size and opening:
<http://flarefireplaces.com/portfolio-items/flare-outdoor/>

FLARE

FIREPLACES

WEATHER-PROOF YOUR OUTDOOR KIT CAVITY

The outdoor window kit should be sealed with non-combustible tape, around the inner most flange, prior to covering it with brick or stucco. All non-combustible finishing material can come directly to the outer-most flange around the face of the fireplace. Creating that frameless appearance around your opening.



FIREPLACE BURNER DIMENSIONS


BURNER TYPE	SIZE (in)	FIREPLACE SIZE	# OF BURNERS
A	21 11/16"	30"	1
B	31 12/16"	45"	1
C	40 1/16"	50"	1
D	50 1/16" (14", 22", 14")	60"	3
E	59 15/16" (14", 32", 14")	70"	3
F	68 4/16" (14", 40", 14")	80"	3
G	84" (22", 40", 22")	100"	3

FLARE FIREPLACES


HOME AUTOMATION

A Flare Fireplace can be operated through an external source (See cautionary remark below) such as a smart home (home automation) system by using the 6- pin connector on the SIT receiver **X8 port** in place of the included Wall Switch. The existing Flare Fireplace wall switch cable must be used to connect the receiver to the home automation system. The existing Flare Fireplace wall switch cable can be located by removing the included Flare Fireplaces wall switch, exposing the wire provided, and replacing it with a dry contact On/Off relay controlled by the home automation system. The existing Flare Fireplace wall switch cable can be extended up to 100 FT for integration into a new or existing Home Automation System. **Please contact Flare Support for additional information on appropriate relays to be used.**

1. The included Flare Fireplaces Wall Switch Can be seen in the example below

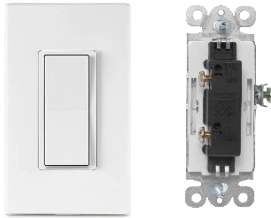


2. An example of the exposed wall switch with cables used to connect to dry contact On/Off relay can be seen below.

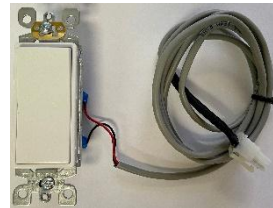

3. Remove the physical switch exposing your wires as seen below



4. Use exposed cables to connect your system to dry contact On/Off relay and tie into home automation or smart product.

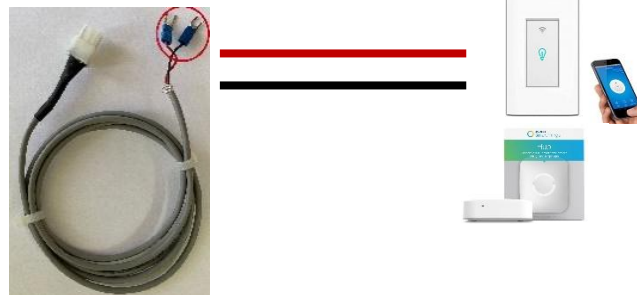

WARNING!

Do not control fireplace from outside of home using externally connected device. Only operate 3rd party application or home automation when you can physically see the fireplace turning on & off. It is not meant to operate without line of sight to fireplace.

FLARE FIREPLACES

ELECTRIC AND CONTROL


ELECTRIC DIAGRAM - SCREEN

X8: Wall Switch / Home Automation

X4: Closed Circuit (Jumper Present)

X3 and X2: Spark Ignitor and Sensor

X1: Power (Green : Ground, White : Common, Black : Line)

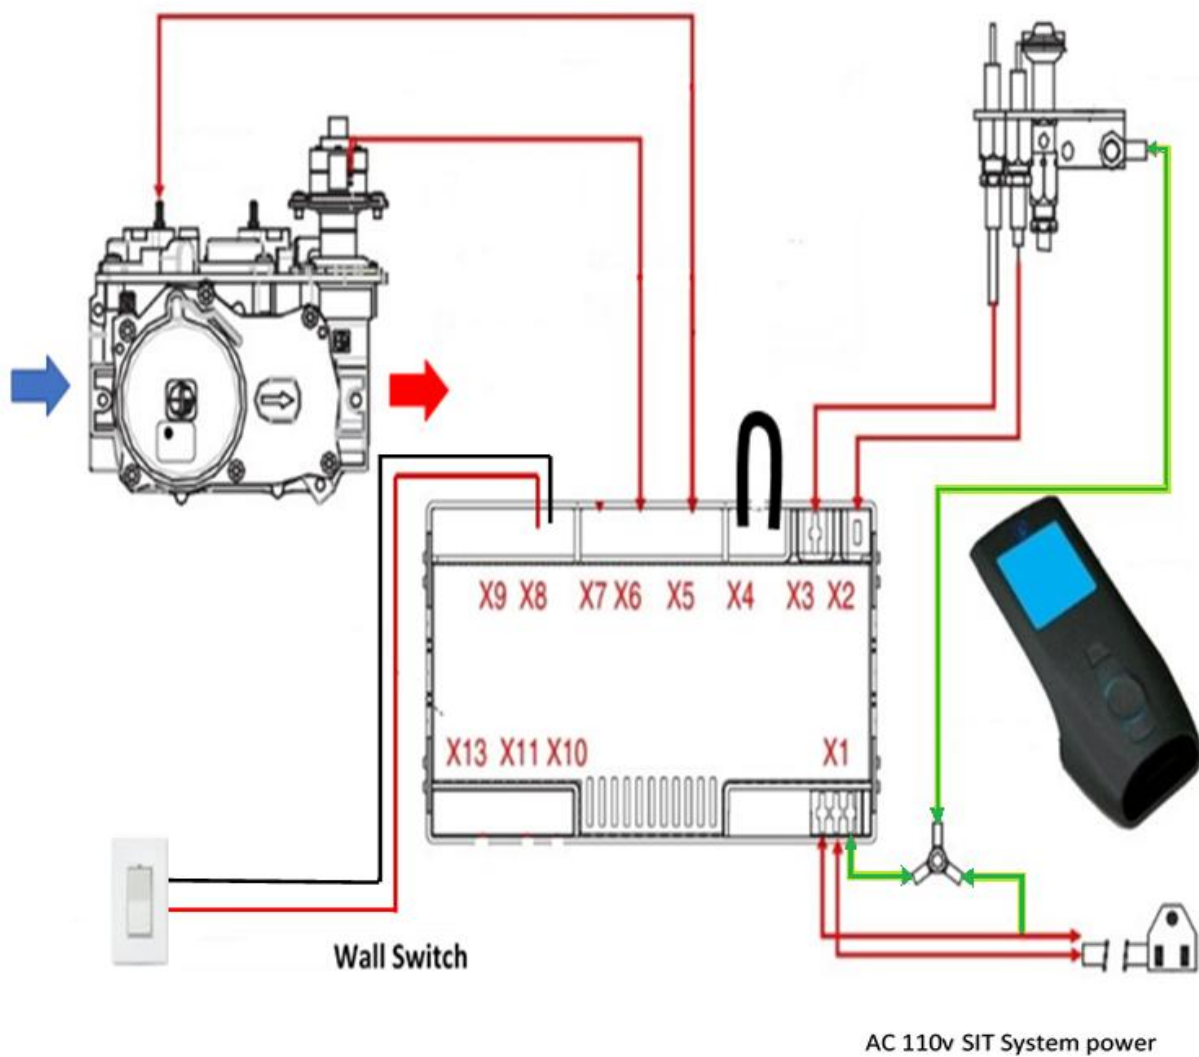

FLARE

FIREPLACES

SIT PROFLAME II DIAGRAM – DOUBLE GLASS AND POWER VENT


X13: Auxiliary used to open and close relay port on double glass board

X8: Wall Switch / Home Automation

X4: On/Off, controlled via Flare Control Board verification

X3 and X2: Spark Ignitor and Sensor


X1: Power (Green : Ground, White : Common, Black : Line)

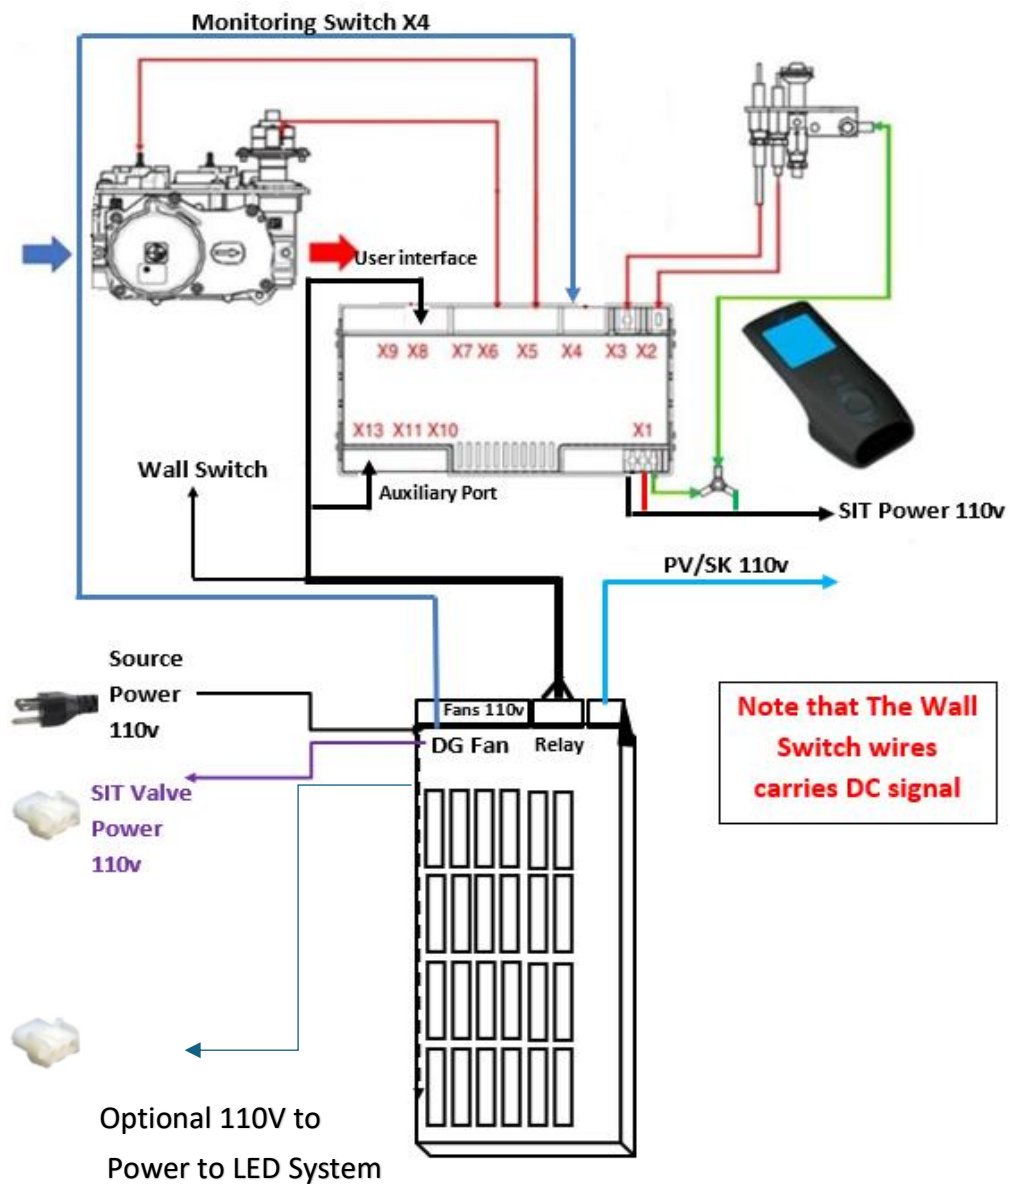

FLARE

FIREPLACES

DOUBLE GLASS BOARD & LED LIGHT GUIDE

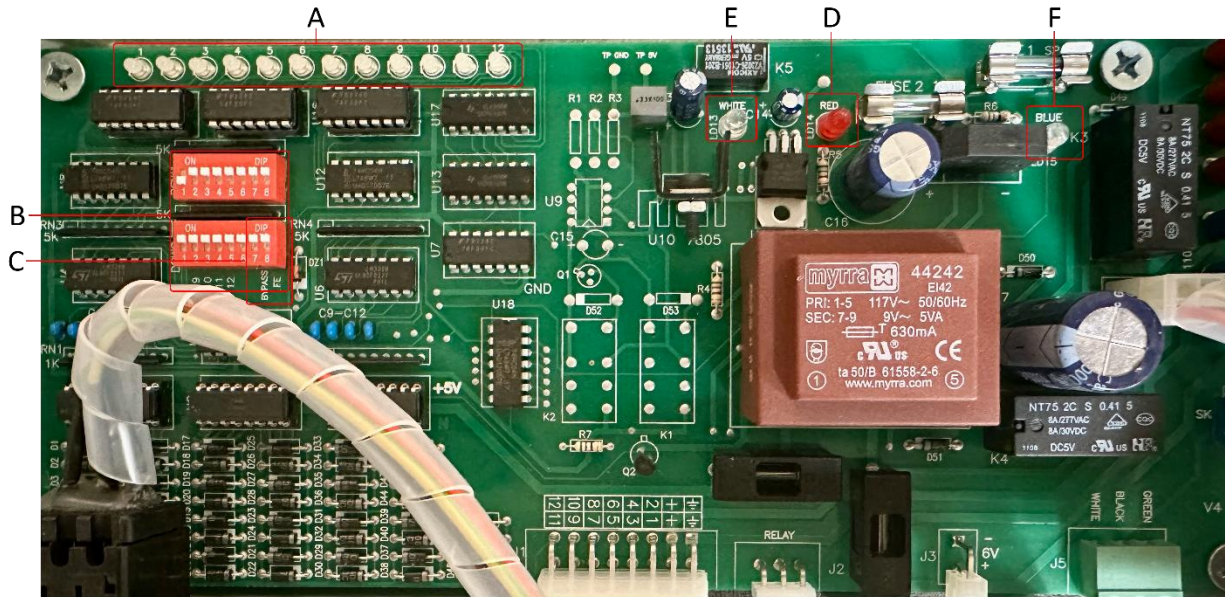


- A. **Double Glass Fan LEDs:** When fans are operating properly these LEDs will be green for each fan being monitored on the fireplace. When fans are failing to operate properly the LEDs will be amber.
- B. **Double Glass Fans Monitoring Dip-Switches:** These dip-switches will be off when monitoring double glass fans, and on when either a fan is not present or being bypassed for troubleshooting.
- C. **Fan Exhaust Monitoring Dip-Switches:**
 7. **Master Bypass Dip-Switch:** This will always be off unless being turned on to bypass for troubleshooting.
 8. **Power Vent Dip-Switch:** This switch will be off when a power vent is connected to the system, and on when a power vent is not present or being bypassed for troubleshooting.
- D. **Red Power LED:** This light will be on when the control board is getting 110V power, and only turns off when power is disconnected.
- E. **White Relay LED:** This light will be turned on when the units ignition process begins and a request for the double glass or power vent fans be turned on is made successfully.
- F. **Blue Power Vent LED:** The blue power vent LED only turns on when the power vent is properly powered and communicating with control board.

FLARE

FIREPLACES

ELECTRICAL DIAGRAM - POWER VENT SYSTEM

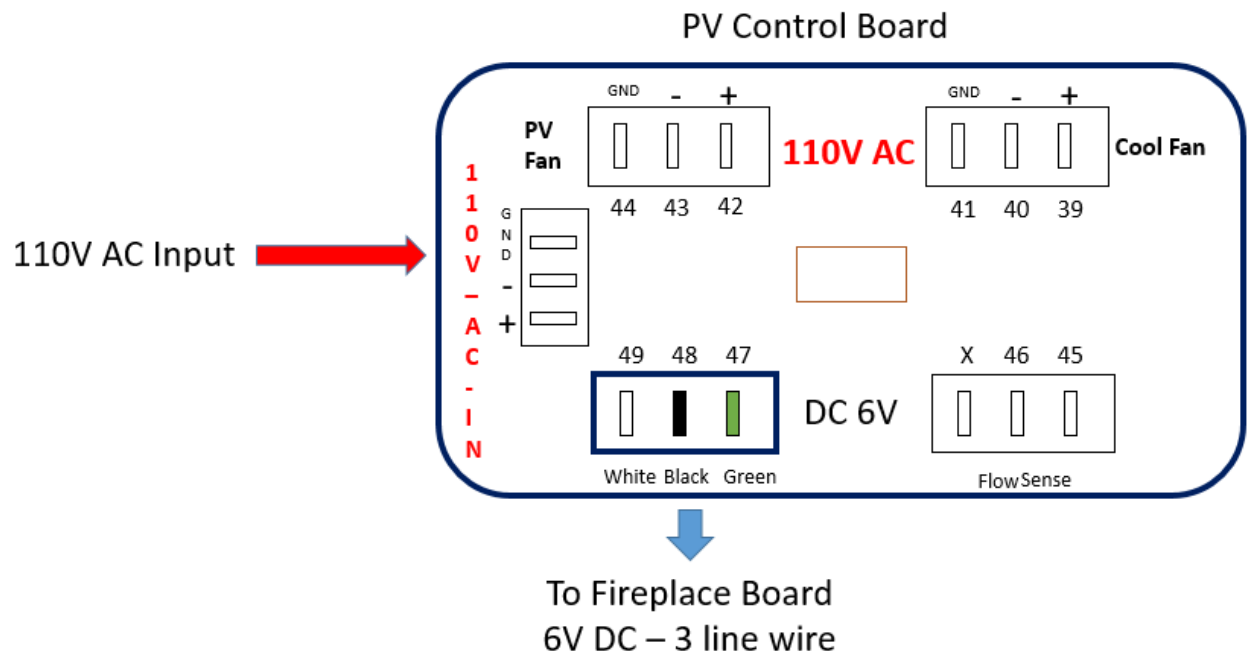

NOTICE!

Ports 49, 48, and 47 are connected to J6 on the fireplace control board.

FLARE

FIREPLACES

REPLACEMENT PARTS

See below for SIT ProFlame II replacement parts list. These are the most commonly used components a technician may need when working on the fireplace system.

- Please contact your local fireplace dealer to purchase replacement parts.
- Please provide description, part number, Part SKU, and Fireplace serial number.
- Please use a trained and certified technician for any fireplace related service.

PART NAME	DESCRIPTION	SKU
SIT-Full Gas System	Gas Valve System, Receiver, SIT Wiring	1SITCGS
SIT-Valve NG	Natural Gas Valve for SIT System	1SITGVNG
SIT-Valve LP	Liquid Propane Gas Valve for SIT System	1SITGVLP
SIT-Remote	Remote for SIT System	1SITREM
SIT-Receiver	Receiver for SIT System	1SITREC
SIT-Wall Switch X-8	Wall Switch for Screened SIT System	1SITWS
SIT-Data X-5 Cable	Data Cable for SIT System	1SITX5DC
SIT- Ground Cable	Ground Cable for SIT System	1SITGC
SIT-LED Control	Cable to control LED Lights with SIT Module	1SITRGBC
SIT-V4 Control Board	Main Control Board for SIT V4 System	1SITCBV4
SIT-V5 Control Board	Main Control Board for SIT V5 System	1SITCBV5
SIT-110 X-1 Cable With Molex	SIT Double Glass Wiring Harness with Molex	1SITX1-M
SIT- 110 X-1 Cable	SIT Screen Adapter Wiring Harness	1SITX1
SIT-Pilot Assembly NG	Natural Gas Pilot assembly for SIT System	1SITPANG
SIT-Pilot Assembly LP	Liquid Propane Pilot Assembly for SIT System	1SITPALP
SIT - Pilot Orifice NG	Natural Gas Pilot Orifice	STPORNG
SIT- Pilot Orifice LP	Liquid Propane Pilot Orifice	STPORLP
SIT-Spark Cable	Ignition Cable for SIT System	1SITSC
SIT - Thermocouple	Brass Thermocouple Fitting for GV60 Valve	1SITPTH
SIT - Pilot Gas Line	Metal Pilot Tube	1SITPPT
SIT-NG Motor	Natural Gas Motor for SIT Gas Valve	1SITNGMT
SIT-LP Motor	Liquid Propane Motor for SIT Gas Valve	1SITLPMT
SIT-Jumper x-4	Relay Jumper for SIT System	1SITJUMP
SIT-V5-V4	SIT V5 - V4 Fan Cable	1SITV5V4FAN
SIT-V4 DG Relay Kit and Wall Switch	Double Glass Relay Kit and Wall Switch for V4	1SITDGRL4
SIT-V5 DG Relay Kit and Wall Switch	Double Glass Relay Kit and Wall Switch for V5	1SITDGRL5
SIT Pilot Brass Compression Fitting	Brass Pilot Compression Fitting for SIT System	1SITBRASS
SIT Technicians Toolbox	Most Common Replacement Parts For The SIT	SITTOOLBOX

MAINTENANCE

WARNING!

- It's recommended that a qualified service technician perform a routine inspection at the beginning of each heating season.
- Disconnect power before attempting maintenance or repair of the fireplace.
- Installation and maintenance must be performed by an authorized qualified installer, service agency or gas supplier.
- Any safety screen or guard removed for servicing must be placed back before operating this appliance.
- Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the unit and to replace any part of the control system and any gas valve that has been under water or impacted.
- Any alteration to the product that causes soot or carbon to form and results in damage is not the responsibility of the manufacturer.
- Do not modify or substitute any part of this appliance.
- Inspect the external vent cap on a regular basis to make sure that no debris, plants, trees, or shrubs are interfering with the air flow.
- Do not operate the fireplace without the fireplace glass.
- It is imperative that control compartments, screens, or fans system for double glass be kept clean and free of obstructions. These areas provide the air necessary for safe operation.
- To light the heater using the built-in igniter, do not use matches or any other external device.
- Never remove, replace, modify, or substitute any part of the heater unless instructions are given in this manual. A trained technician must do all the other work. Do not modify or replace orifices.
- Fireplaces in commercial applications are used more frequently and may require more frequent maintenance.

FLARE

FIREPLACES

- Failure to inspect and maintain the fireplace may lead to improper combustion and a potentially dangerous situation. We recommend the following procedures be done by a qualified technician.

GLASS MAINTENANCE

- Always use suction cups to remove the fireplace glass.
- Use the manual procedure for instruction on how to remove the fireplace glass.
- Always use gloves when removing the glass to protect your hand and prevent fingerprints on the glass.
- Do not use abrasive cleaners on the glass panels.
- Do not attempt to clean the glass panels when they are hot.
- Do not use normal household (usually ammonia-based) glass cleaners to clean the glass as these cleaners can leave a permanent stain. Only a gas fireplace glass cleaner should be used.
- Verify no cracks or breakage in the glass.
- Place glass in a safe location to prevent breakage.
- Never attempt to operate the fireplace without the fireplace glass.

PILOT MAINTENANCE

- Visually inspect the pilot flame. The pilot flame should be always present when the fireplace is in operation.
- Make sure the pilot flame has two flame tips, one pointing to the flame sensor (thermocouple), and one to the center of the burner.
- Make sure the pilot area is clean from any dust, media or any other debris that may disrupt the operation of the ignition system. Lint or foreign material must be removed with a brush or vacuum.
- Verify fireplace ignition using the remote or wall switch. Verify electronic ignition, sparking sequence, pilot operation and burner ignition.

FLARE

FIREPLACES

BURNER MAINTENANCE

- The flames from the burner should be visually checked. The flame should have a blue base and yellow tops and be candle-like in appearance.
- If excessive soot is found inside the firebox area, the fireplace will require adjustment. Verify the air shutter and vent restrictor setting and document any changes.
- If the flame becomes sooty, dark orange in color, or extremely tall, do not operate the heater.
- Measure and document the fireplace gas pressure.

Inlet: _____ W.C.

Outlet: _____ W.C.

VENT MAINTENANCE

The following venting system inspection by a qualified service technician is recommended every six months:

- Inspect for excessive condensation, e.g., water droplets forming in the inner lining and subsequently dripping out of the joints. This can cause corrosion in the system.
- Check for corrosion in areas exposed to the elements. Where rust spots or holes have appeared, these must be immediately replaced.
- Ensure that there is no foreign material in the vents. Survey by removing the cap and shining a light down the vent.
- Check all joints and pipes to make sure that nothing has been disturbed or loosened.

FLARE FIREPLACES

DOUBLE GLASS FANS MAINTENANCE

- Disconnect power to the Flare control system.
- Remove the external glass and the covering trim.
- Inspect the fans around the Flare firebox and make sure they are all turning.
- Clean all fans with a brush and vacuum to remove any dust or debris.
- Inspect the lower fireplace intake. Clean the lower vent intake with a brush and vacuum any dust or debris.
- Connect back the Flare control power and press the Flare remote arrow down. Make sure all fans are working properly.
- Turn off the fans and install back the trim and glass.

FLARE FIREPLACES

MAINTENANCE LOG

The service technician should use the following document. A copy should be kept with the technician and owner for future reference.

Flare Fireplaces – Maintenance Log

Service Date: _____

Unit Information

Model Type and Size: _____ Serial #: _____

Owner Information

Name: _____

Address _____

Technician Information

Name: _____ Company Name _____

Technician NFI # _____

Service Information

Yearly Maintenance: _____

Other: _____

Details: _____

FLARE FIREPLACES

WARRANTY POLICY

Flare Fireplaces subjects every fireplace and component to rigorous testing to verify it is free from any defects before it leaves our warehouse. Flare Fireplaces photographs and documents the fireplace and all components' moments before shipping them to our nationwide network of authorized dealers for installation, verifying full operation of the fireplace and all components. Our factory is supervised by CSA and subject to the highest operating standards.

18 MONTH COMPREHENSIVE WARRANTY

Effective beginning 18 months from the **original date of purchase from an authorized Flare Fireplaces Dealer**, our Comprehensive Warranty includes replacing or repairing any defective electronic components. These parts include the following components

- Gas Valve
- Receiver
- Remote
- LED Lighting Strips, Remote, & Controller
- Authorized Media
- Wall Switch
- Summit Burner & Logs

This warranty does not apply to any component that shows evidence of misuse, abuse, improper installation, exposure to water or moisture, excessive heat, dust, or paint.

LIMITED 5 YEAR COVERAGE

Effective for five years from the **original date of purchase**, Flare Fireplaces Limited Five-Year Coverage includes replacing both ceramic and tempered glass.

This coverage is warrantable under the following circumstances:

- Thermal Breakage Only

This coverage is void if the glass is damaged due to construction, improper storage, pitting, transport, handling, or cleaning. This includes using ammonia or detergent based cleaning-solvents or solutions instead of lukewarm water and a lint free cloth. Other products may leave streaking or a honeycomb shaped stain on your fireplace glass.

FLARE FIREPLACES

LIMITED 10 YEAR COVERAGE

Limited Lifetime Coverage is extended to the following components:

- Firebox
- Burners

CONDITIONS

- **Warranty coverage begins on the date of original purchase.**
- Minor warping of certain components or discoloration is normal and is not considered a defect that is covered under this warranty. Major disruption and buckling of parts can be caused by over-firing of your fireplace. Over-firing above the rated value specified in the manual is contrary to the manufacturer's instructions and may void this warranty.
- All installations must be performed by a qualified technician in accordance with applicable local and national requirements.
- Installations must be done in accordance with the Flare Fireplaces installation manual. The Limited Warranty applies only if the product is installed in the United States or Canada and only if installed, operated, and maintained in accordance with the attached product manual.
- It is the responsibility of the installer to ensure the appliance is firing per the rating plate.
- Any part that is found in our judgment to be defective shall be repaired, replaced, or refunded at Flare Fireplaces' option.
- This warranty only covers appliances that are purchased through a Flare Fireplaces authorized dealer or distributor.
- The warranty is only valid while the appliance remains at the site of original installation.
- Flare Fireplaces does not install or provide installation services. The installation of the fireplaces must be done by an authorized installer. The fireplace limited warranty does not cover the installation service, or any part related to the installation of the fireplace or surrounding of the fireplace and venting.
- **Contact your dealer for a warranty service.** If the dealer is unable to provide necessary parts, contact the nearest Flare Fireplaces authorized dealer or supplier.

FLARE FIREPLACES

EXCLUSIONS

- This warranty does not apply to any component that shows evidence of misuse, abuse, improper installation, accident, or lack of maintenance.
- Flare Fireplaces is not responsible for televisions, mantels, surrounds or finishing material around the fireplace.
- Flare Fireplaces is not responsible for installation, operational or environmental conditions beyond our control.
- Flare Fireplaces shall in no event be liable for any special, indirect, or consequential damages of any nature which are more than the original purchase price of the product.
- Flare Fireplaces may at its discretion discharge all obligations by refunding the wholesale price of the defective part.
- This warranty may not be extended or modified by our dealers or representatives.
- The Limited Warranty only covers parts and labor as provided above. Flare Fireplaces will not be responsible for materials, components, or construction, which are not manufactured or supplied by Flare Fireplaces or for the labor necessary to install, repair or remove such materials, components, or construction.

WARRANTY VOID WHEN

- An unauthorized media type is used in the firebox.
- The appliance has been over-fired or operated in atmospheres contaminated by chlorine, fluorine, or other damaging chemicals. Over-firing can be identified by, but not limited to, warped plates or pipes, rust colored iron or bubbling, cracking and discoloration of steel or enamel finishes.
- The appliance is subjected to prolonged periods of moisture or condensation.
- There is any damage to the appliance or other components due to water or weather damage, which is the result of, but not limited to, improper chimney or venting installation.
- Holes have been drilled into the fireplace for some reason.