

FLARE


FIREPLACES

RECESSING TRADITIONAL UNIT INTO THE FLOOR

Recess a traditional fireplace into the floor by following these requirements.

1. Unit must use the screen as the safety barrier.
2. Floor/Hearth coming up to fireplace face must be non-combustible.
3. Included non-combustible cement board must be used under the fireplace.

Example 1:

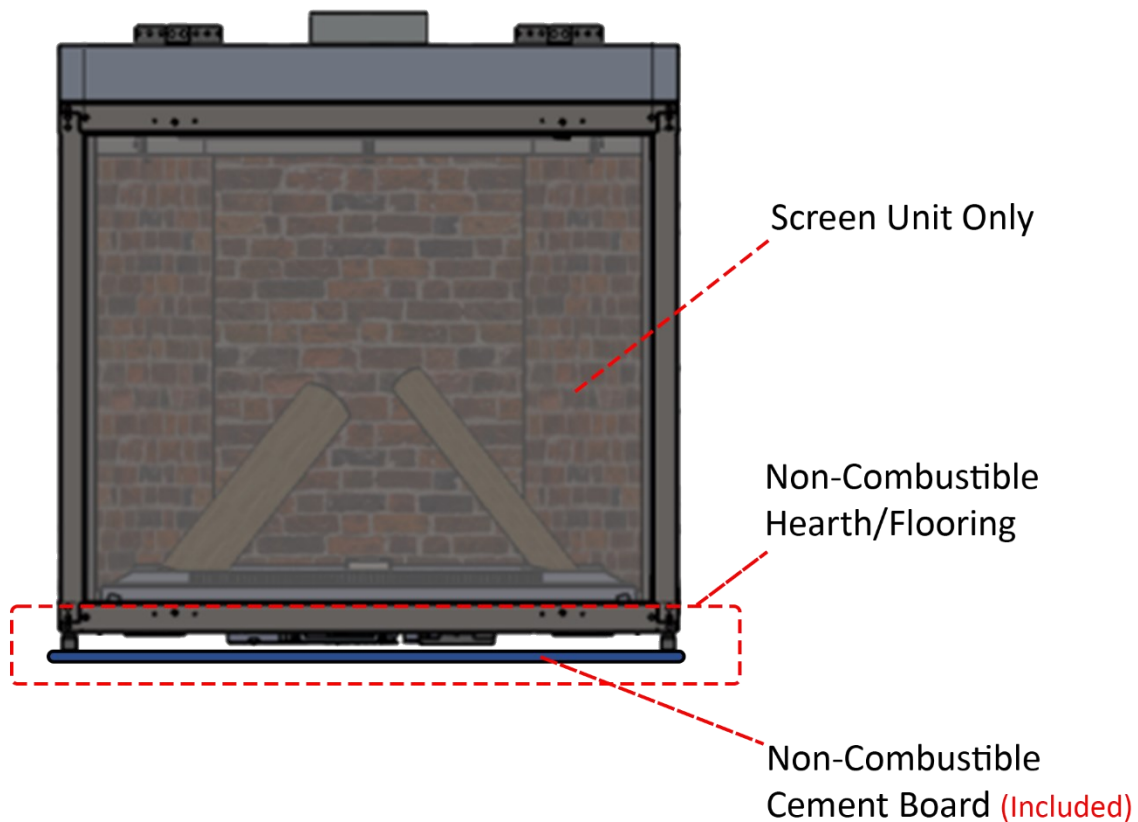

NOTE

Traditional built-in-access will allow for simple servicing of the fireplace components, regardless of recessing into the floor. Remove the safety barrier, filler piece, and pull components up and out to service on top of the burner.