


# FLARE FIREPLACES

## RECESSING TRADITIONAL UNIT INTO THE FLOOR

Recess a traditional fireplace into the floor by following these requirements.

1. Recess is possible with screened or cool glass configurations.
2. The cavity in which the unit is recessed must be made of non-combustible material
3. The unit must sit on included non-combustible cement board
4. If using cool glass safety barrier, fresh air from a conditioned space must come from below the fireplace.

Example 1:

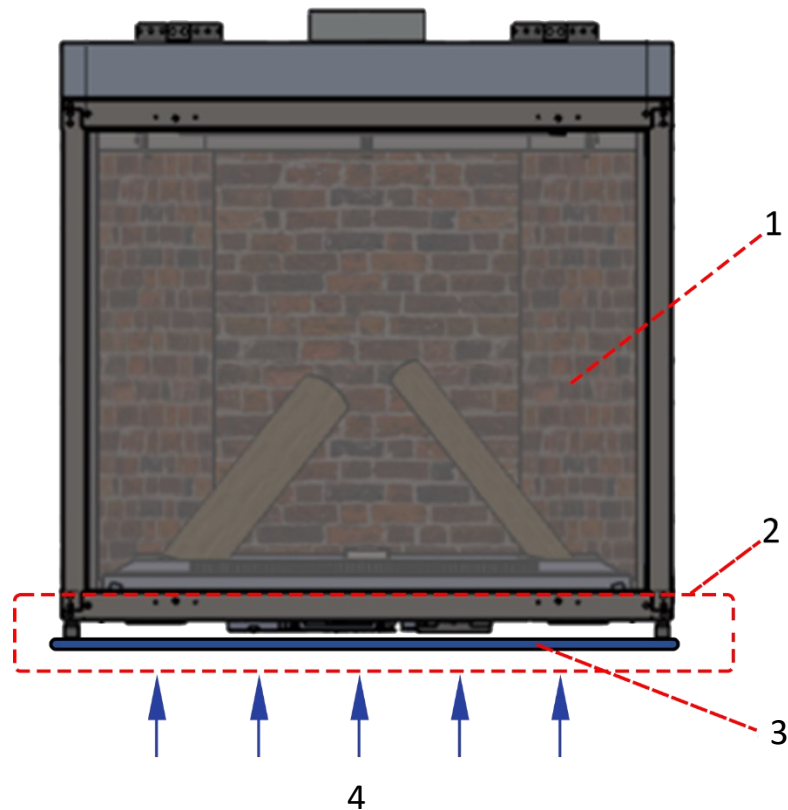

## NOTE

Traditional built-in-access will allow for simple servicing of the fireplace components, regardless of recessing into the floor. Remove the safety barrier, filler piece, and pull components up and out to service on top of the burner.

# FLARE

## FIREPLACES

### HEARTH CLEARANCES

1. Clearance to an **uncovered combustible hearth** below the glass is **2 inches**. As shown in **Example 2**.
2. When bringing your hearth to glass height it must be non-combustible for the first 7" extending from the glass before any combustible material can be used to finish the hearth. As shown in **Example 2**.

Example 2:

