



FLARE FIREPLACES

WARNING: If the information in these instructions are not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- WHAT TO DO IF YOU SMELL GAS
 - Do not try to light any appliance.
 - Do not touch any electrical switch; do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

NATIONAL
FIREPLACE
INSTITUTE



CERTIFIED
www.nficertified.org

We suggest that our gas hearth products be installed and serviced by professionals who are certified in the U.S. by the National Fireplace Institute® (NFI) as NFI Gas Specialists.



**HOT GLASS WILL
CAUSE BURNS.**

**DO NOT TOUCH GLASS
UNTIL COOLED.**

**NEVER ALLOW CHILDREN
TO TOUCH GLASS.**

A barrier designed to reduce the risk of burns from the hot viewing glass is provided with this appliance and shall be installed for the protection of children and other at-risk individuals.

NOTICE

INSTALLER: Leave this manual with the appliance.

CONSUMER: Retain this manual for future reference.

Installation and service of this appliance MUST be performed by qualified certified NFI personnel.

Massachusetts: The piping and final gas connection must be performed by a licensed plumber or gas fitter in the State of Massachusetts. Also, see Carbon Monoxide Requirements Detector requirements on page 55

TABLE OF CONTENTS

SAFETY INFO AND WARNINGS	3
FLARE FIREPLACES – FRAMELESS IN EVERY WAY	5
SAFETY.....	5
CSA CERTIFICATION	5
MANUAL MODEL LIST & INFORMATION	5
FLARE SUMMER KIT OVERVIEW	6
SUMMER KIT INSTRUCTIONS:.....	7
OPERATION	8
ELECTRICAL CONNECTION (DOUBLE GLASS).....	8
ELECTRICAL CHART FOR DOUBLE GLASS.....	9
ELECTRICAL CHART FOR SAFETY SCREEN- SIT	10
<i>Screen unit controlling Summer Kit- SIT ProFlame 2.....</i>	<i>10</i>
INDEPENDENT CONTROL.....	11
FLEX PIPE AND FIREPLACE COVER	11
VENTING.....	12
MEASUREMENTS & ACCESS.....	13
CLEARANCES.....	14
PARTS LIST.....	14
WARRANTY POLICY	15

SAFETY INFO AND WARNINGS

WARNING!

The direct vent system appliance must be installed as an OEM installation in manufactured homes (USA only) or an aftermarket permanently located, or a mobile home, where not prohibited by local codes and must be installed in accordance with Manufacturer's instructions and the Manufactured Home Construction and Safety Standard, Title 24 CFR, Part 3280, in the United States, or the Standard for Installation in Mobile Homes, CAN/CSA Z240 MH Series, in Canada.

This appliance is only for use with the type(s) of gas indicated on the rating plate. A conversion kit is supplied with the appliance.

This product is listed to ANSI standards for ANSI Z21.50b-2009 / CSA 2.22b-2009 Vented Gas Fireplaces CAN/CGA 2.17-M91 Gas-Fired Appliance for use at High Altitudes.

WARNING!

If the information in these instructions are not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

Installation and service must be performed by a qualified installer, service agency or the supplier.

WARNING!

NEVER LEAVE CHILDREN OR OTHER AT RISK INDIVIDUALS ALONE WITH THE APPLIANCE

WARNING!

Young children should be carefully supervised when they are in the same room as the appliance. Toddlers, young children and others may be susceptible to accidental contact burns. A physical barrier is recommended if there are at risk individuals in the house. To restrict access to a fireplace or stove, install an adjustable safety gate to keep toddlers, young children and other at-risk individuals out of the room and away from hot surfaces

WARNING!

Due to high temperatures, the appliance should be located out of traffic and away from furniture and draperies.

Children and adults should be alerted to the hazards of high surface temperature and should stay away to avoid burns or clothing ignition.

WARNING!

This appliance must be electrically wired and grounded in accordance with local codes or, in the absence of local codes, with National Electric Code ANSI/NFPA 70-latest edition or the Canadian Electric Code CSA C22.1.

A 110-120V AC circuit for this product must be protected with ground-fault circuit-interrupter protection, in compliance with the applicable electrical codes, when it is installed in locations such as in bathrooms or near sinks.

WARNING!

Proposition 65 Warning: Fuels used in gas, wood burning or oil-fired appliances, and the products of combustion of such fuels, contain chemicals known to the State of California to cause cancer, birth defects and other reproductive harm. California Health & Safety Code Sec. 25249.6. In the state of Massachusetts, only a licensed plumber and gas fitter may install this product. See note for the Commonwealth of Massachusetts



FLARE FIREPLACES – FRAMELESS IN EVERY WAY

Flare Fireplaces is where innovation, quality and luxury come together to form new ideas. By combining superior raw materials, contemporary design, creative technology and a frameless way of thinking, we have created a full line of direct-vent fireplaces that are luxurious, simple to operate and efficient. Our Fireplaces are distinguished by their clean design, superior build quality and unique features.

SAFETY

CSA CERTIFICATION

All our fireplaces are tested and have been certified to meet stringent guidelines, ensuring optimum quality, safety and efficiency.

MANUAL MODEL LIST & INFORMATION

The Following manual should be used for the following Flare Fireplaces Models:

- Flare Front 30-100 “
- Flare See-Through 30-100”
- Flare Corner Right & Left 30-100”
- Flare Double Corner 30-100”
- Flare Room Definer 45-100”

For ease of installation and operation, all above models share the same gas valve system and connection, remote, and glass type. This product meets **ANSI** standards for “Vented Gas Fireplace Heaters” and applicable sections of “Gas Burning Heating Appliances for Manufactured Homes and Recreational Vehicles” as well as “Gas Fired Appliances for Use at High Altitudes”.


Installation MUST comply with local, regional, state and national codes and regulations. Consult your insurance carrier, local building inspector, fire officials or other authorities with jurisdiction over restrictions, installation inspection and permits.

This installation must conform to local codes. In the absence of local codes, you must comply with the National Fuel Gas Code, ANSI Z223.1-latest edition in the U.S.A. and the CAN/CGA B149 Installation Codes in Canada.

Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. For assistance or additional information, consult a qualified service technician, service agency or your dealer.

FLARE SUMMER KIT OVERVIEW

The optional Summer Kit (SK) extracts heat from the chase, directing it outside rather than into your home. The inline system of fans allows the fireplace to operate without a significant increase in room temperature. The kit is perfect for commercial use in restaurant or hotels, but also for residential homes in warmer states. Operating the kit is as simple as flipping a switch and can be set up to come on automatically or controlled independently of your fireplace. It is also possible to connect the Summer Kit to a home automation system. The Flare SK system is designed to remove heat mostly from the top of the fireplace. The amount of radiant heat from the front of the fireplace is expected to be reduced but largely depends on the installation of a safety screen or double glass.

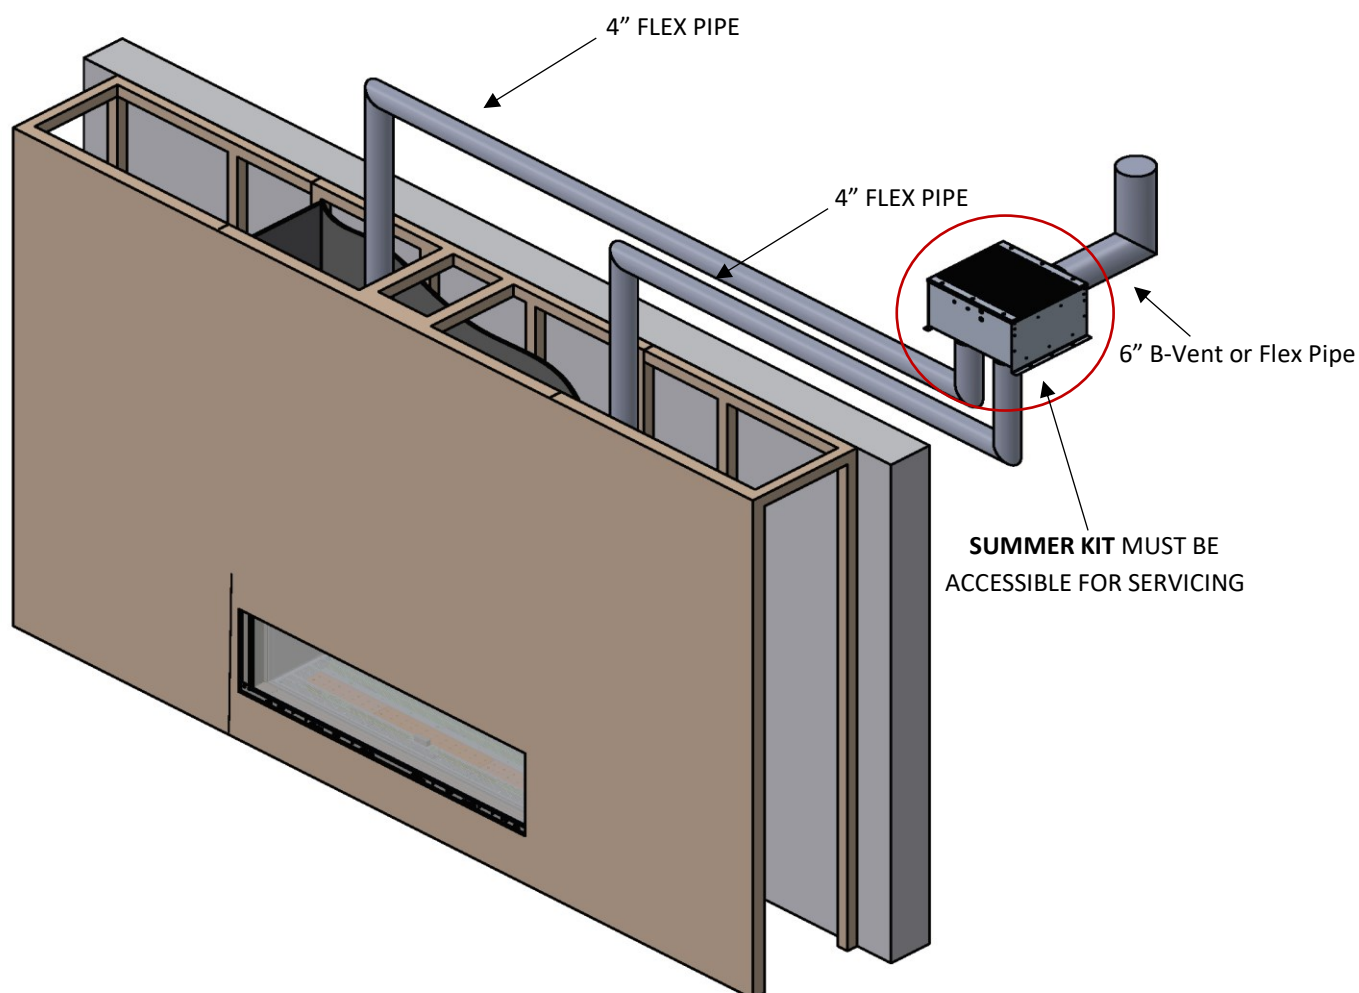

WARNING!

**PLACE SUMMER KIT OUTSIDE OF FIREPLACE CAVITY IN ADJACENT SPACE OR ATTIC.
PLACING IT INSIDE OF YOUR FIREPLACE CAVITY WILL OVER HEAT THE FAN CAUSING
LONG TERM DAMAGE.**


SUMMER KIT INSTRUCTIONS:

The Flare Summer Kit is an optional system that can be installed as part of the Flare overall heating and aesthetic solution.

NOTE: The Flare SK system does not change fireplace clearances or heat release requirements as detailed in the Flare installation manual.

Installation requirements and considerations:

- The Flare SK system needs to be installed a minimum of 4 feet away (inlet vent) from the fireplace.
- Overall vent length should not exceed 80 feet.
- SK system should be installed in an accessible space in case service to the unit is needed.
- It is not recommended to install the SK system above the fireplace, inside the chase, due to heat released from the fireplace.
- A 10A 110V outlet may be needed. See power requirements for details.
- The SK system is connected to the fireplace with a high voltage wire. The type of wire that should be used is a minimum of 16-gauge stranded copper wire
- The kit is designed to remove heat from the chase and has a limited impact on radiant heat released from the fireplace glass.
Radiant heat from the front depends on a safety screen or double glass.
- The Flare SK system is designed for indoor use

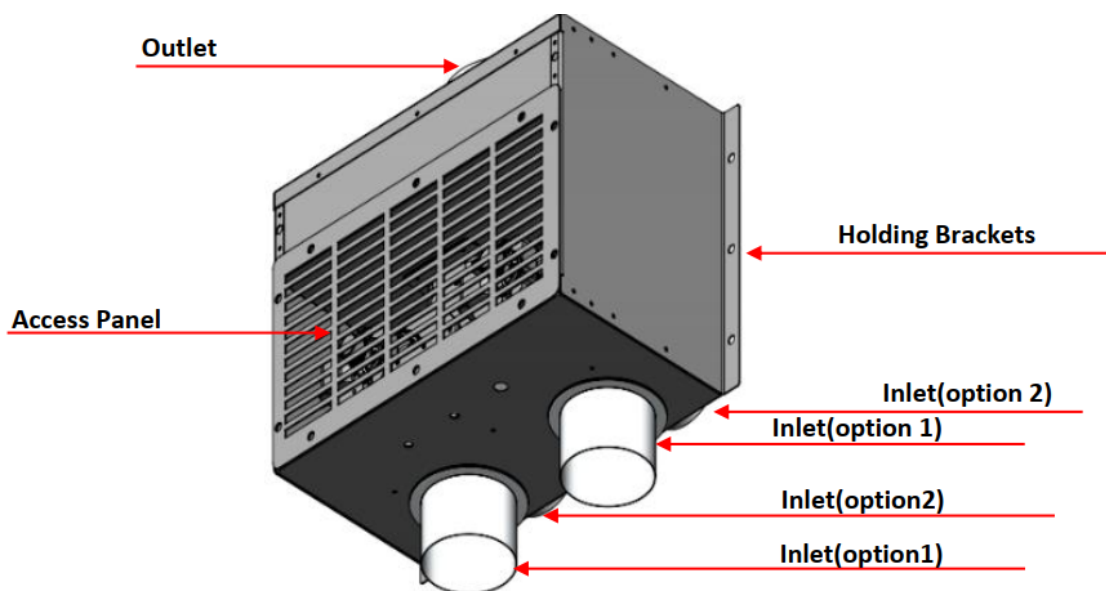

Summer vent unit must be installed by a qualified installer in accordance with these instructions.

CAUTION! Failure to install, operate, and maintain the power venting system in accordance with manufacturer's instructions will result in conditions which may produce bodily injury and/or property damage.

The Flare SK system does not change the fireplace clearances requirements or heat release requirements as are detailed in the Flare Fireplace installation manual.

OPERATION


The Flare SK is designed to operate with any of the Flare Fireplaces in the following way:

- The fan starts from a 110V signal from the fireplace sent over a high-voltage, 3-wire cable.
- The system is set to turn on and off with the fireplace every time.
- The Summer Kit can be connected to a 110V power outlet which can be controlled by an independent switch, wireless remote, or home automation system. This allows the user to disable the system during winter or when heat is desired

ELECTRICAL CONNECTION (DOUBLE GLASS)


The SK system is fan system and requires the following electrical connections:

- 3 wire 110v AC line connected from the SK unit to the fireplace control Board.
- SK unit will start When Fireplace is started, 110V AC is sent over the wire to start the fan. Fan will start. Once Fireplace is turned off, SK will shutoff automatically.
- By Default: SK System is wired to Double Glass board to operate when fireplace is powered

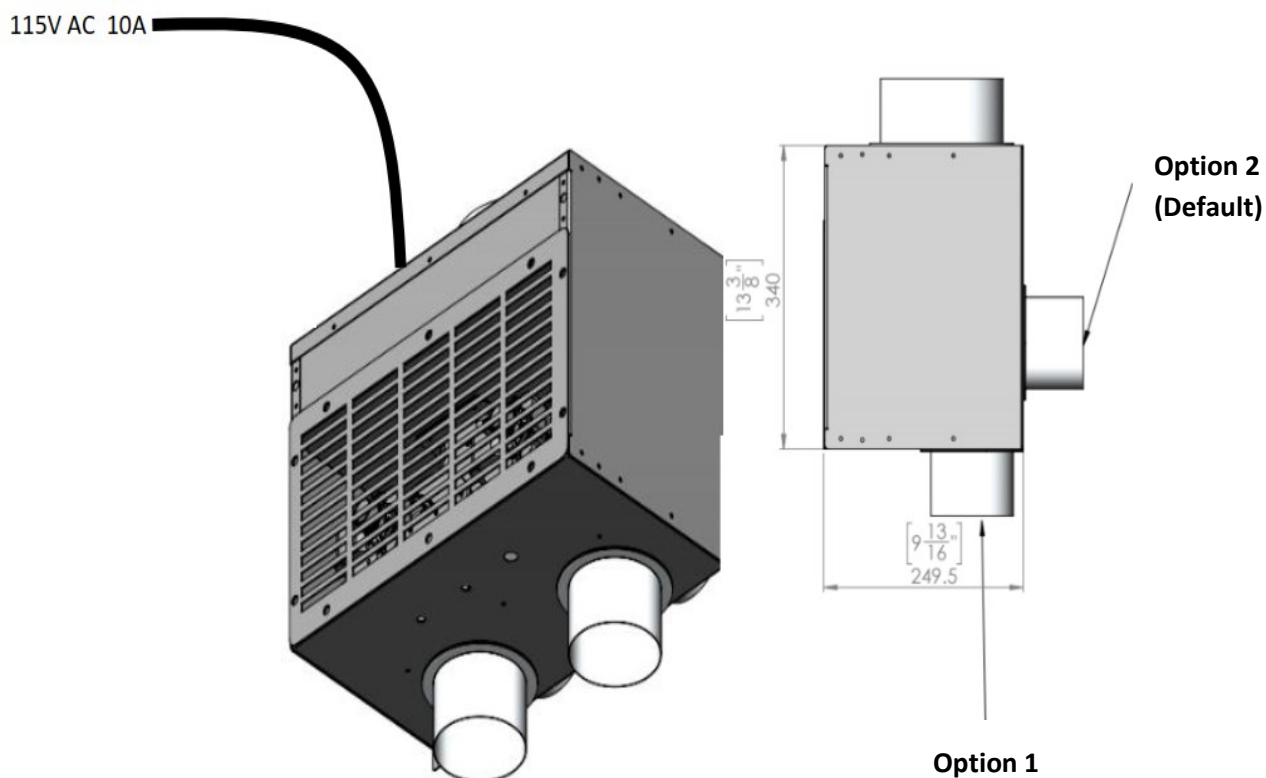


ELECTRICAL CHART FOR DOUBLE GLASS

When using Flare Double Glass or Power vent system, the SK will connect to the Flare electrical board using a three-wire cable AC 110v. Make sure to match the white, black and green wires.

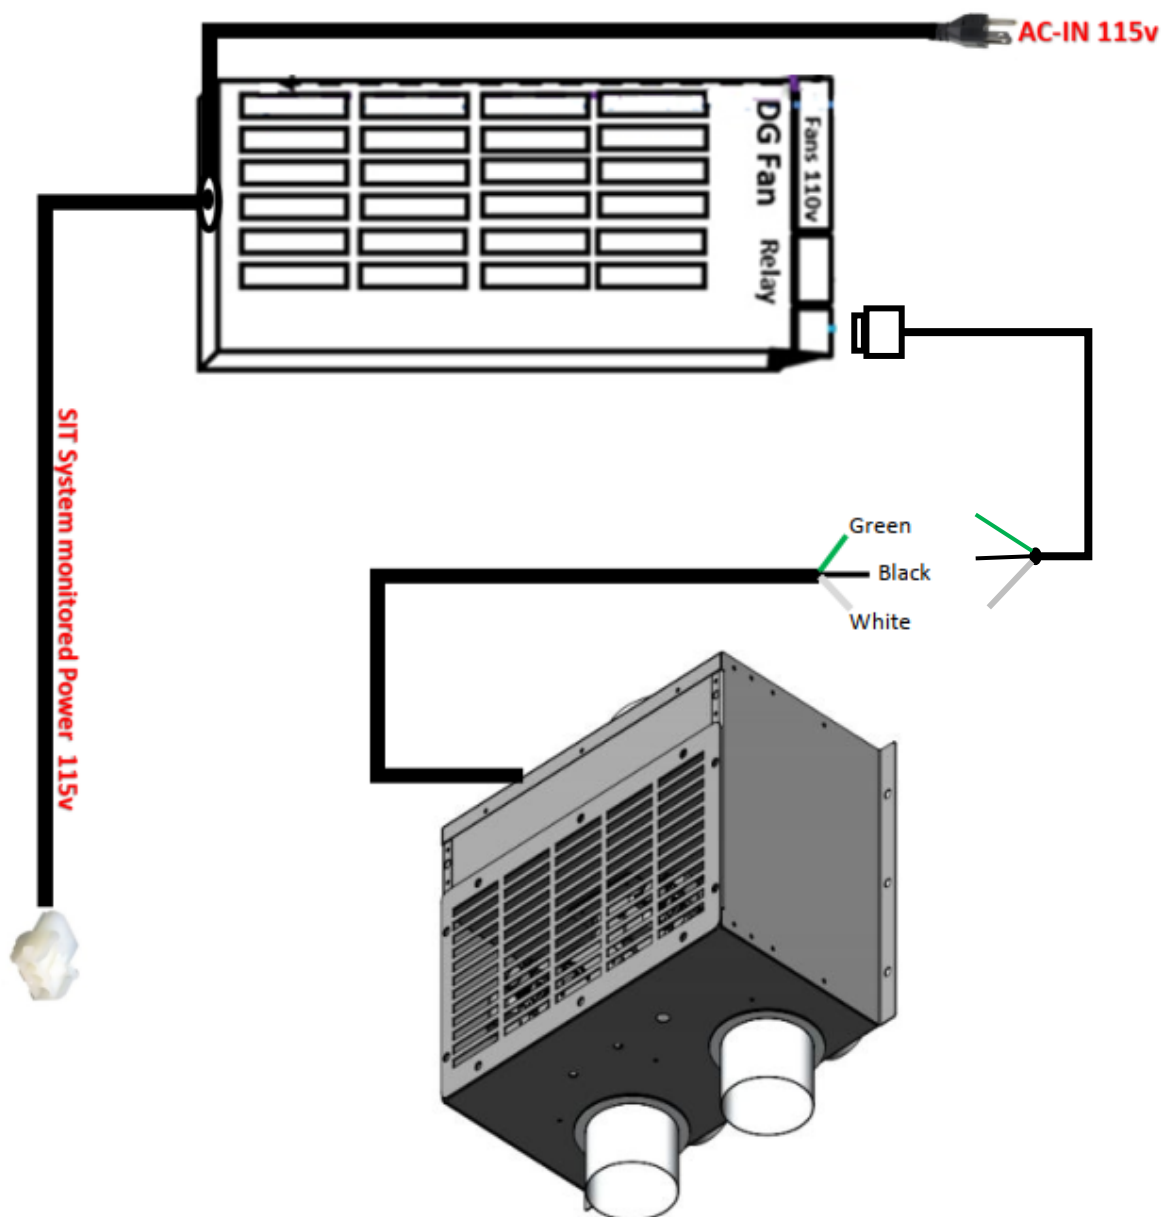

ELECTRICAL CHART FOR SAFETY SCREEN - SIT


In case of safety screen, the SK unit should be connected through electronic board (called **3SK Board**) with the SIT receiver the following diagram describing the connection between the SIT system and the SK unit.

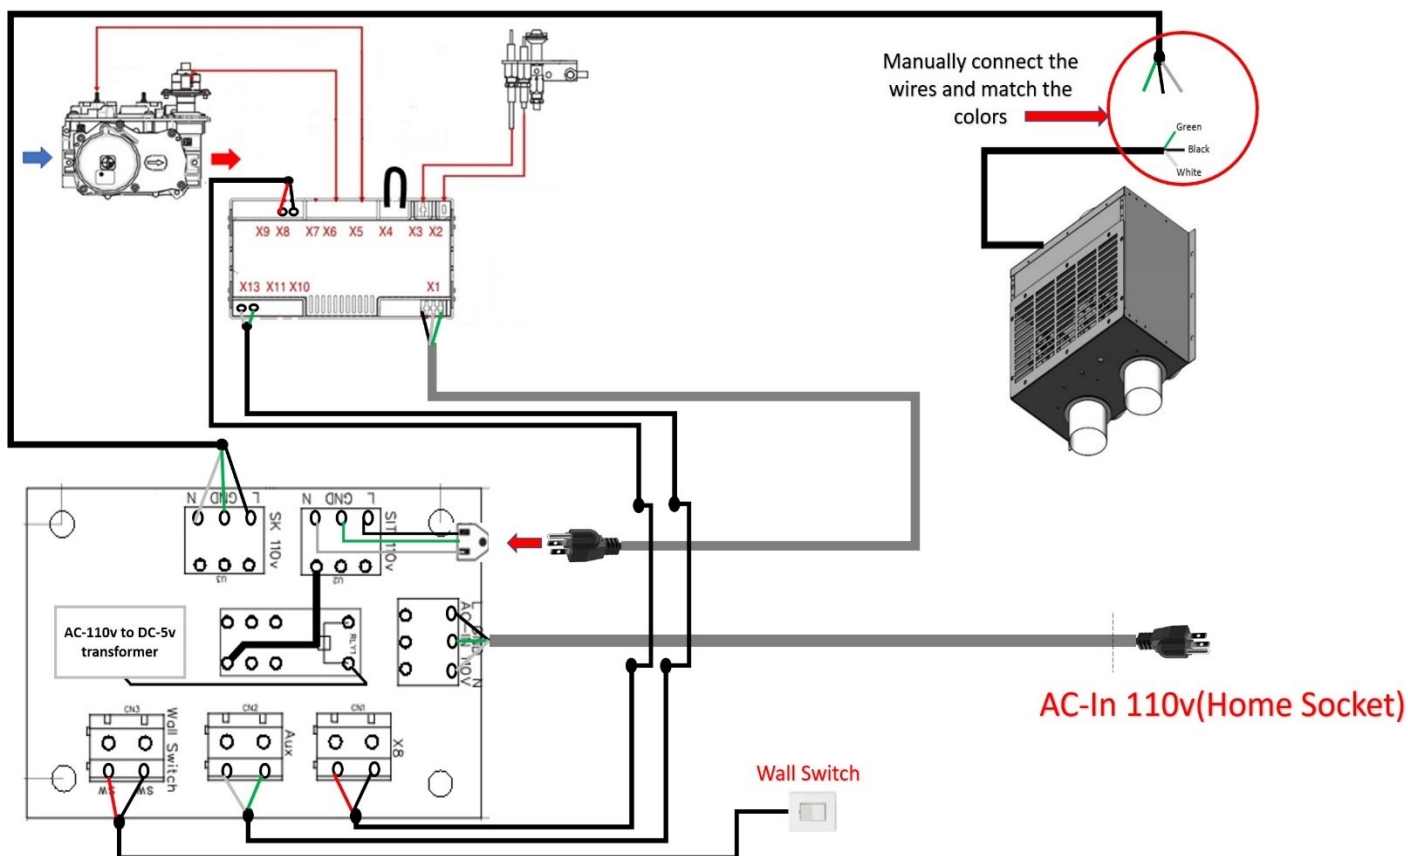

SCREEN UNIT CONTROLLING SUMMER KIT - SIT PROFLAME 2

The SIT ProFlame 2 Valve can will be wired with the Summer Kit and allows the Aux (port 13) function to control the Summer Kit. To activate the Summer Kit, press the mode Key until the Aux icon appears on the remote. Press the up-arrow key to turn the summer kit on and show the command 'ON' on the SIT ProFlame 2 handset. Press the down arrow to turn the summer kit off and show the command 'OFF' on the SIT ProFlame 2 handset. A single beep will confirm the reception of the command. See the following figure that shown the activation and deactivation process.

Note that: controlling the SK unit can be activated only if the fireplace has been turned on using the remote control, in this case the SK can be activated or deactivated using Aux function as shown in the picture.

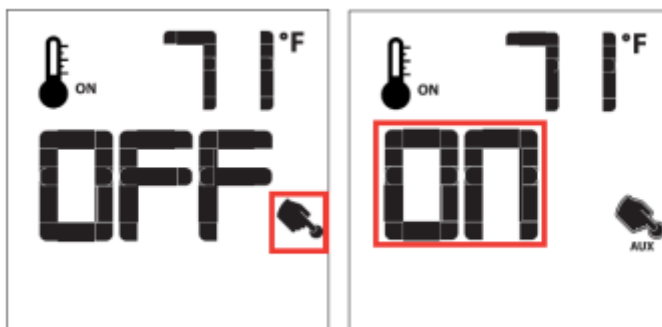

INDEPENDENT CONTROL

- SK unit can be connected to 110V. Wall switch or Smart outlet/ Remote /Electrical wiring to start/stop the SK whenever desired.
- No connection between the fireplace and the SK. Fans are connected directly to power source through wall switch.

SK control is in the hand of the operator using the Remote/Smart outlet or electrical wiring. Fan can be started at any time independent of the fireplace operation. SK will operate just like a kitchen vent with wall switch control.

Please note, Flare Fireplaces recommends an Electrician wire a switch to control the power source responsible for running the Summer Kit and mounting it somewhere readily accessible for end client.

FLEX PIPE AND FIREPLACE COVER

When installing a Summer Kit on a Flare unit, the fireplace will ship with a metal covering for your connectors. The cover can be attached to the unit or set on top in your shipping crate.




VENTING

The Flare SK system is designed only to vent heat out of the fireplace chase. The system can be connected with flex pipe, air ducts or metal vents. It is designed to work with standard ductwork systems as well as DuraVent DuraFlex Aluminum flex pipe (**PART NUMBER : 4DFA-25**). See the following links for more details on the duct system:

<https://duravent.com/duraflex-aluminum/>


Inlet:

Two Default 4-inch flex lines to the firebox located on the side. Alternate Option of two 4-inch flex lines from the bottom. Use the collar adapter provided with the kit to connect the 4-inch vent to the fireplace. Make sure only two of the vent openings on the firebox are connected to the Summer Kit. All other opening should remain open.

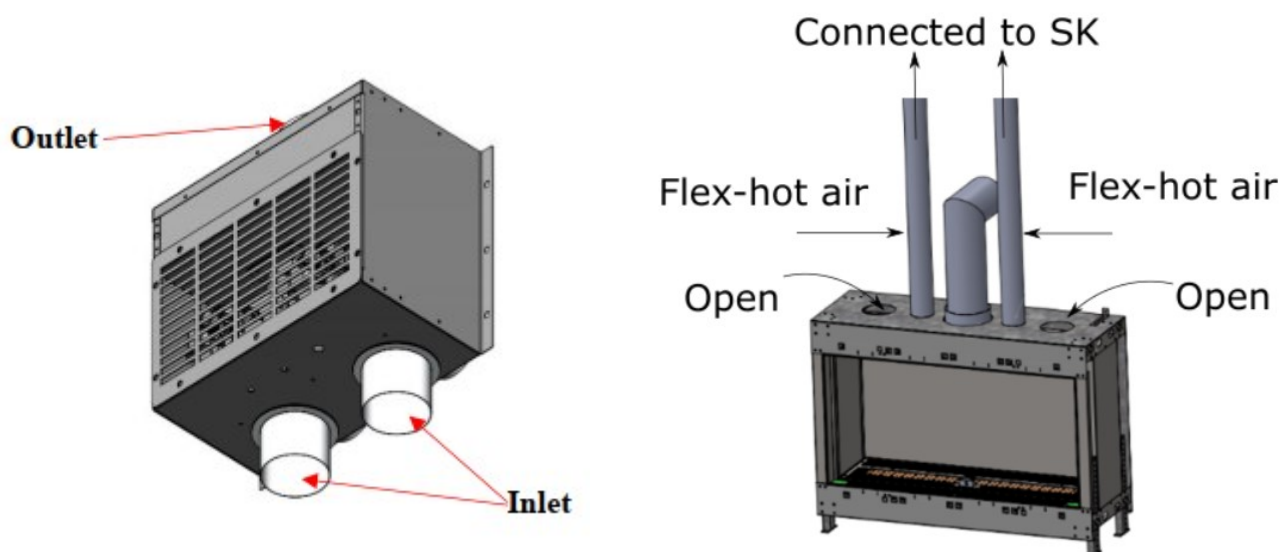


MAKE SURE ROUNDED OPENINGS ON STEEL PANEL THAT ARE NOT CONNECTED TO SUMMER KIT ARE LEFT FREE OF OBSTRUCTION.

Outlet: 6-inch flex line from the SK to the outside using a wall termination. Use the standard 6-inch wall termination as sourced from a local home improvement store or HVAC Supplier.

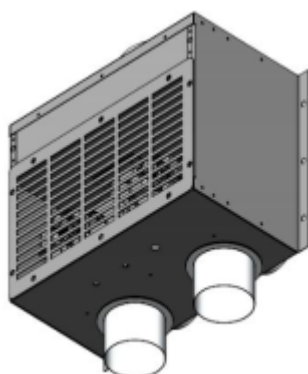

MEASUREMENTS & ACCESS

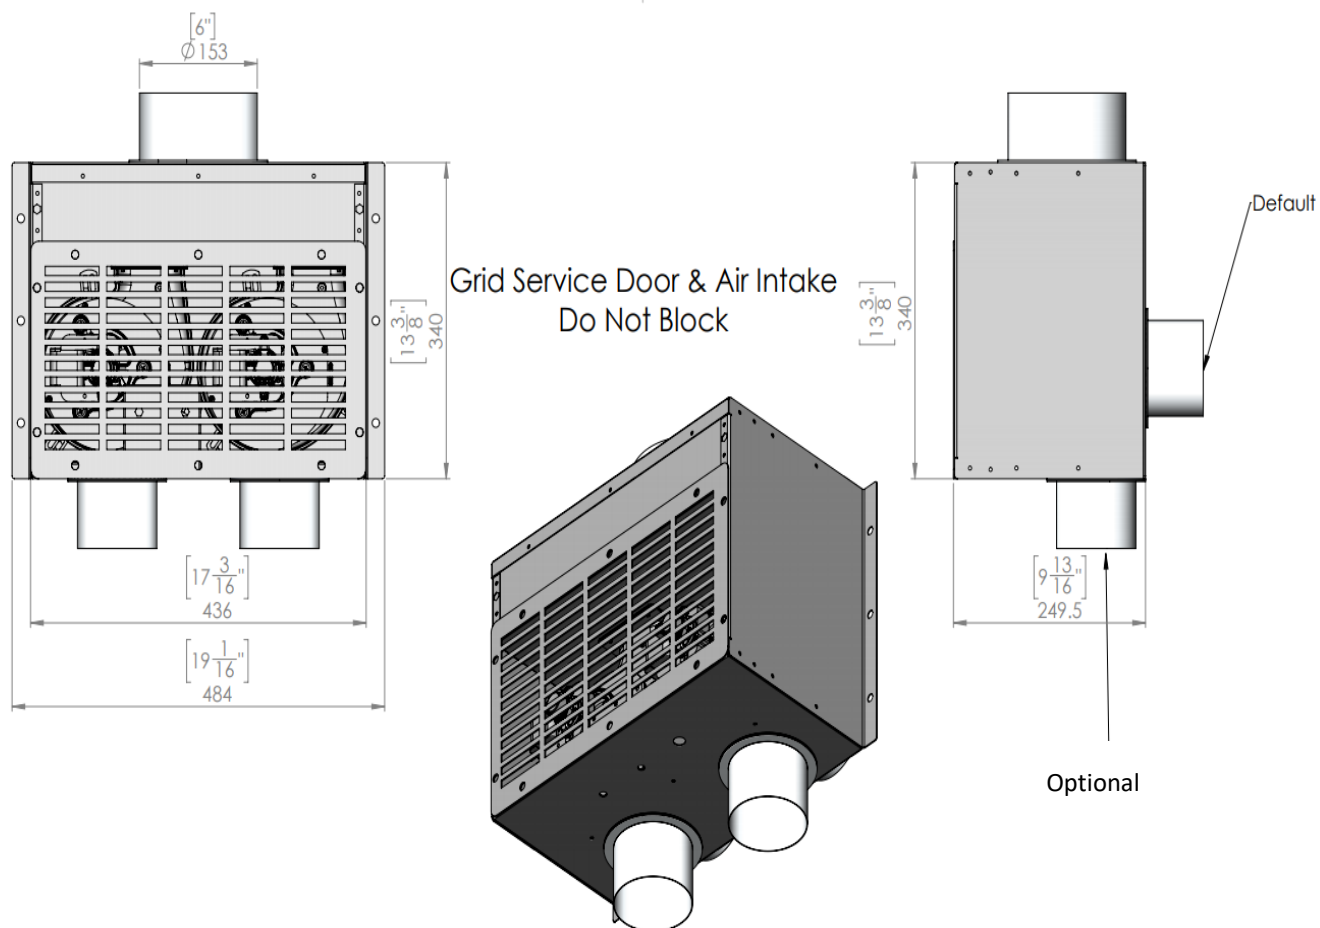

Download the Flare Summer Kit Chart or CAD File:

[Flare Fireplaces Summer Kit -PDF](#)

[Flare Fireplaces Summer Kit- CAD](#)

CLEARANCES

- Clearances from the Summer Kit box to combustible material is 1 inch.
- The SK system can be mounted on wood studs.
- The SK must be installed with a flex line or B-vent and wall termination to the outside from the outlet on the box.
- Clearance to secondary termination pipe must be at least 24".
- SK Vent Termination clearance is 12" above the floor.

PARTS LIST

INCLUDED IN SUMMER KIT:

1. Summer Kit Fan Box with Fans & Vent Adapter on Fan (2X4" Inlet, 6" Outlet)
2. Summer Kit 110v AC 3 wires
3. Relay System (Safety Screen Only)
4. Two 4" Collars on Fireplace

NOT INCLUDED IN KIT: *Source Parts From a local home improvement store or HVAC Supplier

1. *16 AWG-3 Wire cable connected between the fireplace and the SK unit. (cable length depends on the distance between the fireplace and the SK unit)
2. Flex Pipe from Fireplace to Summer Kit ([DuraFlex](#))
3. *Ductwork from Summer Kit to Termination Point
4. *Vent Termination (4" or 6")



WARRANTY POLICY

Flare Fireplaces take extreme measures to assure all products are tested and verified and are free from defects prior to leaving our warehouse. Our Factory is subject to high quality standard and is under the supervision of the CSA organization.

Flare Fireplaces Warranty Information:

- 1-year Limited Warranty on the gas valve, remote, pilot burner assembly, electric components and fan motors, interior decorative media.
- 5-year Limited Warranty for Ceramic glass (thermal breakage only)
- 10-year Limited warranty on the firebox and burners

Flare warranty shall be effective only if the original purchaser of the fireplace appliance is registered with Flare Fireplaces within thirty days of the date of purchase. Minor warping of certain parts or discoloration is normal and is not considered a defect that is covered by this warranty. Major disruption and buckling of parts can be caused by over-firing of your Fireplace. Over-firing above rated value specified in the manual is contrary to the manufacturer's instructions and may void this warranty. All installations must be performed by a qualified technician in accordance with applicable local and national requirements. Installations must be done in accordance with the appliance manual. The Limited Warranty applies only if the product is installed in the United States or Canada and only if installed, operated and maintained in accordance the attached product manual. Warranty coverage begins on the date of original purchase. It is the responsibility of the installer to ensure the appliance is firing as per the rating plate. Any part that is found in our judgment to be defective shall be repaired, replaced or refunded at Flare Fireplaces option. This warranty only covers Flare Fireplaces appliances that are purchased through a Flare Fireplace authorized dealer or distributor. The warranty is only valid while the Flare Fireplace appliance remains at the site of original installation. Contact your installing dealer for warranty service. If the installing dealer is unable to provide necessary parts, contact the nearest Flare Fireplaces authorized dealer or supplier.

This Warranty Is Void If:

Use of an unauthorized type of media in the firebox. The appliance has been over-fired or operated in atmospheres contaminated by chlorine, fluorine, or other damaging chemicals. Over-firing can be identified by, but not limited to, warped plates or tubes, rust colored cast iron, bubbling, cracking and discoloration of steel or enamel finishes. The appliance is subjected to prolonged periods of dampness or condensation. There is any damage to the appliance or other components due to water or weather damage, which is the result of, but not limited to, improper chimney or venting installation. Holes have been drilled into the fireplace for any reason. **If the installation of a Flare fireplace or any of its components isn't done by an NFI certified Installer or Flare Certified Installer this warranty is void.**

Exclusions:

This warranty does not apply to any component that shows evidence of misuse, abuse, improper installation, accident or lack of maintenance. Flare Fireplaces is not responsible for televisions, mantles, surrounds or finishing material around the fireplace. Flare Fireplaces is a fireplace manufacturer and does not install any fireplaces. Flare Fireplaces does not warranty any fireplace installation. Issues with installation should be addressed with builder, reseller and/or fireplace installer. Flare Fireplaces may at its discretion discharge all obligations by refunding the wholesale price of the defective part. The Limited Warranty covers only parts and labor as provided above. Flare Fireplaces will not be responsible for materials, components or construction, which are not manufactured or supplied by Flare Fireplaces or for the labor necessary to install, repair or remove such materials, components or construction.